

Vizio XRT136

Vizio XRT136 Remote Control User Manual

INTRODUCTION

This manual provides comprehensive instructions for the Vizio XRT136 Remote Control. It covers setup, basic operation, and troubleshooting to ensure optimal use of your Vizio television and integrated streaming services. Please read this manual thoroughly before using your remote control.

PRODUCT OVERVIEW

The Vizio XRT136 remote control is designed for intuitive navigation and quick access to popular streaming applications. Below is an image of the remote with a description of its key features.



Image Description: A black Vizio XRT136 remote control, viewed from the front. The remote features a standard layout with a power button, input selection, dedicated hotkeys for Vudu, Netflix, Prime Video, Xumo, Hulu, and iHeartRadio. Below these are navigation buttons (up, down, left, right, OK), and function buttons like Exit, Menu, Back, and Info. Further down are volume and channel controls, a mute button, closed captioning (CC), a home button (WatchFree), and a numeric keypad. The Vizio logo is visible at the bottom.

Button Functions:

- **Power ()**: Turns the television on or off.
- **INPUT**: Cycles through available input sources (HDMI 1, HDMI 2, AV, etc.).
- **Hotkeys (VUDU, NETFLIX, Prime Video, XUMO, HULU, iHeartRADIO)**: Provides direct access to the respective streaming applications.
- **Navigation Pad (▲ ▼ ◀ ▶)**: Used to move the cursor or selection within menus.
- **OK**: Confirms a selection or enters a menu.
- **EXIT**: Exits the current menu or application.
- **MENU**: Opens the main television menu.
- **BACK**: Returns to the previous screen or menu.
- **INFO**: Displays information about the current program or input.
- **VOL (+/-)**: Increases or decreases the volume.
- **CH (+/-)**: Changes the television channel.
- **Mute ()**: Mutes or unmutes the television audio.
- **CC (Closed Caption)**: Toggles closed captions on or off.
- **Home (△ / WatchFree)**: Accesses the Vizio SmartCast home screen or the WatchFree+ service.
- **Numeric Keypad (0-9)**: Directly enters channel numbers.
- **PIC (Picture Mode)**: Cycles through various picture modes (e.g., Standard, Vivid, Calibrated).

SETUP

1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards and remove it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery cover by sliding it back into place until it clicks securely.

2. Initial Use

The Vizio XRT136 remote control is typically pre-programmed to work with compatible Vizio televisions. No additional pairing or programming is usually required. Simply point the remote at your Vizio TV and begin operation.

OPERATING INSTRUCTIONS

Basic TV Control

- **Power On/Off**: Press the **Power** button once.
- **Adjust Volume**: Use the **VOL +** button to increase volume and **VOL -** to decrease.
- **Change Channel**: Use the **CH +** button to go to the next channel and **CH -** to go to the previous. Alternatively, use the numeric keypad to enter a channel number directly.
- **Select Input**: Press the **INPUT** button repeatedly to cycle through available input sources until your desired source is selected.

Using Streaming Hotkeys

To quickly launch a streaming application, simply press the corresponding hotkey button (VUDU, NETFLIX, Prime Video, XUMO, HULU, iHeartRADIO). Ensure your Vizio TV is connected to the internet for these features to function.

Navigating Menus

- Press the **MENU** button to access the television's main settings.
- Use the **Navigation Pad** (up, down, left, right arrows) to move through menu options.
- Press the **OK** button to select an option or confirm a setting.
- Use the **BACK** button to return to the previous menu level.
- Press the **EXIT** button to close all menus and return to normal viewing.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly inserted batteries. Obstruction between remote and TV. Remote out of range.	Replace batteries with new AAA batteries, ensuring correct polarity. Remove any objects blocking the line of sight between the remote and the TV's IR sensor. Move closer to the television.
Specific buttons not working.	Button stuck or damaged.	Gently press the button multiple times to dislodge any debris. If the remote is damaged, consider replacement.
Streaming hotkeys not launching apps.	TV not connected to the internet. App not installed or updated.	Verify your Vizio TV's internet connection in the network settings. Ensure the streaming apps are installed and updated on your Vizio SmartCast platform.

SPECIFICATIONS

- **Model Number:** XRT136
- **Brand:** Vizio
- **Color:** Black
- **Compatible Devices:** Vizio Televisions, Streaming Devices (Vizio SmartCast)
- **Max Number of Supported Devices:** 1
- **Special Feature:** Ergonomic design, Dedicated Streaming Hotkeys
- **Power Source:** 2 x AAA Batteries (not included)
- **Dimensions:** 6.69 x 1.77 x 0.74 inches
- **Item Weight:** 2.39 ounces



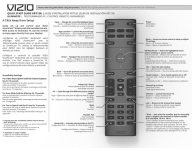



WARRANTY AND SUPPORT

For warranty information or technical support regarding your Vizio XRT136 Remote Control, please refer to the documentation provided with your Vizio television or visit the official Vizio support website. As this product may be a renewed item, specific warranty terms may vary. Please consult your retailer for details on renewed product warranties.

For general Vizio support, you can typically find contact information and FAQs on the Vizio website:

support.vizio.com

Related Documents - XRT136

	<p>VIZIO VBR337 3D Blu-ray Player User Manual</p> <p>User manual for the VIZIO VBR337 3D Blu-ray Player with Wireless Internet Apps. Learn about setup, operation, settings, internet apps, troubleshooting, and specifications.</p>
	<p>VIZIO VBR220 Blu-ray DVD Player User Manual</p> <p>Comprehensive user manual for the VIZIO VBR220 Blu-ray DVD Player. Covers setup, features, connectivity, online streaming services (Netflix, Vudu, Pandora), safety, troubleshooting, and specifications.</p>
	<p>VIZIO XRT136 Quick Start Guide: Setup, Functions, and Battery Installation</p> <p>Comprehensive guide for the VIZIO XRT136 IR remote control. Learn about setup, button functions, accessibility features, and how to insert batteries for your VIZIO SmartCast display.</p>
	<p>VIZIO VBR338 3D Blu-ray Player User Manual</p> <p>User manual for the VIZIO VBR338 3D Blu-ray Player with Wireless Internet Apps. Learn about setup, operation, features, safety, and troubleshooting for enhanced home entertainment.</p>
	<p>VIZIO SV421XVT & SV471XVT HDTV User Manual and Setup Guide</p> <p>Comprehensive user manual for VIZIO SV421XVT and SV471XVT HDTVs, covering setup, safety, connections, operation, troubleshooting, and specifications. Includes support information and links to VIZIO.com.</p>
	<p>VIZIO M190MV/M220MV HDTV User Manual and Setup Guide</p> <p>Comprehensive user manual for the VIZIO M190MV and M220MV HDTVs, covering setup, safety instructions, connections, settings, troubleshooting, and specifications.</p>

