

[Manuals.plus](#) /

› [Swiss Eagle](#) /

› Swiss Eagle Women's Analog Watch User Manual

Swiss Eagle SE-9167-11

Swiss Eagle Women's Analog Watch User Manual

MODEL: SE-9167

Introduction

Welcome to the user manual for your new Swiss Eagle Women's Analog Watch, Model SE-9167. This timepiece combines elegant design with Swiss precision, offering reliable timekeeping and a sophisticated aesthetic. To ensure optimal performance and longevity, please read this manual carefully before using your watch. It contains important information regarding setup, operation, maintenance, and troubleshooting.

Product Overview

The Swiss Eagle SE-9167 is a women's analog watch featuring a Swiss Made movement, a durable stainless steel case, and a stylish two-tone stainless steel strap. The watch is designed for everyday elegance and reliability.





Figure 1: Front view of the Swiss Eagle SE-9167 watch, showcasing the white MOP dial and silver/rose gold strap.

Key Features:

- **Swiss Made Movement:** Ensures precise and reliable timekeeping.
- **Durable Construction:** Stainless steel case and strap for longevity.
- **Water Resistance:** Water resistant up to 50 meters, suitable for short periods of recreational swimming.
- **Scratch-Resistant:** Designed to resist scratches from daily wear.
- **Elegant Design:** White MOP dial with silver/rose gold accents.

Specifications

Feature	Detail
Dial Colour	White MOP
Case Shape	Round
Strap Colour	Silver/Rose Gold
Strap Material	Stainless Steel
Watch Movement	ISA K83 (Swiss Made)
Case Material	Stainless Steel
Case Diameter	32mm
Water Resistance	50 meters
Battery Type	1 LR44 battery (included)
Product Dimensions	3.6 x 3.5 x 1.5 cm
Weight	100 g

Setup

1. Setting the Time:

1. Gently pull the crown (the knob on the side of the watch) out to position 2.
2. Turn the crown clockwise or counter-clockwise to set the hour and minute hands to the correct time.
3. Once the time is set, push the crown back into position 1 (normal operating position).



Figure 2: Side view of the watch, highlighting the crown used for setting time and date.

2. Setting the Date:

1. Pull the crown out to position 1 (first click).
2. Turn the crown counter-clockwise to adjust the date.
3. Once the date is set, push the crown back into the normal operating position.
4. *Note:* Avoid setting the date between 9 PM and 3 AM, as this may interfere with the automatic date change mechanism.

3. Adjusting the Strap:

The stainless steel strap can be adjusted by removing or adding links. It is recommended to have this procedure performed by a professional jeweler or watch repair service to avoid damaging the strap or watch.

Operating Instructions

Reading the Time:

Your Swiss Eagle analog watch displays time using three hands: the hour hand (short), the minute hand (long), and the second hand (thin, sweeping). The date is displayed in a small window on the dial.



Figure 3: The Swiss Eagle watch worn on a wrist, demonstrating its appearance during use.

Water Resistance:

This watch is water resistant up to 50 meters (5 ATM). This means it is suitable for everyday use and can withstand splashes, rain, and brief immersion in water, such as during recreational swimming. It is **not** suitable for diving, snorkeling, or high-impact water sports. Always ensure the crown is fully pushed in before any contact with water.

Maintenance

Cleaning Your Watch:

To maintain the appearance of your watch, wipe the case and strap regularly with a soft, dry cloth. For stainless

steel parts, a slightly damp cloth can be used, followed by a dry one. Avoid using chemical cleaners, solvents, or abrasive materials, as these can damage the watch's finish.

Battery Replacement:

The watch is powered by an LR44 battery. When the battery runs low, the second hand may start to jump every few seconds, indicating it's time for a replacement. Battery replacement should be performed by a qualified watch technician to ensure proper sealing and water resistance.

Storage:

When not wearing your watch, store it in a cool, dry place, away from direct sunlight, extreme temperatures, and strong magnetic fields. Keeping it in its original box or a watch case can help protect it from dust and scratches.

Troubleshooting

Problem	Possible Cause	Solution
Watch stops or runs intermittently	Low battery; Watch needs servicing	Replace battery; Consult a professional watch repair service.
Date does not change at midnight	Time is set to AM/PM incorrectly; Date set during restricted hours	Advance the time by 12 hours; Reset the date outside of 9 PM - 3 AM.
Condensation inside the crystal	Exposure to extreme temperature changes; Water ingress	Seek professional service immediately to prevent damage to the movement.

Warranty and Support

Your Swiss Eagle watch comes with a **1-Year Manufacturer Warranty** on manufacturing defects. This warranty covers defects in materials and workmanship under normal use. It does not cover damage resulting from improper handling, accidents, unauthorized repairs, or normal wear and tear.

For warranty claims or service inquiries, please contact your authorized Swiss Eagle retailer or visit the official Swiss Eagle website for support information. Keep your proof of purchase for warranty validation.

Extended warranty options may be available from third-party providers:

- 1-Year Extended Warranty by Salama Care
- 2-Year Extended Warranty by Salama Care