

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Gemmy](#) /

› [Gemmy Airblown Inflatable Noel Sign with Santa Hat \(5.5 ft.\) Instruction Manual](#)

Gemmy Noel Sign with a Santa Hat (5.5 ft.)

Gemmy Airblown Inflatable Noel Sign with Santa Hat (5.5 ft.) Instruction Manual

INTRODUCTION

This manual provides instructions for the safe and proper setup, operation, and maintenance of your Gemmy Airblown Inflatable Noel Sign with a Santa Hat. Please read all instructions carefully before use and retain this manual for future reference.

IMPORTANT SAFETY INFORMATION

WARNING:

- Keep away from heat sources.
- Ensure proper ventilation.
- Secure decoration to prevent it from becoming a projectile in high winds.

Always follow local electrical codes and safety guidelines when installing and operating electrical decorations.

PACKAGE CONTENTS

Verify that all components are present before beginning setup:

- 1 x Gemmy Airblown Inflatable Noel Sign with Santa Hat
- Stakes
- Tethers
- Internal Blower (pre-installed)
- LED Lighting (pre-installed)

SETUP INSTRUCTIONS

1. **Choose a Location:** Select a flat, clear area for your inflatable, away from sharp objects, heat

sources, and excessive foot traffic. Ensure adequate space for the 5.5 ft. inflatable.

2. **Unpack:** Carefully remove the inflatable and all accessories from the packaging.
3. **Position:** Lay the inflatable flat on the ground in the desired display location. Ensure the air intake on the blower is clear of obstructions.
4. **Secure:** Use the provided stakes and tethers to anchor the inflatable firmly to the ground. Attach tethers to the designated loops on the inflatable and secure them with stakes. This is crucial to prevent the inflatable from being displaced by wind.
5. **Inflate:** Plug the power cord into a standard electrical outlet. The internal blower will automatically begin to inflate the decoration. Ensure the zipper on the inflatable is fully closed for proper inflation.
6. **Adjust:** Once fully inflated, adjust the tethers as needed to ensure the inflatable stands upright and is stable.



Figure 1: The fully inflated Gemmy Noel sign, featuring silver metallic letters and a red Santa hat on top of the 'O'.

OPERATING INSTRUCTIONS

The Gemmy Airblown Inflatable Noel Sign is designed for simple operation:

- **Power On:** Connect the power cord to a suitable electrical outlet. The inflatable will automatically inflate and the internal LED lights will illuminate.
- **Power Off:** Disconnect the power cord from the electrical outlet. The inflatable will slowly deflate.

For optimal performance and longevity, avoid continuous operation for more than 8 hours at a time. Allow the unit to cool down for at least 30 minutes before restarting.

MAINTENANCE

- **Cleaning:** To clean the inflatable, wipe with a damp cloth. Do not use harsh chemicals or abrasive

cleaners. Ensure the unit is completely dry before storing.

- **Storage:** When not in use, deflate the unit completely. Fold it neatly and store it in its original packaging or a suitable storage bag in a cool, dry place, away from direct sunlight and pests.
- **Inspection:** Periodically inspect the power cord, blower, and fabric for any signs of damage, tears, or wear. Do not operate if damaged.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Inflatable does not inflate.	No power to blower. Zipper is open. Air intake blocked.	Check power connection and outlet. Ensure zipper is fully closed. Clear any obstructions from the blower's air intake.
Inflatable does not stand upright.	Insufficient inflation. Improper tethering.	Ensure blower is running continuously and zipper is closed. Adjust tethers and stakes for better stability.
Lights are not working.	Power issue. Damaged LED.	Check power connection. Contact customer support if LEDs are damaged.

SPECIFICATIONS

Brand	Gemmy
Model	Noel Sign with a Santa Hat (5.5 ft.)
Theme	Christmas
Color	Red, White, Silver (Metallic)
Material	Metallic-coated Polyester/Nylon
Dimensions (L x W x H)	8 x 8 x 10 inches (packaged) / Approximately 5.5 ft. (inflated height)
Item Weight	3.59 pounds
Light Color	Warm White
Special Features	Easy Setup, Self Inflating, LED Lighting
UPC	191245147619
ASIN	B0837Y5VCQ

WARRANTY AND SUPPORT

For warranty information or technical support, please contact Gemmy customer service. Retain your proof of purchase for any warranty claims.

Visit the official Gemmy store for more products and support:[Gemmy Industries Store](#)