

[Manuals.plus](#) /

› [TOSHIBA](#) /

› Toshiba Rice Cooker 6 Cup Uncooked – Japanese Rice Cooker with Fuzzy Logic Technology, 7 Cooking Functions, Digital Display, 2 Delay Timers and Auto Keep Warm, Non-Stick Inner Pot, White

TOSHIBA TRCS01

Toshiba Rice Cooker TRCS01 User Manual

Your guide to perfectly cooked rice and more.

PRODUCT OVERVIEW

The Toshiba TRCS01 Rice Cooker is designed for versatile and convenient cooking, featuring advanced Fuzzy Logic Technology to ensure optimal results for various grains. This appliance offers multiple cooking functions and user-friendly controls, making it an essential tool for any kitchen.



Front view of the Toshiba TRCS01 Rice Cooker, showcasing its digital display and control panel.

Key Features:

- Multi-Functionality: 7 pre-programmed settings for various rice types, porridge, and steel-cut oats.
- Fuzzy Logic Technology: Automatically adjusts cooking parameters for perfect results.
- Digital Display: User-friendly interface for easy program selection.
- Delay Timers: Two programmable timers for convenient meal preparation.
- Auto Keep Warm: Maintains food temperature for up to 15 hours.
- Non-Stick Inner Pot: Ensures easy cleaning and prevents sticking.

IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and/or injury to persons.

- Ensure the detachable power cord is securely connected to prevent accidents.
- The lid locks firmly in place during cooking to prevent spills and ensure safety.
- A thermal fuse is integrated to prevent overheating of the unit.
- The steam vent cap is designed to safely release hot steam and prevent burns.
- The automatic shut-off feature turns off the heating element once cooking is complete.
- Do not immerse the main unit in water. Clean only the removable parts and exterior as instructed.

COMPONENTS AND ACCESSORIES

Your Toshiba Rice Cooker comes with the following parts and accessories:

- **Main Unit:** Houses the heating element, control panel, and digital display.
- **Non-Stick Inner Pot:** The primary cooking vessel with measurement markings.
- **Steam Basket:** For steaming vegetables, meat, or fish above the rice.
- **Measuring Cup:** Standard rice measuring cup (1 cup = 180ml).
- **Serving Spatula:** Designed for serving cooked rice without damaging the non-stick coating.
- **Soup Ladle:** For serving porridge or other liquid-based dishes.

COMPACT, ELEGANT DESIGN

Perfect for cooking needs up to 6 people



≈



x12

1 cup=180 ml=0.05 Gallon

The rice cooker with its inner pot and steam basket, illustrating its compact design and dimensions (10.66"D x 14.48"W x 8.34"H).

SETUP AND FIRST USE

1. **Unpack:** Carefully remove all packaging materials and accessories from the box.
2. **Clean:** Before first use, wash the inner pot, steam basket, measuring cup, serving spatula, and soup ladle with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the main unit with a soft, damp cloth.
3. **Placement:** Place the rice cooker on a stable, flat, heat-resistant surface, away from direct sunlight and heat sources. Ensure adequate ventilation around the unit.
4. **Insert Inner Pot:** Place the cleaned non-stick inner pot into the main unit, ensuring it sits properly on the heating plate.
5. **Connect Power:** Plug the detachable power cord into the rice cooker and then into a grounded electrical outlet.

OPERATING INSTRUCTIONS

Basic Rice Cooking

1. **Measure Rice:** Use the provided measuring cup to measure the desired amount of rice. (e.g., 1-6 cups uncooked).
2. **Wash Rice:** Rinse the rice thoroughly until the water runs clear.
3. **Add Water:** Place the washed rice into the inner pot. Add water according to the water level markings inside the pot, corresponding to the number of rice cups. For example, for 3 cups of white rice, fill water to the "WHITE RICE 3" line.
4. **Select Function:** Close the lid securely. Press the **MENU** button repeatedly to cycle through the cooking functions (Mixed Rice, Quick Rice, Brown Rice, White Rice, Multi-grain Rice, Porridge, Steel-Cut Oats). The selected function will be highlighted on the digital display.
5. **Start Cooking:** Press the **START** button. The cooking indicator light will illuminate, and the display will show the estimated cooking time.
6. **Keep Warm:** Once cooking is complete, the rice cooker will automatically switch to the "Keep Warm" mode. The display will show the elapsed time in "Keep Warm" mode.

Fuzzy Logic Technology

The Toshiba Rice Cooker utilizes advanced Fuzzy Logic Technology. This intelligent system senses the moisture content of the food and adjusts the temperature and cooking time automatically. This ensures perfectly cooked, fluffy rice and other dishes every time, eliminating the need for manual adjustments.

DESIGNED FOR FAMILIES

Enjoy easy home cooking with Toshiba's Fuzzy Logic Rice Cooker



Multi
Functionality



Enjoy
perfect rice



Easy to
use & clean



Food grade
materials



Illustration of the Fuzzy Logic cooking process, showing temperature adjustments through preheat, water absorption, boiling, simmering, and keep warm stages.

Using Delay Timers

The rice cooker features two programmable delay timers (Timer 1 and Timer 2) to set when your meal should be ready.

1. Prepare rice and water in the inner pot as usual.
2. Press the **TIMER 1/2** button. The display will show "TIMER 1" and a default time.
3. Use the **HOUR** and **MIN** buttons to adjust the desired completion time.
4. Press **START**. The timer indicator will light up, and the unit will begin counting down to the set time, ensuring your meal is ready when you need it.
5. To set "TIMER 2", repeat the process, pressing **TIMER 1/2** again after setting "TIMER 1".

2 INTELLIGENT TIMERS

Enjoy the delicious dishes at your desired time



TIMER1

7:00a.m. Prepare the rice>
Pre-set to 7:00 p.m.>
Ready for your dinner



TIMER2

8:00p.m. Prepare the rice>
Pre-set to 8:00 a.m.>
Breakfast is prepared



The control panel highlighting the timer functions, allowing users to program meal completion times for convenience.

Regular cleaning ensures the longevity and optimal performance of your rice cooker.

- **Inner Pot:** The non-stick inner pot should be washed by hand using mild soap and a soft cloth or sponge.**DO NOT wash the inner pot in a dishwasher**, as this can damage the non-stick coating.
- **Exterior:** Wipe the exterior of the main unit with a soft, damp cloth. Do not use abrasive cleaners or immerse the unit in water.
- **Steam Valve and Steam Vent Cap:** The steam valve located on the top of the lid and the steam vent cap are removable for easy cleaning. Detach them and wash with warm, soapy water, then rinse and dry thoroughly before reattaching.
- **Inner Lid:** The inner lid can also be removed for thorough cleaning. Follow the same washing instructions as the steam valve.



Demonstration of removing the inner lid for comprehensive cleaning, ensuring hygiene and performance.

TROUBLESHOOTING

If you encounter issues with your Toshiba Rice Cooker, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Rice is too hard/dry	Insufficient water; old rice; lid not properly closed.	Add more water next time; use fresh rice; ensure lid is securely latched.
Rice is too soft/mushy	Too much water; new rice.	Reduce water next time; adjust water level for new rice.
Unit does not turn on	Power cord not connected; power outage.	Check power cord connection; ensure power outlet is functional.
Steam leaking from lid	Lid not closed properly; steam vent cap clogged.	Close lid firmly; clean steam vent cap and steam valve.
Rice sticks to inner pot	Inner pot coating damaged; not enough water.	Ensure proper cleaning and care of inner pot; adjust water levels.

SPECIFICATIONS

- **Brand:** TOSHIBA
- **Model Name:** Rice Cooker 6 Cups Uncooked (3L) with Fuzzy Logic
- **Model Number:** TRCS01
- **Capacity:** 6 Cups Uncooked (12 Cups Cooked)
- **Product Dimensions:** 10.66"D x 14.48"W x 8.34"H
- **Item Weight:** 9.1 Pounds
- **Power Source:** Corded Electric
- **Voltage:** 110 Volts
- **Wattage:** 655 watts
- **Material:** Stainless Steel (Lid Material: Stainless Steel)
- **Color:** White
- **Special Feature:** Programmable

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official Toshiba product documentation included with your rice cooker. You can also visit the official Toshiba website for further assistance, FAQs, and contact details.

Online Resources:

- User Guide (PDF): [Download User Guide](#)
- User Manual (PDF): [Download User Manual](#)
- Toshiba Kitchen Store: [Visit Store](#)

When contacting support, please have your product model number (TRCS01) and purchase information ready.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question