

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Evenflo](#) /

› [Evenflo ExerSaucer Activity Center, Seaside Splash User Manual](#)

**Evenflo 61612364**

# Evenflo ExerSaucer Activity Center, Seaside Splash User Manual

Model: 61612364

## 1. INTRODUCTION

The Evenflo ExerSaucer Activity Center, Seaside Splash, provides a stimulating and secure environment for your child's developmental growth. Designed with ocean-themed activities, this multi-sensory center encourages exploration, play, and the development of essential motor skills. This manual provides important information regarding assembly, operation, maintenance, and safety to ensure a positive experience for both parent and child.

## 2. IMPORTANT SAFETY INFORMATION

### **WARNING: Failure to follow these instructions could result in serious injury or death.**

- Always supervise your child while they are using the activity center. Never leave a child unattended.
- Ensure the activity center is placed on a flat, level surface away from stairs, windows, and heat sources.
- Do not use the activity center if any components are damaged, broken, or missing. Contact Evenflo customer service for replacement parts.
- Discontinue use of the activity center when your child reaches 30 inches (76 cm) in height or begins walking, whichever comes first.
- The maximum weight recommendation for this product is 26.4 pounds (12 kg).
- Suitable for children from 4 months of age who can hold their head up unassisted.

## 3. PARTS LIST

Before assembly, ensure all components are present and undamaged. Refer to the diagram below for visual identification of parts.



Figure 3.1: Overall view of the Evenflo ExerSaucer Activity Center.

- Activity Tray (Main platform)
- Adjustable Support Legs (3)
- Base Platform
- Removable Fabric Seat Pad
- Snack Tray (Removable)
- Interactive Toys: Wiggle Fish, Spinning Sun, Bucket with Sand Dollars, Beach Ball Spinner, Starfish Rattle, and other ocean-themed attachments.

#### 4. SETUP AND ASSEMBLY

Assembly of the Evenflo ExerSaucer Activity Center is designed to be quick and easy, requiring no tools. Follow these steps:

1. Unpack all components and verify against the parts list.

2. Attach the three adjustable support legs to the base platform, ensuring they click securely into place.
3. Connect the activity tray to the top of the support legs, ensuring all connections are firm.
4. Insert the fabric seat pad into the central opening of the activity tray. Ensure it is properly secured according to the product instructions.
5. Attach the various interactive toys to their designated slots on the activity tray. These are designed for easy snap-in placement.
6. Attach the removable snack tray to its designated area on the activity tray.



Figure 4.1: Illustration of attaching the support legs and activity tray.

## 5. OPERATING INSTRUCTIONS

### 5.1 Height Adjustment

The activity center features a 3-position height adjustment to accommodate your child's growth. To adjust the height, locate the adjustment buttons on each support leg. Press the buttons and slide the legs up or down to the desired height.

setting. Ensure all three legs are set to the same position for stability.



Figure 5.1: Detail of the height adjustment mechanism.

## 5.2 Rotating Seat

The central seat is designed to rotate 360 degrees, allowing your child to easily access all the interactive toys around the activity tray. This feature encourages exploration and engagement with different activities.



Figure 5.2: The 360-degree rotating seat provides full access to toys.

### 5.3 Interactive Toys

The activity center includes a variety of ocean-themed toys designed to stimulate your child's senses and promote developmental skills. These include:

- **Wiggle Fish:** A colorful fish toy that wiggles and moves to engage your child.
- **Spinning Sun:** A bright, spinning sun toy that encourages visual tracking.
- **Bucket with Sand Dollars:** A small bucket containing colorful sand dollar shapes for tactile exploration.
- **Beach Ball Spinner:** A spinner toy resembling a beach ball, promoting cause-and-effect learning.
- **Starfish Rattle:** A rattle shaped like a starfish, providing auditory stimulation.

360°



Figure 5.3: The Beach Ball Spinner toy.



Figure 5.4: The Starfish Rattle toy.



Figure 5.5: The Bucket with Sand Dollars toy.

#### 5.4 Snack Tray

A removable snack tray is integrated into the activity center, providing a convenient space for snacks or additional toys. This tray is dishwasher-safe for easy cleaning.



Figure 5.6: Child using the integrated snack tray.

## 6. CARE AND MAINTENANCE

- **Seat Pad:** Machine wash the fabric seat pad in cold water on a delicate cycle. Tumble dry on low heat for 10 to 15 minutes. Do not use harsh detergents or bleach. Do not dry clean.
- **Plastic Parts:** Wipe all plastic parts, including the activity tray, support legs, and base, with mild soap and water. Ensure all soap residue is rinsed off.
- **Snack Tray:** The snack tray is dishwasher-safe for thorough cleaning.
- **Toys:** Wipe interactive toys with a damp cloth and mild soap. Do not immerse electronic toys (if any) in water.

## 7. TROUBLESHOOTING

If you encounter any issues with your Evenflo ExerSaucer Activity Center, please refer to the following common solutions:

- **Unstable Unit:** Ensure all three support legs are securely attached to both the base platform and the activity tray.

Verify that the height adjustment buttons are fully engaged at the same level on all legs.

- **Toys Not Functioning:** Check that all interactive toys are correctly inserted into their designated slots. Some toys may require manual manipulation (e.g., spinning, rattling) rather than electronic function.
- **Difficulty Rotating Seat:** Ensure the seat pad is correctly installed and not obstructing the rotation mechanism. Check for any debris beneath the seat.

If problems persist, please contact Evenflo customer support for further assistance.

## 8. PRODUCT SPECIFICATIONS

Feature	Detail
Model Number	61612364
Product Dimensions	30 x 30 x 25 inches (76.2 x 76.2 x 63.5 cm)
Item Weight	14.9 pounds (6.76 kg)
Maximum Weight Recommendation	26.4 Pounds (12 kg)
Material Composition	50% plastic, 25% metal, 25% fabric
Target Gender	Unisex
Age Range	4 months and up (until child is walking or 30" tall)
Batteries Required	No

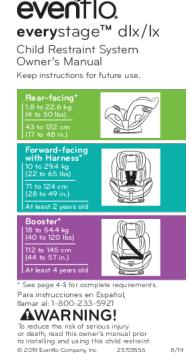
## 9. WARRANTY AND SUPPORT

Evenflo products are designed for durability and safety. For specific warranty details, product registration, or to contact customer support, please visit the official Evenflo website or refer to the warranty card included with your purchase.

**Evenflo Official Website:** [www.evenflo.com](http://www.evenflo.com)

### Related Documents - 61612364

 The image shows the front of the product box for the Evenflo ExerSaucer Jam Session. The box is white with a black and red design. The 'exer•saucer' logo is at the top left, followed by 'Jam Session™'. Below that is a stylized illustration of a child playing on the jumper. A banner across the middle says 'KEEP ACTIVE'. At the bottom, there is a small section of text in multiple languages: 'KEEP ACTIVE FOR FUTURE USE', 'CONSERVE CES INSTRUCTIONS POUR RÉFÉRENCE ULTÉRIEURE', and 'GUARDE ESTAS INSTRUCCIONES PARA REFERENCIA FUTURA'. There is also a small 'www.evenflo.com' logo at the bottom right.	<p><a href="#">Evenflo ExerSaucer Jam Session Stationary Jumper - Assembly and User Manual</a></p> <p>Comprehensive guide for the Evenflo ExerSaucer Jam Session stationary jumper, covering assembly instructions, safety warnings, height adjustment, care and maintenance, troubleshooting, and warranty information.</p>
---	--

	<p><b><a href="#">Evenflo Exersaucer Jump &amp; Learn Activity Centre - Safari Friends</a></b></p> <p>Discover the Evenflo Exersaucer Jump &amp; Learn Activity Centre, designed for safe and stimulating play. Features 45 learning activities, adjustable height, and washable seat for convenience. Ideal for babies aged 4-12 months.</p>
	<p><b><a href="#">Evenflo Everystage DLX/LX Child Restraint System Owner's Manual</a></b></p> <p>This owner's manual provides comprehensive instructions for the safe installation and use of the Evenflo Everystage DLX/LX Child Restraint System, covering rear-facing, forward-facing with harness, and booster modes. It includes critical safety warnings, usage requirements, and installation guides to ensure child safety in vehicles.</p>
	<p><b><a href="#">Evenflo Advanced Manual Breast Pump: User Guide and Instructions</a></b></p> <p>Comprehensive guide for the Evenflo Advanced Manual Breast Pump. Covers safety, assembly, usage, flange fitting, milk storage, maintenance, and troubleshooting for effective and safe breast pumping.</p>
	<p><b><a href="#">Evenflo Omni Plus Stroller/Travel System User Manual</a></b></p> <p>Comprehensive guide for the Evenflo Omni Plus Stroller/Travel System, covering assembly, usage modes, safety warnings, and maintenance. Learn how to set up and use your stroller safely for your child.</p>
	<p><b><a href="#">Evenflo Pivot Stroller/Travel System User Manual</a></b></p> <p>Comprehensive guide for the Evenflo Pivot Stroller/Travel System, covering assembly, usage modes (carriage and toddler seat), safety warnings, and maintenance. Learn how to attach accessories like the canopy, bumper bar, child tray, and cupholder.</p>