

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [allimity](#) /

› [ALLIMITY Replacement Remote Control for SKYWORTH LCD LED TVs](#)

allimity IND-SKYWORTH4-W

ALLIMITY Replacement Remote Control for SKYWORTH LCD LED TVs

Model: IND-SKYWORTH4-W

INTRODUCTION

This manual provides instructions for the ALLIMITY Replacement Infrared Remote Control, designed for use with various SKYWORTH LCD/LED TV models. Please read this guide thoroughly before using the remote control to ensure proper operation and longevity.

Compatible SKYWORTH TV Models:

- 24E66A
- 24E58A
- 32E66A
- 42E66A
- 50E58
- 32E57
- 32E36
- 42E38
- 39E36

If your specific TV model is not listed, please verify compatibility before use. This remote control operates via infrared (IR) technology.

PACKAGE CONTENTS

- 1 x ALLIMITY Replacement Remote Control (Model: IND-SKYWORTH4-W)

Note: Batteries are not included and must be purchased separately.

SETUP

1. Installing Batteries

The remote control requires two AAA alkaline batteries (not included).

1. Locate the battery compartment on the back of the remote control.
2. Press down on the latch and slide the battery cover off.
3. Insert two new AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



Image: Back of the remote control with the battery cover removed, illustrating the correct orientation for inserting AAA batteries.

2. First Use

No programming is required for this replacement remote control. Once batteries are installed, it is ready for use with compatible SKYWORTH LCD/LED TV models.

OPERATING INSTRUCTIONS

To operate your TV using the remote control:

1. Ensure the TV is powered on or in standby mode.
2. Point the remote control directly towards the infrared sensor on your SKYWORTH TV. Avoid any obstacles between the remote and the TV sensor.
3. Press the desired function button.



Image: Overview of the ALLIMITY remote control buttons.

Key Functions:

Button	Function
POWER	Turns the TV on or off (standby mode).
S.M.	Sound Mode selection.
ZOOM	Adjusts the screen zoom level.
0-9	Numeric buttons for direct channel selection.
RETURN	Returns to the previous menu or channel.

Button	Function
MENU	Opens the TV's main menu.
QUICK CH/LIST	Accesses quick channel list.
SOURCE	Selects input source (HDMI, AV, etc.).
Navigation Arrows (Up, Down, Left, Right)	Navigates through menus and options.
OK	Confirms selections.
REC.LIST	Accesses recorded content list.
EXIT	Exits current menu or function.
INFO	Displays information about the current program or input.
VOL +/-	Adjusts volume up or down.
PR +/-	Changes channels up or down.
MUTE	Mutes or unmutes the TV sound.
SLEEP	Sets the sleep timer.
FAV	Accesses favorite channels.
EPG	Electronic Program Guide.
HOLD	Holds the current screen.
TEXT	Activates/deactivates Teletext.
INDEX	Accesses Teletext index.
CANCEL	Cancels current action.
SUBPAGE	Navigates Teletext subpages.
REC	Starts recording (if supported by TV).
SIZE	Adjusts screen size/aspect ratio.
REVEAL	Reveals hidden Teletext information.
MIX	Mixes TV picture with Teletext.
Colored Buttons (Red, Green, Yellow, Blue)	Functionality varies by TV model and current menu/application. Refer to your TV's manual.
Playback Controls (Rewind, Play/Pause, Fast Forward, Previous, Stop, Next)	Controls media playback (if supported by TV/connected device).

MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid or aerosol cleaners.
- **Battery Replacement:** Replace batteries when the remote control's response becomes sluggish or stops

working. Always replace with new alkaline batteries.

- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and damage.
- **Avoid Damage:** Do not drop the remote control, expose it to moisture, or place it in direct sunlight or near heat sources.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote control not working.	Dead or incorrectly inserted batteries.	Replace with new AAA alkaline batteries, ensuring correct polarity (+/-).
Remote control range is poor.	Weak batteries; Obstruction between remote and TV sensor.	Replace batteries. Ensure a clear line of sight to the TV's IR sensor.
Some buttons do not work.	Remote control not compatible with specific TV function; Button malfunction.	Verify your TV model is listed as compatible. Some advanced functions may require the original remote. If multiple buttons fail, consider replacing the remote.
TV does not respond to any remote commands.	TV's IR sensor is blocked or faulty; TV is off or unplugged.	Check TV power. Clear any obstructions from the TV's IR sensor. Test with another remote if available to rule out TV sensor issue.

SPECIFICATIONS

Brand: ALLIMITY

Model: IND-SKYWORTH4-W

Compatible Devices: SKYWORTH LCD/LED TVs (models: 24E66A, 24E58A, 32E66A, 42E66A, 50E58, 32E57, 32E36, 42E38, 39E36)

Connectivity Technology: Infrared (IR)

Power Source: Battery Powered

Battery Type: 2 x AAA Alkaline Batteries (not included)

Product Dimensions: 17 x 1.5 x 5 cm (approx.)

Item Weight: 70 g (approx.)

Material: ABS

Country of Origin: China

WARRANTY AND SUPPORT

This product is a replacement remote control. For specific warranty information, please refer to the seller's policy or contact ALLIMITY customer support directly. For technical assistance, refer to the troubleshooting section or contact your product vendor.

Note: This remote control is designed to function as a direct replacement for the original remote for the listed SKYWORTH TV models. Some advanced features specific to certain smart TV platforms or unique original remote buttons may not be fully supported.

© 2024 ALLIMITY. All rights reserved.