



[Manuals.plus](#) /

> [Reyhoar](#) /

> Reyhoar PA010034 Black Top Burner Range Knob Instruction Manual

Reyhoar PA010034

Reyhoar PA010034 Black Top Burner Range Knob Instruction Manual

Model: PA010034

[Overview](#) [Installation](#) [Introduction](#) [Safety Information](#) [Product](#)
[Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Support](#)

1. INTRODUCTION

This instruction manual provides essential information for the proper installation, operation, and maintenance of your Reyhoar PA010034 Black Top Burner Range Knob. This knob is designed as a direct replacement for specific Viking range models. Please read this manual thoroughly before installation and retain it for future reference.

2. SAFETY INFORMATION

Always prioritize safety when working with appliances. Ensure the range is turned off and disconnected from its power source before attempting any installation or maintenance. Failure to do so may result in electric shock, injury, or damage to the appliance.

- Always disconnect power to the appliance before servicing.
- Wear appropriate personal protective equipment, such as gloves, if necessary.
- If you are unsure about any step, consult a qualified technician.
- Keep children and pets away from the work area.

3. PRODUCT OVERVIEW

The Reyhoar PA010034 is a black top burner range knob constructed from durable fireproofing plastic. It features a D-shaped shaft opening for secure attachment to compatible range models. The knob is designed to control the burner settings (OFF, LOW, MED, HI, SIMMER).

Made from Durable
Long -lasting Material



Special reminder:
please pay attention to the hole direction, size and shape of the knob.

Figure 3.1: Front and back view of the PA010034 knob, highlighting its construction and shaft design.

This knob is an equivalent replacement for part numbers PA010034, VKNPA010034, AP5315062, and 810722. It is compatible with Viking range models VGIC305-4BSS and VGIC485-6GSS.

4. INSTALLATION INSTRUCTIONS

No special tools are required for the installation of this replacement knob. Follow these steps carefully:

1. **Disconnect Power:** Before beginning, ensure your range is completely turned off and disconnected from the power supply to prevent electrical hazards.
2. **Remove Old Knob:** Gently pull the existing knob straight off the burner shaft. If it is stuck, a slight twisting motion may help, but avoid excessive force to prevent damage to the shaft.
3. **Verify Compatibility:** Compare the shaft opening of the new PA010034 knob with your range's burner shaft. The knob is designed for a D-shaped shaft. Also, verify the dimensions and hole direction as shown in the compatibility image below.

Choose the Right Replacement Model



This part fits 2 models

Viking: VGIC305-4BSS VGIC485-6GSS

This part is also known as

PA010034, VKNPA010034

Fixes the following symptoms

Selection will not set;

Will not turn;

Will not stay on.

We'd love to make sure you avoid disappointment and get the exact part you need. Please check this part matches your model.

Figure 4.1: Knob dimensions and compatibility details.

- 4. Install New Knob:** Align the D-shaped opening of the new PA010034 knob with the D-shaped burner shaft. Push the knob firmly onto the shaft until it is securely seated. Ensure it is fully engaged and does not wobble.



Save Your
Time and Money

Figure 4.2: Detail of the D-shaped shaft connection.

5. **Restore Power:** Once the knob is securely installed, reconnect the range to its power supply.
6. **Test Functionality:** Turn the knob to various settings (LOW, MED, HI, SIMMER) to ensure it rotates smoothly and engages correctly with the burner controls.

5. OPERATING INSTRUCTIONS

The PA010034 range knob functions identically to the original knob it replaces. To operate a burner:

1. **Turn On:** Push the knob in slightly and rotate it counter-clockwise to the desired heat setting (e.g., HI, MED, LOW, SIMMER). The burner should ignite.
2. **Adjust Heat:** Continue rotating the knob to adjust the flame intensity or heat level as needed.
3. **Turn Off:** Rotate the knob clockwise until it clicks into the "OFF" position. Ensure the burner flame is extinguished.

6. MAINTENANCE AND CARE

To ensure the longevity and proper function of your Reyhoar PA010034 range knob, follow these simple maintenance guidelines:

- **Cleaning:** The knob can be easily removed for cleaning. Wipe it with a soft cloth dampened with mild soap and water. Avoid abrasive cleaners or harsh chemicals, as these can damage the finish or markings.
- **Drying:** Ensure the knob is completely dry before reattaching it to the range shaft.
- **Inspection:** Periodically inspect the knob for any signs of wear or damage. If the knob becomes loose or difficult to turn, refer to the troubleshooting section or contact support.

7. TROUBLESHOOTING

If you encounter any issues with your Reyhoar PA010034 range knob, refer to the table below for common problems and solutions:

Problem	Possible Cause	Solution
Knob will not turn or is stiff.	Misalignment with shaft, debris under knob, or damaged shaft.	Remove knob and check for obstructions. Realign and reattach. Inspect range shaft for damage.
Knob will not stay on the shaft.	Improper installation, worn D-shaped opening, or damaged range shaft.	Ensure knob is pushed firmly onto the shaft. If the knob's opening is worn, replacement may be necessary. Inspect range shaft for damage.
Range will not set/ignite when knob is turned.	Knob not fully engaging the control mechanism, or an issue with the range itself.	Ensure the knob is fully seated and engaging the shaft. If the problem persists, the issue may be with the range's internal components, not the knob.

If these solutions do not resolve the issue, please contact customer support.

8. SPECIFICATIONS

- **Model Name:** PA010034 Black Top Burner Range Knob
- **Material:** Fireproofing Plastic
- **Color:** Black
- **Product Dimensions:** 2.2" (Diameter) x 1.5" (Height) (56 x 39 mm)
- **Diameter of Install Hole:** 0.35" (8.9 mm)
- **Handle Attachment Mechanism:** D-shaped Shaft
- **Compatible Range Models:** Viking VGIC305-4BSS, VGIC485-6GSS
- **Replaces Part Numbers:** PA010034, VKNPA010034, AP5315062, 810722
- **Item Weight:** 2.11 Ounces

9. CUSTOMER SUPPORT

For any questions regarding the Reyhoar PA010034 Black Top Burner Range Knob, including model compatibility or troubleshooting assistance, please contact Reyhoar customer service. We are committed to providing high-quality products and support.

You can reach us via Amazon's messaging service for prompt assistance. Please provide your product model number and a detailed description of your issue for efficient support.



24-Hour Mail Service



Sincerely and Patiently
Solve any problems via Amazon Mail

Figure 9.1: Reyhoar customer support information.