

Manuals.plus /

› cimetech /

› cimetech 2.4GHz Wireless Keyboard User Manual

cimetech KF003-Grey

cimetech 2.4GHz Wireless Keyboard User Manual

Model: KF003-Grey

Brand: cimetech

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your cimetech 2.4GHz Wireless Keyboard. Designed for seamless compatibility with various operating systems including Windows, iOS, and Android, this full-size keyboard offers a comfortable and efficient typing experience for laptop, desktop PC, and tablet users. Please read this manual thoroughly before using the keyboard to ensure optimal performance and longevity.



Figure 1: cimetech 2.4GHz Wireless Keyboard (KF003-Grey) with USB receiver.

SETUP GUIDE

1. Package Contents

- cimetech 2.4GHz Wireless Keyboard
- Nano USB Receiver
- 2 x AAA Batteries (included)

2. Battery Installation

1. Locate the battery compartment on the back of the keyboard.
2. Remove the battery cover.
3. Insert two (2) AAA batteries, ensuring correct polarity (+/-).
4. Replace the battery cover securely.



Figure 2: Back of the keyboard indicating battery compartment and USB receiver storage.

3. Connecting the Keyboard

The cimetech wireless keyboard utilizes 2.4G wireless technology for a stable and clutter-free connection.

1. Locate the Nano USB receiver, typically stored within the battery compartment on the back of the keyboard (refer to Figure 2).
2. Remove the USB receiver from its storage slot.
3. Insert the Nano USB receiver into an available USB-A port on your computer, laptop, or tablet.
4. The keyboard should automatically connect within a few seconds. No additional drivers are required for most operating systems.



Figure 3: 2.4G Wireless Plug and Play connection diagram.

OPERATING INSTRUCTIONS

1. Keyboard Layout and Features

The cimeteck KF003-Grey keyboard features a full-size layout with 110 keys, including a dedicated numeric pad and 17 shortcut keys for enhanced productivity.

FULL SIZE & ULTRA SLIM DESIGN



Figure 4: Keyboard layout with dimensions (43.5cm x 12.3cm).

The ergonomic keycaps are designed for comfortable and quiet typing, reducing noise and providing a smooth tactile feel. Rubber pads on the back ensure stability during use.

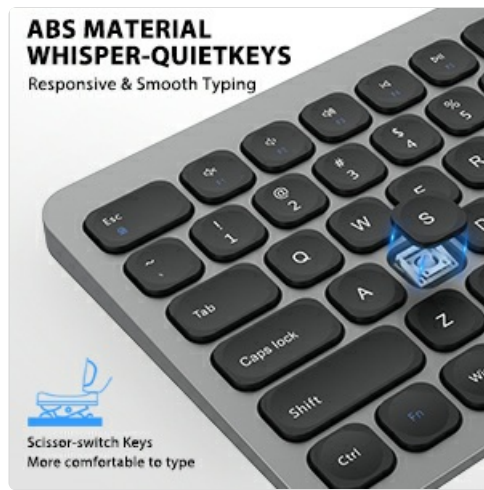


Figure 5: Detail of the scissor-switch key mechanism for responsive and smooth typing.

2. Indicator Lights

The keyboard features three indicator lights located above the numeric pad:

- **NUM Indicator:** Lights up when the Number Lock (Num Lock) function is active.
- **CAPS Indicator:** Lights up when the Caps Lock function is active.
- **POWER Indicator:** Indicates battery status. It will light up when the keyboard is turned on and may flash when battery power is low.

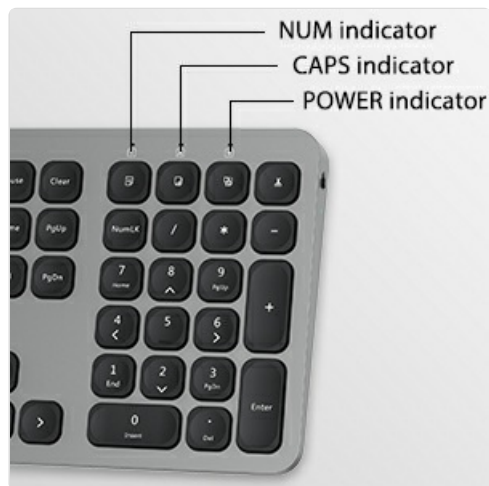


Figure 6: Location of NUM, CAPS, and POWER indicator lights.

3. Function (Fn) Keys and Multimedia Shortcuts

The keyboard includes a Function (Fn) key that, when pressed in combination with the F1-F12 keys, activates various multimedia and system shortcuts. This allows for quick access to common functions without needing to use a mouse.



Fn+

F1 Mute

F2 Volume Down

F3 Volume Up

F4 Backward

F5 Pause/Play

F6 Forward

F7 Homepage

F8 Search

F9 Favorite

F10 Email

F12 Internet

Esc Key Lock

Fn Function lock

Select All

Copy

Paste

Cut

Figure 7: Fn key combinations for multimedia and system shortcuts.

Table 1: Fn Key Functions

Key Combination	Function
Fn + F1	Mute Audio
Fn + F2	Volume Down
Fn + F3	Volume Up
Fn + F4	Backward (Media)
Fn + F5	Pause/Play (Media)
Fn + F6	Forward (Media)
Fn + F7	Homepage
Fn + F8	Search
Fn + F9	Favorite
Fn + F10	Email
Fn + F11	Internet Browser
Fn + F12	Key Lock
Fn + Esc	Function Lock (toggles F1-F12 to act as standard function keys or multimedia keys)
Fn + A	Select All
Fn + C	Copy
Fn + V	Paste
Fn + X	Cut

MAINTENANCE

1. Cleaning the Keyboard

To maintain the cleanliness and functionality of your keyboard:

- Use a soft, lint-free cloth slightly dampened with water or a mild cleaning solution.
- Avoid spraying liquids directly onto the keyboard.
- Do not use abrasive cleaners, solvents, or aerosol sprays.
- For dust and debris between keys, use compressed air.

2. Battery Life and Power Saving

The keyboard is designed for long-term operation with its power-saving features:

- The keyboard has a separate ON/OFF switch located on the back. Turn off the keyboard when not in use for extended periods to conserve battery life.
- A smart auto-sleep feature activates after a period of inactivity to save power. Press any key to wake the keyboard.
- Replace the AAA batteries when the POWER indicator light flashes or the keyboard becomes unresponsive.

TROUBLESHOOTING

If you encounter issues with your cimetech wireless keyboard, please refer to the following common solutions:

Table 2: Troubleshooting Guide

Problem	Possible Cause / Solution
Keyboard is unresponsive or not typing.	<ul style="list-style-type: none">◦ Ensure the keyboard is turned ON using the switch on the back.◦ Check if the batteries are correctly installed and have sufficient charge. Replace if necessary.◦ Verify the Nano USB receiver is securely plugged into a working USB port on your device. Try a different USB port.◦ Move the keyboard closer to the USB receiver to ensure it's within the 10m operating range.◦ Restart your computer/device.
Lag or delayed response when typing.	<ul style="list-style-type: none">◦ Ensure there are no strong wireless interferences (e.g., other 2.4GHz devices, Wi-Fi routers) nearby.◦ Move the keyboard closer to the USB receiver.◦ Check battery level. Low batteries can affect performance.
Certain keys or multimedia functions are not working.	<ul style="list-style-type: none">◦ Ensure the Function Lock (Fn + Esc) is set correctly for your desired key behavior (standard F-keys vs. multimedia shortcuts).◦ Clean the keys to ensure no debris is obstructing them.
Keyboard frequently disconnects.	<ul style="list-style-type: none">◦ Check battery level and replace if low.◦ Ensure the USB receiver is not obstructed and is within line of sight of the keyboard if possible.◦ Avoid placing the receiver near metal objects or other electronic devices that may cause interference.

SPECIFICATIONS

Table 3: Product Specifications

Feature	Detail
Model	KF003-Grey
Connectivity Technology	2.4GHz Wireless (RF), USB-A Receiver
Operating Distance	Up to 10 meters (33 feet)
Number of Keys	110
Power Source	2 x AAA Batteries (included)
Compatible Devices	Laptop, PC, Tablet
Operating Systems	Windows XP / Vista / 7 / 8 / 10, iOS, Android, Mac OS
Product Dimensions	14.57 x 5.12 x 0.79 inches (37 x 13 x 2 cm)
Item Weight	1.1 pounds (0.5 kg)
Special Features	Portable, Ergonomic, Lightweight, Hotkeys and Media Keys, Quiet Click

WARRANTY AND SUPPORT

For information regarding warranty coverage, technical support, or customer service, please refer to the warranty card included with your product packaging or visit the official cimetechnics website. Keep your purchase receipt for warranty claims.

For further assistance, you may also contact the seller directly through the platform where the product was purchased.