

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [eufy](#) /

› [eufy BoostIQ RoboVac 15T Robotic Vacuum Cleaner User Manual](#)

eufy RoboVac 15T

eufy BoostIQ RoboVac 15T Robotic Vacuum Cleaner User Manual

1. INTRODUCTION

This manual provides essential instructions for the safe operation, setup, maintenance, and troubleshooting of your eufy BoostIQ RoboVac 15T. Please read this manual thoroughly before using the product and retain it for future reference.



Image 1.1: The eufy BoostIQ RoboVac 15T robotic vacuum cleaner, a compact device designed for automated floor cleaning.

2. IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of injury or damage, read these safety instructions carefully and keep them at hand when setting up, using, and maintaining your RoboVac.

- This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children should be supervised to ensure they do not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Only use the power adapter provided by the manufacturer.

- Do not use the appliance in extremely hot or cold environments (below 0°C / 32°F or above 40°C / 104°F).
- Do not operate the RoboVac in a room where an infant or child is sleeping.
- Do not use the RoboVac to pick up large objects, liquids, burning or smoking objects.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Move cables and cords out of the way to prevent entanglement. Five cable ties are provided for organization.

3. WHAT'S IN THE Box

Verify that all components are present and in good condition upon opening the package.

- eufy BoostIQ RoboVac 15T
- Remote control (2 AAA batteries included)
- Charging base
- AC power adapter
- Cleaning tool
- Extra set of high-performance filters
- 4 side brushes (2 for immediate use, 2 spares)
- 5 cable ties
- Welcome guide

4. PRODUCT OVERVIEW

4.1 RoboVac Features

The RoboVac 15T is designed with advanced features for efficient cleaning.



Image 4.1: Key features of the RoboVac 15T, including BoostIQ Technology, a 3-Point Cleaning System, and 1500Pa maximum suction power. The image also highlights its ultra-thin 2.85-inch design, allowing it to clean under low furniture.

- **BoostIQ Technology:** Automatically increases suction power within 1.5 seconds when extra vacuuming strength is needed, such as on carpets.
- **Super-Thin Design:** At 2.85 inches tall, it navigates easily under low-hanging furniture.
- **Strong Suction:** Up to 1500Pa suction power for effective cleaning.
- **Quiet Operation:** Operates at a noise level comparable to an operating microwave.
- **Touch-Control Panel:** Intuitive controls directly on the unit.

5. SETUP

5.1 Preparing for Use

Before first use, ensure the RoboVac is properly prepared.

1. Remove all protective films and stickers from the RoboVac and charging base.
2. Install the side brushes by pressing them onto the posts until they click.

5.2 Charging Base Placement

Place the charging base on a hard, level surface against a wall. Ensure there is at least 3 feet (1 meter) of clear space to the front and 1 foot (0.3 meters) to each side of the charging base.

- Connect the AC power adapter to the charging base and a wall outlet.
- Ensure the power cord is not tangled or obstructing the RoboVac's path. Use the provided cable ties if necessary.

5.3 Charging the RoboVac

For optimal performance, fully charge the RoboVac before its first use.

1. Manually place the RoboVac onto the charging base, ensuring its charging contacts align with those on the base.
2. The indicator lights on the RoboVac will illuminate to show charging status. A full charge typically takes 5-6 hours.

6. OPERATING THE ROBOVAC

6.1 Power On/Off

Press and hold the power button on the RoboVac or the remote control to turn the unit on or off.

Clean with a Gentle Touch



Image 6.1: The RoboVac 15T features a touch-control panel for easy operation, allowing users to initiate cleaning with a gentle touch.

6.2 Cleaning Modes

The RoboVac offers various cleaning modes to suit different needs.

- **Auto Cleaning:** The RoboVac automatically cleans your home, adjusting its path based on obstacles.
- **Spot Cleaning:** Focuses on a specific area of concentrated dirt.
- **Edge Cleaning:** Cleans along walls and furniture edges.

6.3 BoostIQ Technology

The BoostIQ feature automatically increases suction power when the RoboVac detects it has moved from a hard floor to a carpeted surface, ensuring thorough cleaning across different floor types.

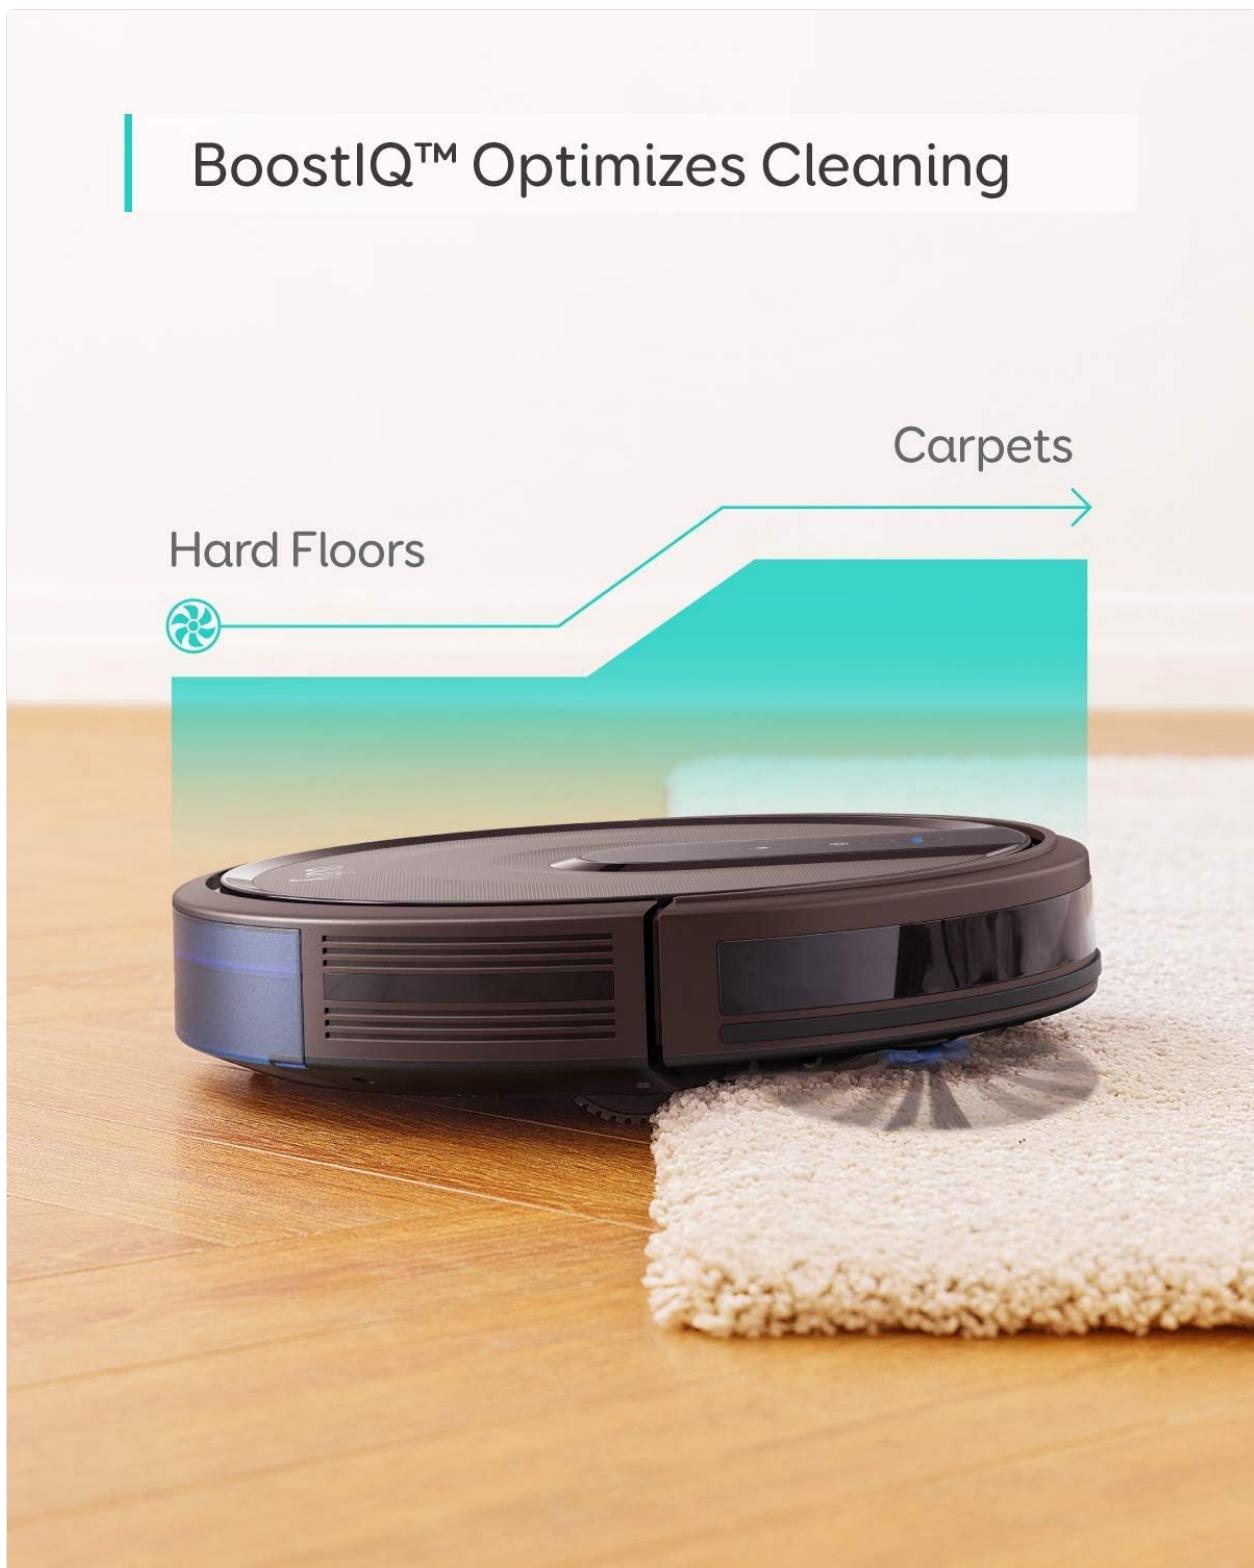


Image 6.2: BoostIQ Technology intelligently adjusts suction power, providing stronger cleaning on carpets and efficient cleaning on hard floors.

6.4 Using the Remote Control

The included remote control allows for convenient operation of the RoboVac from a distance. Functions include starting/stopping cleaning, selecting cleaning modes, and directing the RoboVac manually.

7. MAINTENANCE

Regular maintenance ensures your RoboVac operates at peak performance.

7.1 Emptying the Dustbin

Empty the dustbin after each use or when the 'full' indicator illuminates.

1. Press the dustbin release button and pull out the dustbin.
2. Open the dustbin cover and empty its contents into a waste bin.

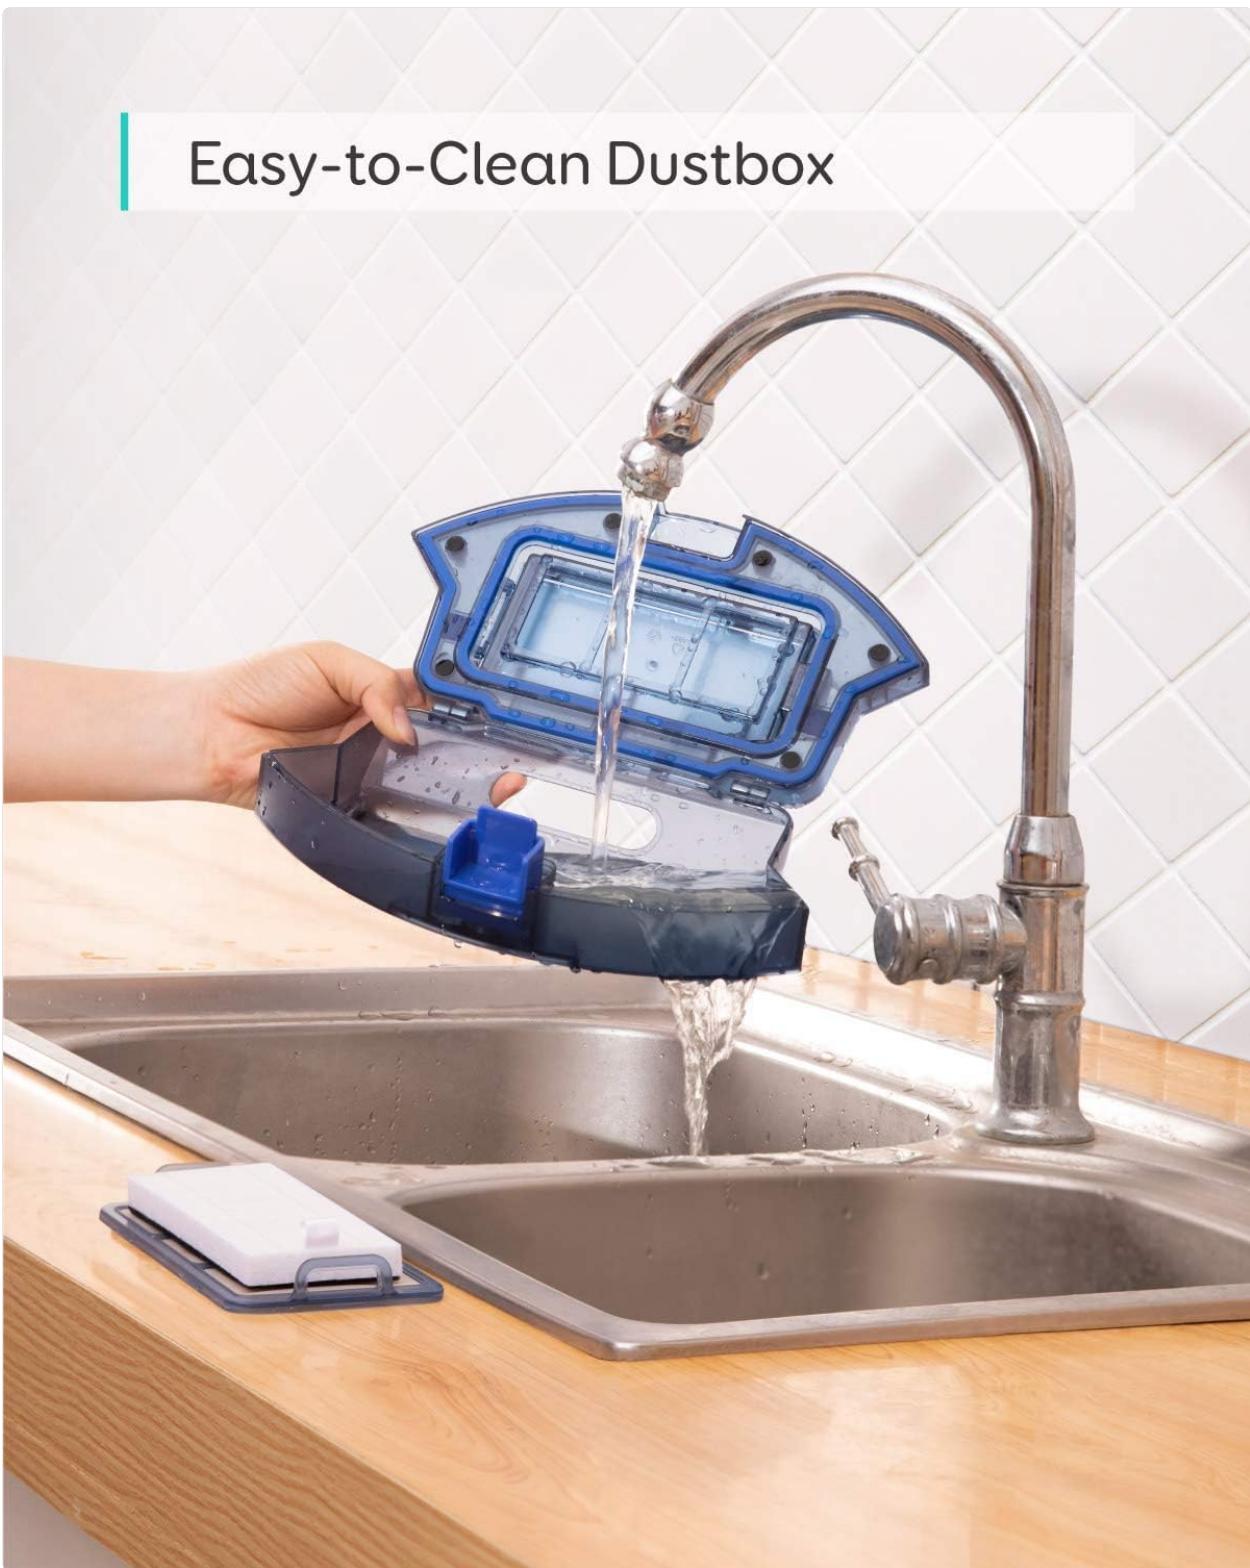


Image 7.1: The RoboVac's dustbox is designed for easy removal and cleaning under running water, simplifying maintenance.

7.2 Cleaning Filters

Clean the filters weekly. Replace them every 2-3 months for optimal performance.

1. Remove the dustbin.
2. Take out the pre-filter and high-performance filter.
3. Tap the filters to remove dust. Do not wash the high-performance filter with water.

7.3 Cleaning Side Brushes

Inspect and clean side brushes regularly. Remove any hair or debris wrapped around them.

7.4 Cleaning Rolling Brush

Remove the rolling brush cover and lift out the rolling brush. Use the cleaning tool to cut and remove any hair or debris.

7.5 Cleaning Sensors and Charging Contacts

Wipe the drop sensors, infrared sensors, and charging contacts on both the RoboVac and the charging base with a dry cloth to ensure proper function.

8. TROUBLESHOOTING

If your RoboVac encounters issues, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
RoboVac does not turn on	Low battery; Power switch off	Charge RoboVac; Ensure power switch is on
RoboVac cannot charge	Charging contacts dirty; Charging base not powered	Clean charging contacts; Ensure charging base is plugged in
RoboVac gets stuck frequently	Too many obstacles; Cables tangled	Clear area of small objects; Use cable ties to secure cords
Poor cleaning performance	Dustbin full; Filters clogged; Brushes tangled	Empty dustbin; Clean/replace filters; Clean rolling/side brushes

9. SPECIFICATIONS

Feature	Specification
Model	RoboVac 15T
Suction Power	1500Pa (Max)
Battery Life	Up to 100 minutes (Standard mode on hardwood floors); Approx. 60 minutes (BoostIQ mode on carpeting)
Dustbin Capacity	0.6L

Feature	Specification
Height	2.85 inches
Control Method	Remote Control, Touchpad Control
Compatible Surfaces	Low- to medium-pile carpets, tile, laminate, hardwood floors
Filter Type	Foam, High-Performance
Power Source	Corded Electric (for charging base)
Item Weight	8.54 pounds

10. WARRANTY AND SUPPORT

The eufy BoostIQ RoboVac 15T comes with a worry-free 12-month warranty.

For technical support, warranty claims, or additional information, please visit the official eufy website or contact their customer service. Keep your purchase receipt for warranty validation.