



Manuals.plus /

› bravokids /

› Bravokids 10-Inch LCD Writing Tablet Instruction Manual (Model LCD01)

bravokids LCD01

Bravokids 10-Inch LCD Writing Tablet Instruction Manual

Model: LCD01

INTRODUCTION

Thank you for choosing the Bravokids 10-Inch LCD Writing Tablet. This electronic drawing pad is designed to provide a fun and mess-free creative experience for children. It features an eye-protection colorful screen, durable construction, and simple operation, making it an ideal educational tool and entertainment device.



Image: The Bravokids 10-Inch LCD Writing Tablet in orange, showcasing its sleek design and included stylus.

WHAT'S IN THE BOX

- 1 x Bravokids 10-Inch LCD Writing Tablet
- 1 x Stylus

SETUP

1. **Unpack:** Carefully remove the LCD Writing Tablet and stylus from its packaging.
2. **Battery Installation:** The tablet comes with a pre-installed non-standard battery. For first use, ensure the battery compartment (located on the side/back) is securely closed. The battery door is fixed by a screw for child safety. The battery has an approximate 6-month lifespan and is replaceable.
3. **Stylus Attachment:** The stylus can be stored in the integrated holder on the side of the tablet. Some models may include a lanyard to attach the stylus to the tablet, preventing loss.



Image: Details of the tablet's features, including the erase button, battery slot, and lock switch.

OPERATING INSTRUCTIONS

1. **Writing/Drawing:** Use the provided stylus, your fingernail, or any non-sharp object to write or draw directly on the 10-inch LCD screen. The lines will appear in various colors, and their thickness will vary based on the pressure applied.
2. **Erasing Content:** To clear the screen, press the erase button located at the bottom center of the tablet. The screen will instantly clear, allowing for new creations.
3. **Lock Function:** To prevent accidental erasure of your drawing or notes, slide the lock key (usually located on the side of the tablet) to the "lock" position. While locked, the erase button will be inactive. To enable erasing again, slide the lock key back to the "unlock" position.

Your browser does not support the video tag.

Video: A demonstration of the LCD Writing Tablet in use, showing how to write, draw, and erase content with ease.

Your browser does not support the video tag.

Video: A detailed look at the LCD Writing Tablet's features, including the lock function and stylus usage.

MAINTENANCE

- **Cleaning:** Wipe the screen with a soft, dry cloth. Avoid using abrasive cleaners or solvents.
- **Battery Replacement:** When the screen no longer clears effectively, it's time to replace the battery. Locate the battery compartment on the side/back, unscrew the cover, and replace the non-standard battery (CR 2025 3V). Ensure proper polarity.
- **Durability:** The drawing board is made of durable plastic with a round corner design, making it anti-fall and anti-shock. However, avoid excessive force or dropping from significant heights.
- **Water Resistance:** The tablet features an excellent waterproof function, allowing for easy cleaning of spills.



Image: A visual guide to the tablet's functional buttons and battery access.

TROUBLESHOOTING

Problem	Solution
Screen does not clear when erase button is pressed.	Check if the lock key on the side of the tablet is in the "lock" position. Slide it to "unlock" and try pressing the erase button again. If the issue persists, the battery may need replacement.
Lines are faint or inconsistent.	Ensure you are using adequate pressure with the stylus. If lines remain faint, the battery may be low and require replacement.
Stylus is lost.	The stylus can be replaced. Consider attaching it with a lanyard (if available) to prevent future loss.

SPECIFICATIONS

- **Product Dimensions:** 9.8 x 7 x 0.25 inches (7"W x 9.8"H)
- **Item Weight:** 5.3 ounces
- **Model Number:** LCD01
- **Manufacturer Recommended Age:** 3 years and up
- **Batteries:** 1 Nonstandard Battery (CR 2025 3V) required
- **Material:** Plastic
- **Color:** Orange (for this specific model)

- **Recommended Uses:** Home, School, Travel

WARRANTY & SUPPORT

Bravokids offers a **3-year worry-free policy** for product issues, including free replacement parts. For any questions, concerns, or support needs regarding your LCD Writing Tablet, please contact Bravokids customer service through the retailer's platform or visit the official Bravokids store online.



Image: Bravokids warranty information, highlighting 3 years worry-free and free replacement parts.

SAFETY INFORMATION

- The battery door is secured with a screw to ensure child safety. Keep small parts, including batteries, out of reach of young children to prevent choking hazards.
- Do not expose the tablet to extreme temperatures or direct sunlight for prolonged periods.
- Avoid using sharp objects on the screen, as this may cause permanent damage.
- This product is recommended for children aged 3 years and up.