

## ENEGON LP-E17

# ENEGON LP-E17 Camera Battery and Dual Charger User Manual

Model: LP-E17 | Brand: ENEGON

Comprehensive instructions for the ENEGON 2 Pack LP-E17 Camera Battery with Micro USB Dual Charger, compatible with various Canon EOS and Rebel series cameras.

## 1. PRODUCT OVERVIEW

The ENEGON LP-E17 Camera Battery and Dual Charger kit provides a reliable power solution for your Canon digital SLR camera. This kit includes two 1040mAh LP-E17 batteries and a micro USB dual charger, designed to extend your shooting time and offer flexible charging options.



Image: The ENEGON LP-E17 dual battery charger, shown with two battery slots and a micro USB charging cable. This image illustrates the primary components of the product kit.

## 2. SETUP AND FIRST USE

---

Before using your ENEGON LP-E17 batteries and charger, please follow these initial setup steps:

1. **Unpack and Inspect:** Carefully remove all components from the packaging. Verify that you have two LP-E17 batteries, one dual battery charger, and one micro USB cable. Inspect all items for any visible damage.
2. **Initial Battery Charge:** For optimal performance, it is recommended to fully charge both batteries before their first use.
  - Connect the micro USB cable to the charger's input port.
  - Connect the other end of the USB cable to a compatible USB power source (e.g., wall adapter, computer USB port, power bank).
  - Insert the LP-E17 batteries into the charger slots. Ensure they are correctly oriented.

- The LED indicator for each slot will turn red, indicating charging is in progress. Once fully charged, the LED will turn green.

# Multiple Charging Options

Can be charged by USB adapter, power bank, laptop USB port, car charger or other devices with USB port, perfect for outdoor power supply.



Image: The ENEGON dual charger demonstrating its versatility by connecting to different power sources, including a wall adapter, car charger, power bank, and laptop. This highlights the multiple charging options available.

## 3. OPERATING INSTRUCTIONS

### 3.1. Charging the Batteries

The ENEGON dual charger allows for convenient charging of your LP-E17 batteries:

- **Connect Power:** Use the provided micro USB cable to connect the charger to any standard USB power source (5V/2A recommended). This can be a wall adapter, car charger, power bank, or a computer's USB port.
- **Insert Batteries:** Place one or two LP-E17 batteries into the designated charging slots on the charger. Ensure the battery contacts align with the charger pins.
- **LED Indicators:**

- A **red light** indicates that the battery is currently charging.
- A **green light** indicates that the battery is fully charged.
- If the charger is powered on without any batteries inserted, the lights will be green.

# Clear at a Glance

Showing the real-time charging status



Charging

Charging Complete

The charging indicator shows RED during charging  
and GREEN when fully charged

Image: A detailed view of the ENEGON dual charger's LED indicators. The image shows the difference between a red light (charging) and a green light (charging complete), providing clear visual cues for battery status.

## 3.2. Battery Compatibility

These LP-E17 batteries are designed to be compatible with a wide range of Canon cameras. Please note that while the batteries function effectively, they are **not fully decoded**, meaning some camera models may not display the exact battery level on the camera's screen. However, they will still power your device reliably.

Compatible Canon Camera Models:

- Canon EOS R50, RP, R10, R8
- Canon Rebel T8i, T7i, T6i, T6s, SL2, SL3
- Canon EOS M3, M5, M6, M6 Mark II
- Canon EOS 200D, 77D, 750D, 760D, 800D, 850D, 8000D, KISS X8i

# Long Runtime with 2 Batteries

Capture More Photos , Shoot Longer Videos



**950x2**

Take Photos



**2 Hours**

Video Shooting

Image: A visual representation of several Canon camera models (250D, R100, R50, RP) that are fully compatible with the ENEGON LP-E17 batteries. This graphic helps users identify if their camera is supported.

With two 1040mAh batteries, you can significantly extend your shooting sessions, capturing more photos and longer videos without interruption.

# Fully Compatible

with Canon Rebel SL2, T6i, T6s, T7i, EOS R10, R8, RP, R50, R100, M3, M5, M6, 200D, 250D, 77D, 750D, 760D, 800D, 8000D und mehr



250D



R100



R50



RP

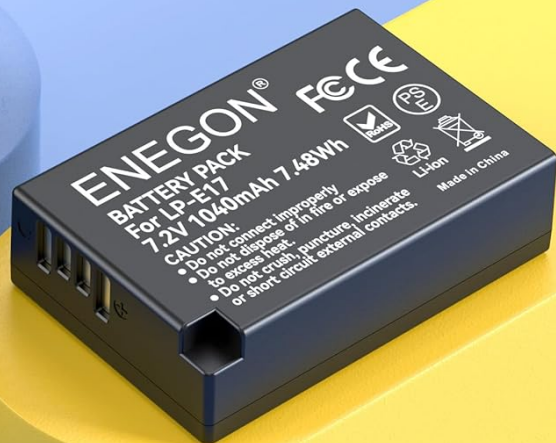


Image: An illustration highlighting the extended runtime provided by the two ENEGON batteries, indicating the ability to take approximately 950x2 photos or record 2 hours of video. This demonstrates the practical benefit of having spare batteries.

## 4. MAINTENANCE AND CARE

Proper care and maintenance will ensure the longevity and optimal performance of your ENEGON batteries and charger:

- **Storage:** Store batteries in a cool, dry place away from direct sunlight and extreme temperatures. For long-term storage, it is recommended to charge batteries to about 50-60% capacity.
- **Cleaning:** Use a soft, dry cloth to clean the battery contacts and charger pins regularly. Avoid using abrasive cleaners or solvents.
- **Avoid Over-Discharge:** While the batteries have built-in protection, try to recharge them before they are completely drained to prolong their lifespan.
- **Handle with Care:** Avoid dropping the batteries or charger, and protect them from physical impact.

## 5. TROUBLESHOOTING

If you encounter any issues with your ENEGON LP-E17 batteries or charger, refer to the following common solutions:

Problem	Possible Cause	Solution
Battery not charging (LED remains green or off)	Loose connection, faulty cable/power source, incorrect battery insertion.	Ensure the micro USB cable is securely connected to both the charger and the power source. Try a different USB cable or power adapter. Re-insert the battery, ensuring correct orientation.
Camera does not display battery level accurately	Batteries are not fully decoded.	This is expected behavior for some compatible camera models. The batteries will still function and power your camera. Monitor usage time or carry a spare.
Short battery life	Battery not fully charged, high power consumption settings on camera, battery degradation over time.	Ensure batteries are fully charged (green LED). Adjust camera settings (e.g., screen brightness, video recording quality) to reduce power consumption. If batteries are old, consider replacement.

The ENEGON LP-E17 batteries and charger are equipped with an intelligent protection system to safeguard against over-charge, over-heating, short-circuit, over-voltage, and over-current, ensuring safe operation for both the product and your devices.

# Safe and Reliable

Built-in Multiple Protections from the Smart IC Chip



Image: A visual representation of the comprehensive safety features built into the ENEGON battery and charger, including protections against overcharge, short circuits, high temperatures, overcurrent, overvoltage, and electrical shock. This highlights the product's reliability and user safety.

## 6. PRODUCT SPECIFICATIONS

Feature	Detail
Model Number	LP-E17
Battery Type	Lithium Ion
Battery Capacity	1040mAh (each battery)
Battery Voltage	7.2 Volts
Charger Input	Micro USB (5V/2A recommended)

Feature	Detail
Product Dimensions (Charger)	5.43 x 1.89 x 3.15 inches
Item Weight (Total)	4.4 ounces
Manufacturer	ENEGON
Date First Available	December 30, 2019

## 7. WARRANTY AND SUPPORT

ENEGON products are designed for reliability and performance. For information regarding warranty coverage and customer support, please refer to the warranty card included with your product or visit the official ENEGON website. For technical assistance, troubleshooting not covered in this manual, or warranty claims, please contact ENEGON customer service through the retailer where you purchased the product or directly via the ENEGON brand store on Amazon:


Visit the ENEGON Store on Amazon



© 2025 ENEGON. All rights reserved.  
This manual is for informational purposes only. Specifications are subject to change without notice.

### Documents - ENEGON – LP-E17

[\[pdf\]](#) User Manual

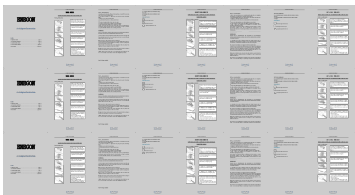

Manuale utente ENEGON Doppio Pacco Batteria Fotocamera LP E17 1040mAh con Caricatore Micro USB per Canon Rebel SL2 T6i T6s T7i EOS M3 M5 M6 200D 250D 77D 750D 760D 800D 8000D KISS X8i Amazon it Elettronica 81cwKU4AKRL m media amazon images I |||

ENEGON Ac Adapter Instruction index 1.English user manual .....page 1-3 2.German Benutzerhandbuch .....page 4-6 4.Spanish m...

lang:de score:24 filesize: 347.67 K page\_count: 2 document date: 2022-06-23

