

[Manuals.plus](#) /

> [tectake](#) /

> tectake Set of 2 Adjustable Sun Loungers with Headrest, Model 403063

tectake 403063

tectake Set of 2 Adjustable Sun Loungers with Headrest - Model 403063

Instruction Manual

1. INTRODUCTION

Thank you for choosing the tectake Set of 2 Adjustable Sun Loungers. This manual provides essential information for the safe assembly, operation, and maintenance of your new outdoor furniture. Please read these instructions carefully before use and retain them for future reference.

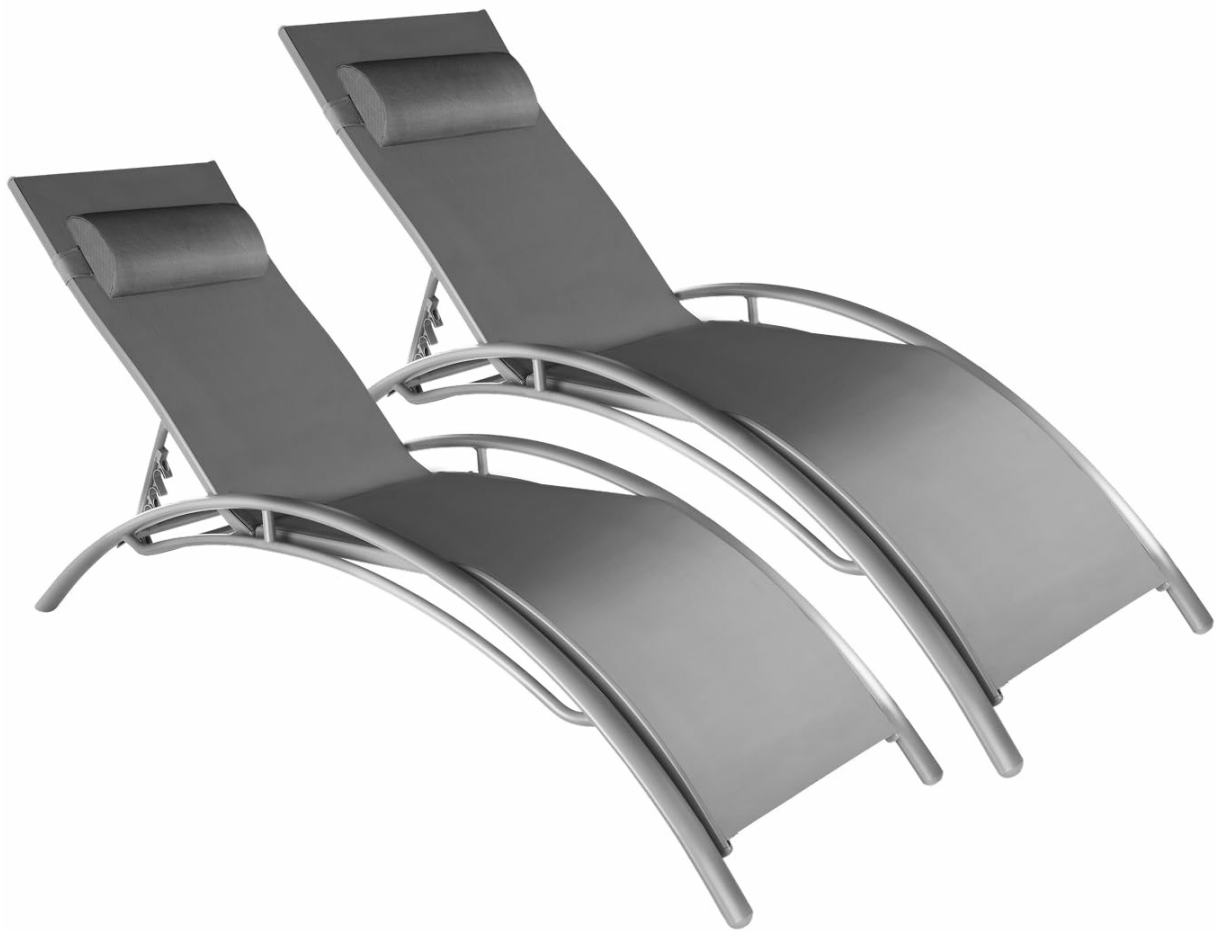


Image 1: tectake Adjustable Sun Lounger

2. SAFETY INFORMATION

To ensure your safety and prevent damage to the product, please observe the following:

- Observe the maximum load capacity of **120 kg (264 lbs)** per lounger. Exceeding this limit can cause damage or injury.
- Ensure the lounger is placed on a **stable, level, and non-slip surface** before use. Uneven surfaces can lead to instability.
- Keep hands and fingers clear of moving parts, especially when adjusting the backrest, to prevent pinching.
- Do not allow children to play unsupervised on or around the loungers.
- Inspect the loungers regularly for any signs of wear, damage, or loose components. Do not use if damaged.

3. PACKAGE CONTENTS

Before assembly, verify that all components are present and undamaged. The package should contain:

- 2 x Sun Loungers (frame and fabric)
- 2 x Head Cushions

- Assembly Hardware (screws, washers, nuts, tools if included)
- Assembly Instructions (this manual)

tectake
jardin

Détails du produit

DIMENSIONS

Dimensions totales en position la plus haute
59 x 158 x 81,5 cm

Dimensions totales en position la plus basse
59 x 180 x 50 cm

Surface de couchage
45 x 101 cm

Dossier
45 x 80 cm


Appuie-tête
36 x 5 x 18 cm

TECHNICITÉS

Capacité de charge 120 kg
Poids env. 12 kg
Matériaux aluminium revêtu par poudre, polyéthylène, polychlorure de vinyle

CONTENU

2 chaises longues avec appuie-tête
Matériel de montage
Notice de montage

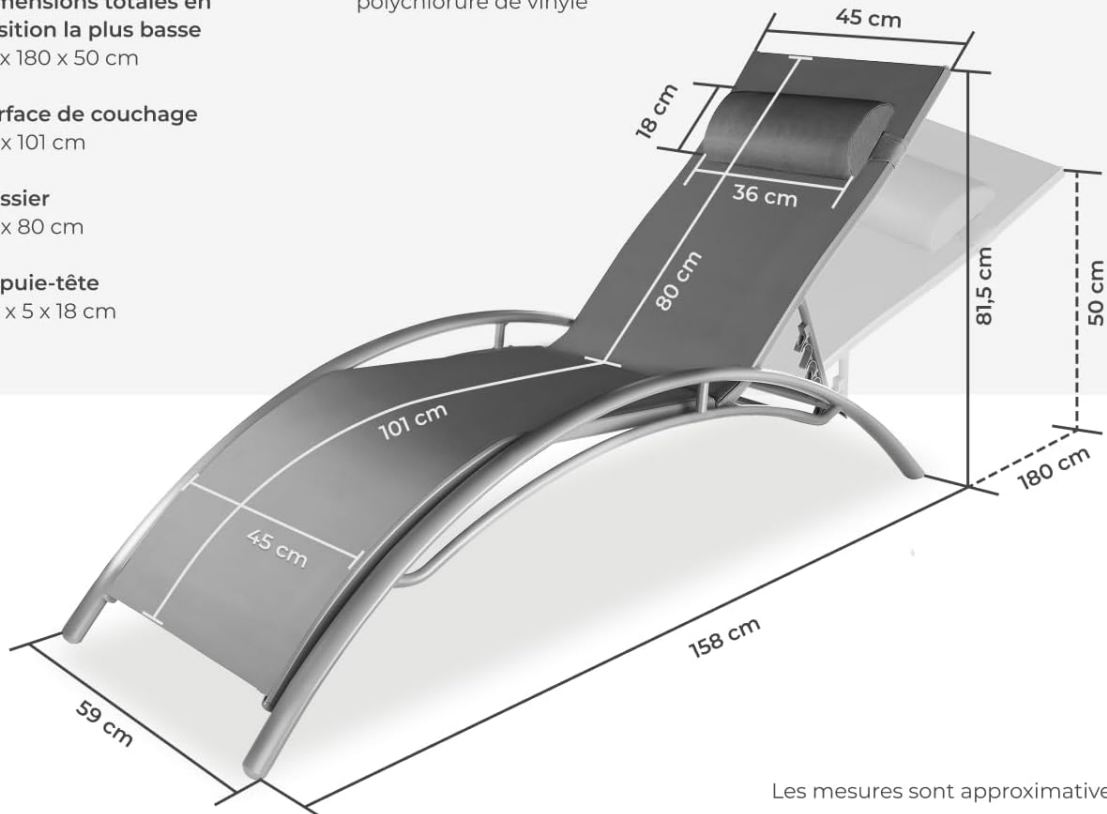

Les mesures sont approximatives

Image 2: Product Dimensions and Components Overview

4. SETUP AND ASSEMBLY

The sun loungers are designed for straightforward assembly. Follow these steps for quick setup. It is recommended to have two people for assembly to ensure stability and ease of handling.

1. **Unpack Components:** Carefully remove all parts from the packaging. Lay them out on a clean, soft surface to prevent scratches.
2. **Identify Parts:** Refer to the included parts list and diagrams to identify each component (frame sections, fabric, hardware).
3. **Assemble Frame:** Connect the main frame sections using the provided screws, washers, and nuts. Do not fully tighten screws until all sections are loosely assembled.
4. **Attach Fabric:** Secure the fabric seating and backrest to the frame according to the diagrams. Ensure the fabric is taut and evenly distributed.
5. **Install Adjustment Mechanism:** Attach the backrest adjustment mechanism, ensuring it moves freely and locks securely into positions.

6. **Final Tightening:** Once all parts are in place and aligned, fully tighten all screws and nuts. Do not overtighten.

7. **Attach Headrest:** Place the removable head cushion onto the top of the lounger.

After assembly, gently test the lounger's stability before full use.

5. OPERATING INSTRUCTIONS

Your tectake sun lounger offers adjustable comfort for optimal relaxation.

Adjusting the Backrest

The backrest can be adjusted to **5 different positions** to suit your preference, from upright seating to a fully reclined position.

1. To adjust, slightly lift the backrest to disengage the locking mechanism.
2. Move the backrest to your desired angle.
3. Gently lower the backrest until the mechanism clicks into place, securing the position.



CONFORT **flexible.**

Le coussin d'appui-tête amovible, associé au dossier réglable en 5 positions, permet une relaxation sur mesure.



100 % **ergonomique.**

Le design incurvé de la chaise longue s'adapte parfaitement à toutes les morphologies et garantit ainsi un soutien optimal du dos.



Image 3: Backrest Adjustment Mechanism

Using the Headrest

The included head cushion provides additional comfort and support. It is removable and can be positioned as desired along the top of the backrest.



Image 4: Removable Headrest and Stability Features

6. MAINTENANCE

Proper care will extend the life and appearance of your sun loungers.

Cleaning

- **Frame:** Clean the aluminum frame with a soft cloth, mild soap, and water. Rinse thoroughly and dry completely to prevent water spots. Avoid abrasive cleaners or harsh chemicals.
- **Fabric:** The weather-resistant fabric can be cleaned with a soft brush or sponge, mild soap, and water. Rinse well and allow to air dry completely before storing or covering.
- **Headrest:** The head cushion can be spot cleaned with mild soap and water.

Weather Resistance and Storage

The loungers feature a powder-coated aluminum frame and durable fabric designed to withstand outdoor conditions. However, to maximize longevity:

- During periods of heavy rain, strong winds, or winter months, it is recommended to store the loungers

indoors or cover them with a protective outdoor furniture cover.

- Ensure the loungers are dry before covering or storing to prevent mold or mildew.



Image 5: Outdoor Use and Weather Resistance

7. TROUBLESHOOTING

If you encounter issues with your sun loungers, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Difficulty during assembly	Incorrect part orientation; screws not aligned; instructions misunderstood.	Review the assembly diagrams carefully. Ensure parts are oriented correctly before tightening. Do not fully tighten screws until all components are in place. Seek assistance if needed.
Lounger feels unstable or wobbly	Loose connections; uneven surface.	Check and tighten all screws and bolts. Ensure the lounger is placed on a flat, stable surface.

Problem	Possible Cause	Solution
Backrest adjustment mechanism not working smoothly	Mechanism obstructed; dirt or debris; damaged part.	Ensure no fabric or foreign objects are obstructing the mechanism. Clean any dirt or debris. If damaged, contact customer support.
Screw covers detach easily	Loose fit.	These are primarily decorative. If they consistently detach, a small amount of adhesive can be used to secure them, ensuring it does not interfere with future disassembly if required.

8. SPECIFICATIONS

Feature	Detail
Brand	tectake
Model Number	403063-4
Color	Grey
Materials	Powder-coated aluminum frame, polyethylene, polyvinyl chloride (fabric)
Overall Dimensions (L x W x H)	180 cm x 59 cm x 81.5 cm (max height)
Item Weight	12 Kilograms
Maximum Load Capacity	120 Kilograms
Number of Recline Positions	5
Components Included	2 sun loungers with head cushions, assembly hardware, assembly instructions
Recommended Use	Outdoor relaxation

9. WARRANTY

This product is covered by the standard legal warranty in accordance with applicable consumer protection laws. Please retain your proof of purchase for any warranty claims. For specific warranty details, refer to the terms and conditions provided at the point of purchase or contact your retailer.

10. SUPPORT

If you have any questions, require assistance with assembly, or need to report a missing or damaged part, please contact the retailer or manufacturer's customer service. Have your model number (403063-4) and proof of purchase ready when contacting support.

For further information, you may visit the tectake brand store online.

