

## Bell+Howell 2839

# Bell+Howell Tacshaver 3D Rechargeable Rotary Shaver Instruction Manual

Model: 2839

## 1. INTRODUCTION

The Bell+Howell Tacshaver is a compact and versatile 2-in-1 rotary shaver and trimmer designed for men. It offers the convenience of an electric shaver with the ability to be used wet or dry. Its micro-technology design makes it highly portable, suitable for both home use and travel. The device features multi-directional stainless steel rotary heads for efficient shaving and an integrated pop-up trimmer for detailing.



Image 1.1: Bell+Howell Tacshaver 3D Rechargeable Rotary Shaver and its retail packaging.

## 2. SAFETY INFORMATION

- Avoid using the shaver near water while charging to prevent electrical hazards.
- Keep the device out of reach of children.
- Do not disassemble or attempt to repair the shaver yourself. Contact qualified personnel for service.
- Ensure the USB cable is not damaged before charging.
- Do not expose the shaver to extreme temperatures or direct sunlight.

## 3. PACKAGE CONTENTS


The Bell+Howell Tacshaver package typically includes the following items:

- Bell+Howell Tacshaver Unit
- Storage Pouch

- Cleaning Brush
- USB Cable (for recharging)


#### 4. PRODUCT FEATURES

- **Rechargeable:** Cordless operation for convenience.
- **Compact Design:** Smaller than a credit card (2"W x 3-1/2"L) for portability.
- **Waterproof:** Suitable for wet or dry shaving, including use in the shower or underwater.
- **Stainless Steel Blades:** Durable and effective cutting elements.
- **Multi-directional Rotary Heads:** Three rotary heads adapt to facial contours for a smooth shave.
- **Pop-up Trimmer:** Integrated trimmer for precise styling of sideburns, moustaches, and beards.

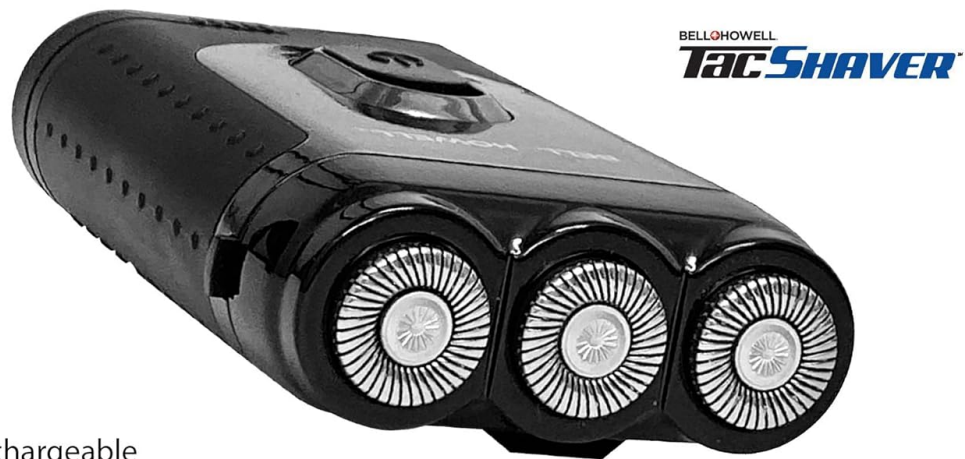

- Rechargeable
- Cordless, compact - size of a credit card
- VERY easy to use and clean
- Close shave like that of razor, with the convenience of being rechargeable
- Water - proof, use wet or dry
- Uses stainless steel blades
- With three multidirectional stainless steel rotary heads for a smoother shaver
- With build - in pop up trimmer for sharper sideburns or beards edges
- No more cuts or bleeding
- Includes: storage pouch, cleaning brush, charging USB cable

Image 4.1: Key features of the Bell+Howell Tacshaver.

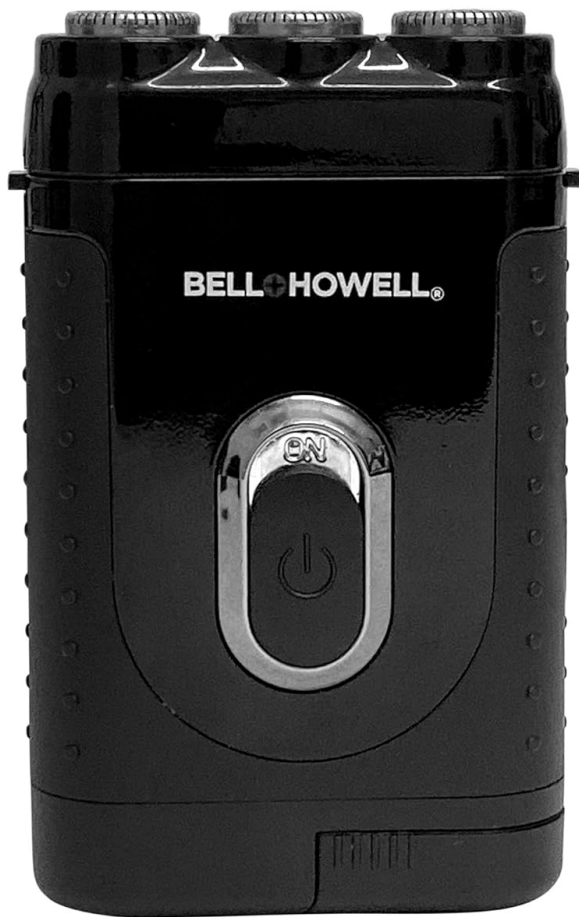

Rechargeable



Water - Proof,  
Use Wet or Dry



Image 4.2: The shaver is rechargeable and waterproof for versatile use.



Image 4.3: The shaver features three powerful rotary heads for an effective shave.

## 5. SETUP

### 5.1 Initial Charging

1. Connect the provided USB cable to the charging port on the shaver.
2. Plug the other end of the USB cable into a compatible USB power source (e.g., computer, wall adapter).
3. Allow the shaver to charge fully before its first use. The charging indicator (if present) will typically show when charging is complete.

### 5.2 Battery Installation (if applicable)


The Bell+Howell Tacshaver is rechargeable and does not require separate battery installation for its primary function. However, some models may use AA batteries for specific features or as a backup. Refer to the product's physical markings for battery type if replacement is needed.

## 6. OPERATING INSTRUCTIONS

### 6.1 Shaving

1. Ensure the shaver is fully charged.
2. Press the power button to turn on the shaver.
3. For optimal results, hold the shaver at a right angle to your skin and move it in small, circular motions against the direction of hair growth.
4. The shaver can be used for dry shaving or with shaving gel/foam for a wet shave.
5. After shaving, press the power button to turn off the shaver.



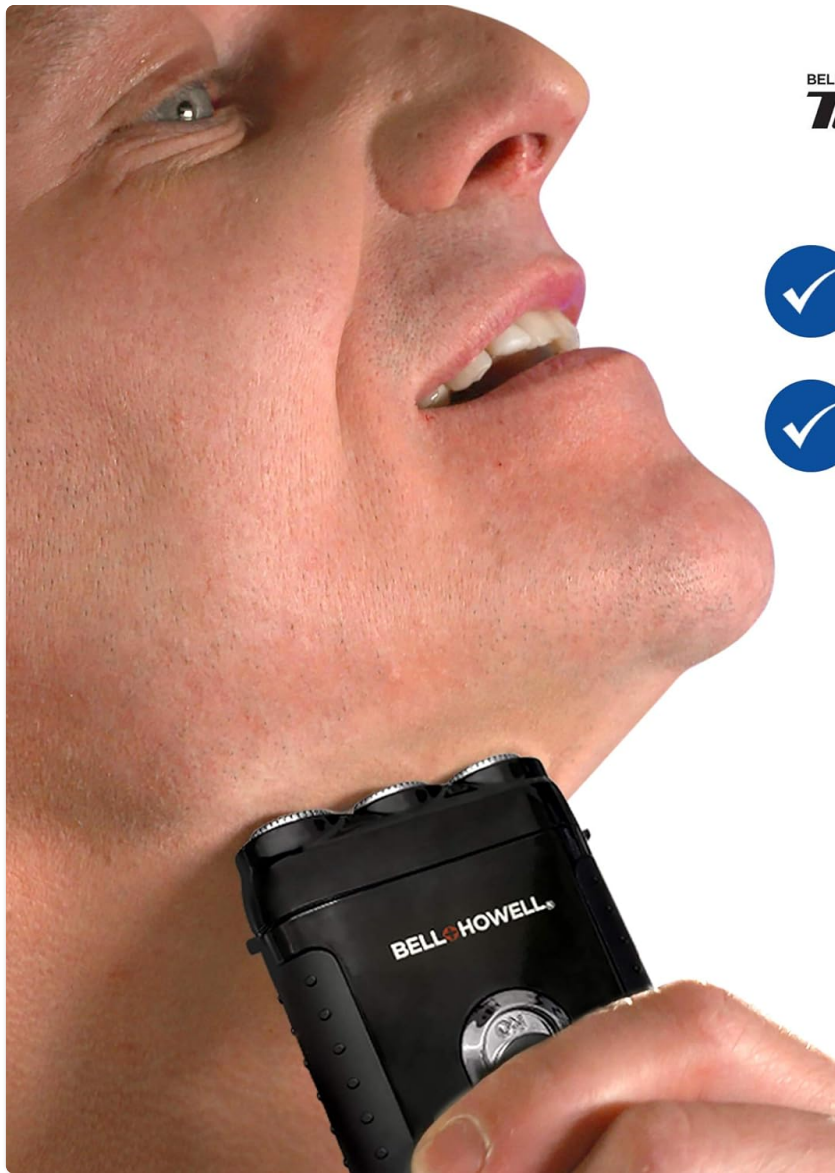

BELL+HOWELL  
**TacSHaver™**



Uses Stainless Steel Blades



Very Easy To Use and Clean

Image 6.1: Proper technique for using the Bell+Howell Tacshaver.



Image 6.2: The shaver supports both wet and dry shaving methods.

## 6.2 Using the Pop-up Trimmer

1. Locate the pop-up trimmer switch on the side of the shaver.
2. Slide the switch upwards to engage the trimmer.
3. Use the trimmer for precise edging of sideburns, moustaches, and beard lines.
4. Once finished, slide the switch downwards to retract the trimmer.

BELL+HOWELL  
**TacSHAPER**



Image 6.3: The integrated pop-up trimmer for detailing.

## 6.3 Official Product Video

Your browser does not support the video tag.

Video 6.4: Official product overview of the Bell+Howell Tacshaver, demonstrating its features and use.

## 7. MAINTENANCE

### 7.1 Cleaning the Shaver

1. Turn off the shaver and disconnect it from any power source.
2. Gently remove the shaver head assembly.

3. Use the provided cleaning brush to remove any accumulated hair from the blades and the shaver body.
4. For a more thorough clean, the shaver head can be rinsed under running water due to its waterproof design. Ensure it is completely dry before reattaching.
5. Reattach the shaver head assembly securely.

### 7.2 Blade Replacement

Over time, shaver blades may dull and require replacement for optimal performance. The Bell+Howell Tacshaver uses HQ56 model replacement blades. To replace:

1. Turn off the shaver and remove the head assembly.
2. Carefully remove the old blades from the head.
3. Insert new HQ56 replacement blades, ensuring they are correctly seated.
4. Reattach the shaver head assembly.

## 8. TROUBLESHOOTING

- **Shaver not turning on:** Ensure the shaver is fully charged. Check the power button for proper engagement.
- **Poor shaving performance:** Clean the shaver heads and blades thoroughly. Consider replacing the blades if they are dull. Ensure the shaver is fully charged.
- **Irritation during shaving:** Ensure blades are clean and sharp. Try using a wet shave with foam or gel. Shave in the direction of hair growth if irritation persists.
- **Charging issues:** Verify the USB cable is securely connected to both the shaver and the power source. Try a different USB cable or power source.

## 9. SPECIFICATIONS

Feature	Detail
Type	2 in 1 Shaver & Trimmer
Head Type	Rotary
Head Count	3
Dimensions	2"W x 3-1/2"L
Materials	ABS Plastic & Stainless Steel
Battery Type	Rechargeable
USB Cable Size	39" L
Model Number	2839



UPC	080313028397
-----	--------------

## 10. WARRANTY AND SUPPORT

For warranty information, product support, or to purchase replacement parts, please refer to the contact information provided with your product packaging or visit the official Bell+Howell website. Keep your proof of purchase for any warranty claims.