

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

- > [Nillkin](#) /
- > Nillkin iSketch Stylus Pen User Manual

Nillkin iSketch

Nillkin iSketch Stylus Pen User Manual

Model: iSketch | Brand: Nillkin

1. INTRODUCTION

The Nillkin iSketch Stylus Pen is a versatile tool designed for use with various tablets and mobile devices. It offers precise control and a comfortable writing experience, making it suitable for drawing, writing, and navigating your device. This manual provides detailed instructions for setup, operation, maintenance, and troubleshooting to ensure optimal performance.



Image: Overview of Nillkin iSketch Stylus Pen key features.

2. PACKAGE CONTENTS

Please check the package for the following items:

- 1 x Capacitive Stylus Pen
- 1 x User Manual
- 1 x USB Charging Cable
- 1 x Replacement Nib
- 1 x Tweezer for Nib Replacement



Image: All items included in the Nillkin iSketch Stylus Pen package.

3. SETUP

3.1 Initial Charging

Before first use, fully charge the stylus pen. Refer to the 'Charging' section for detailed instructions.

3.2 Powering On/Off

The stylus features a single button for control. Press the power button located at the top of the pen to turn it on or off. No Bluetooth connection is required for operation.



Image: The single power button for controlling the stylus.

4. OPERATING INSTRUCTIONS

4.1 Sensitivity Adjustment

The Nillkin iSketch Stylus Pen offers three levels of sensitivity (L, M, H) to accommodate different devices and screen protectors. Adjust the sensitivity by rotating the pen's body to match your device's requirements for optimal performance.

- **Level L (Low Sensitivity):** Suitable for devices without a protective film. Provides highly responsive input with virtually no lag.
- **Level M (Medium Sensitivity):** Ideal for devices with ordinary tempered glass screen protectors. Ensures fluent writing.
- **Level H (High Sensitivity):** Recommended for devices with thicker tempered glass or privacy tempered glass. Offers perfectly precise input.

Note: Due to variations in device sensitivity and writing strength, the adjustment method is for reference. If writing is difficult, choose a higher sensitivity level. If handwriting disappears, choose a lower sensitivity level.



Image: Detailed explanation of sensitivity levels and their application.

4.2 General Usage

Once powered on and sensitivity adjusted, the stylus is ready for use. It can be used across various applications for tasks such as drawing, note-taking, document annotation, and general navigation.



Image: Using the stylus for note-taking and drawing on a tablet.

5. CHARGING

To charge your Nillkin iSketch Stylus Pen, follow these steps:

1. Remove the charging port cover located at the end of the stylus.
2. Connect the stylus to a USB power adapter using the provided USB charging cable.
3. A red light will illuminate during charging. The light will turn off once the stylus is fully charged.

A full charge takes approximately 2 hours and provides up to 10 hours of continuous use.



Image: Step-by-step guide for charging the stylus.

6. MAINTENANCE

6.1 Cleaning

Wipe the stylus body with a soft, dry cloth. Do not use harsh chemicals or abrasive materials, as this may damage the finish.

6.2 Nib Replacement

If the stylus nib becomes worn or damaged, it can be replaced. Use the provided tweezers to gently pull out the old nib and insert a new one. Ensure the new nib is securely seated.

6.3 Storage

Store the stylus in a safe place to prevent damage. Avoid exposing it to extreme temperatures or direct sunlight.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Stylus not responding	Low battery; Stylus is off; Incorrect sensitivity setting.	Charge the stylus; Press the power button to turn it on; Adjust sensitivity level (L, M, H).
Lines are broken or not straight	Sensitivity too low for screen protector; Worn nib.	Increase sensitivity level; Replace the nib.
Stylus not charging	Cable or adapter issue; Charging port obstruction.	Try a different USB cable or power adapter; Ensure charging port is clean and free of debris.
Handwriting disappears	Sensitivity too high.	Decrease sensitivity level.

8. SPECIFICATIONS

- **Brand:** Nillkin
- **Model:** iSketch
- **Color:** Silver
- **Materials:** Carbon Fiber
- **Compatible Devices:** Multi-device (e.g., Samsung Galaxy Tab, other tablets and mobile phones)
- **Item Dimensions:** 11.5 x 6.8 x 4 cm
- **Battery Charge Time:** Approximately 2 hours
- **Battery Life:** Up to 10 hours (continuous use)
- **Included Components:** Stylus Pen, USB Charging Cable, Replacement Nib, Nib Tweezers, User Manual
- **ASIN:** B083CM8HTV
- **Part Number:** 2725611417815

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the contact details provided with your purchase or visit the official Nillkin website. Keep your purchase receipt as proof of purchase for any

warranty claims.