

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

- › [Devoko](#) /
- › Devoko Patio Furniture Sofa Set Instruction Manual

Devoko 1AS0BG

Devoko Patio Furniture Sofa Set Instruction Manual

Model: 1AS0BG

PRODUCT OVERVIEW

This manual provides detailed instructions for the assembly, operation, maintenance, and troubleshooting of your Devoko Patio Furniture Sofa Set. This set includes one corner sofa and one armless sofa, designed for outdoor use with all-weather durability.



Image: The assembled Devoko 2-piece patio sofa set in beige, featuring a corner sofa and an armless sofa with comfortable cushions.

PACKAGE CONTENTS

Before beginning assembly, please verify that all components listed below are present in your package. If any parts are missing or damaged, please contact customer service.

- 1 x Corner Sofa Unit
- 1 x Armless Sofa Unit
- Seat Cushions (Beige)
- Back Cushions (Beige)
- Assembly Hardware (bolts, washers, wrench)
- Instruction Manual



Image: Individual corner and armless sofa units, demonstrating the modular nature of the set before combination.

SETUP AND ASSEMBLY

Follow these steps to assemble your Devoko Patio Furniture Sofa Set. It is recommended to assemble the furniture on a soft, clean surface to prevent scratches.

1. **Unpack Components:** Carefully remove all parts from the packaging. Lay them out on a protected surface.
2. **Identify Sofa Units:** Distinguish between the corner sofa unit and the armless sofa unit.
3. **Connect Units (Optional):** If you wish to connect the two sofa units, align the connecting points on the sides of the frames. Use the provided hardware (bolts and washers) to secure them together. Tighten with the included wrench.
Note: The units can also be used separately.
4. **Place Cushions:** Position the seat cushions onto the base of each sofa unit. Place the back cushions against the backrests. Ensure cushions are properly aligned.
5. **Secure Cushions:** The cushions feature horn button fixings or ties to prevent them from sliding. Secure these as instructed in the detailed assembly guide provided in the package.

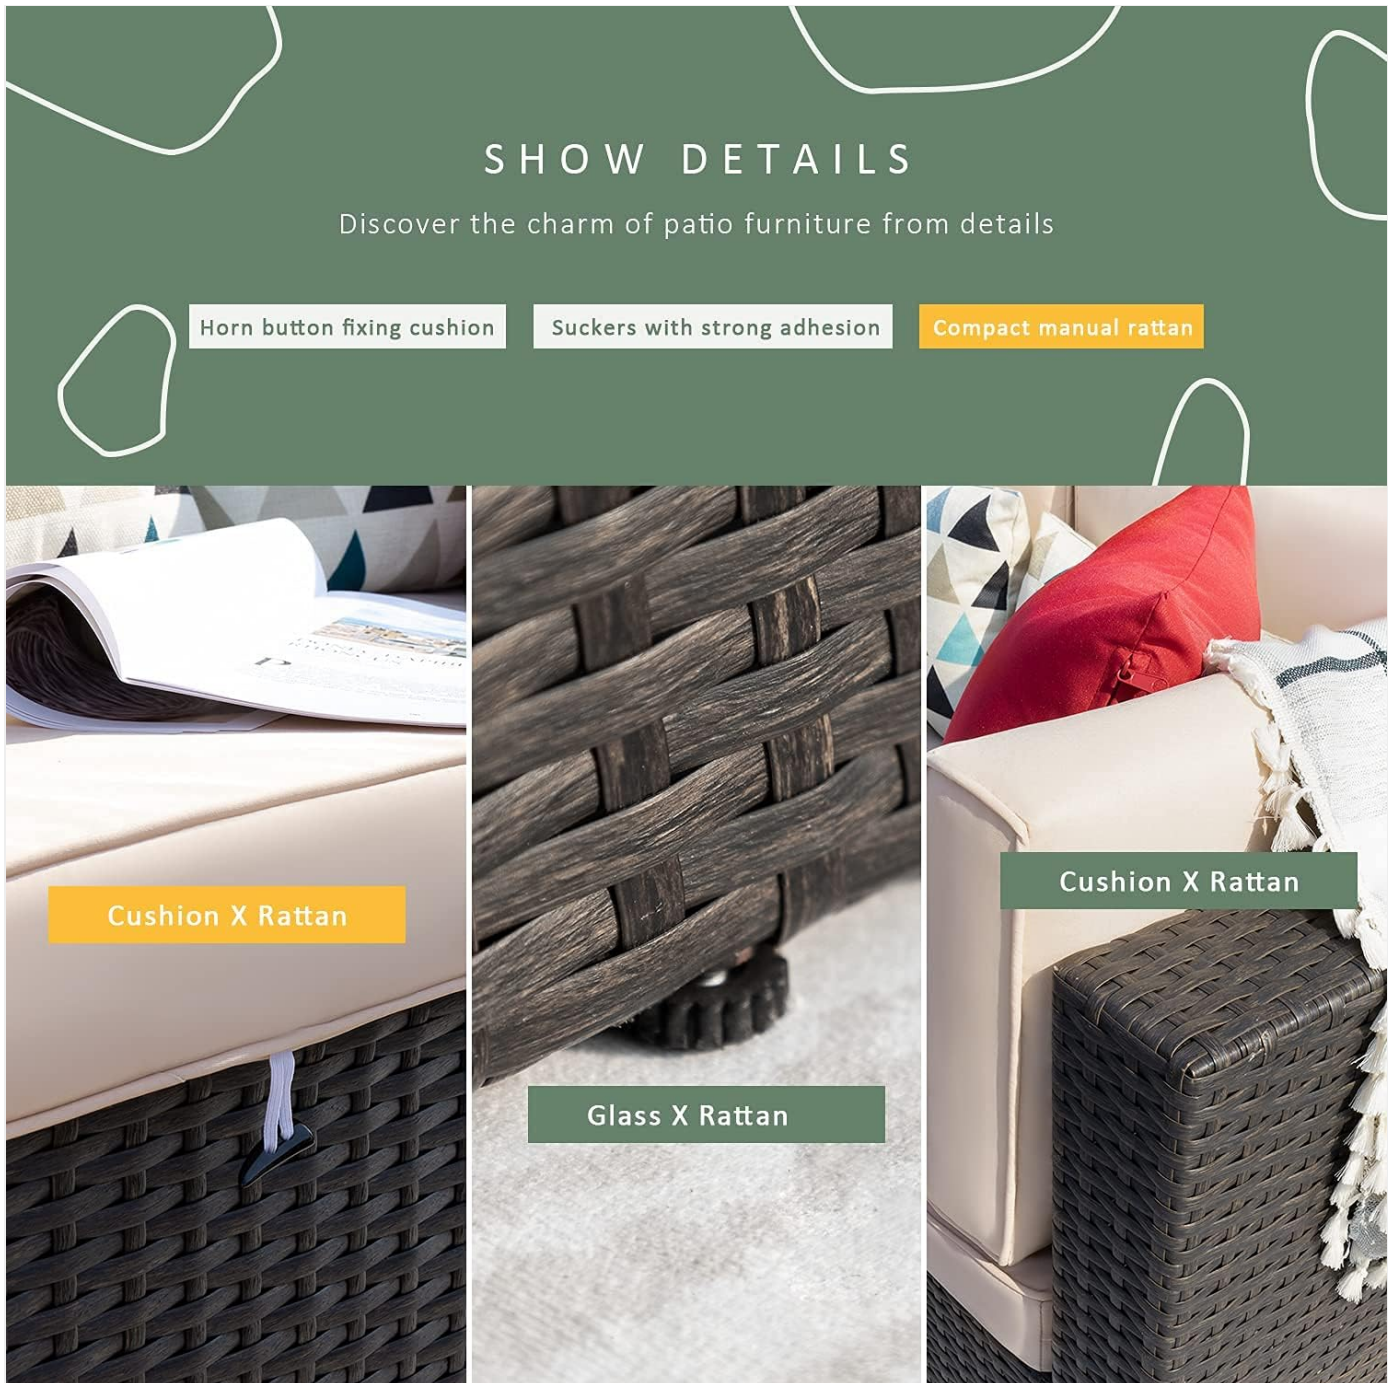


Image: Detailed view of the furniture's construction, highlighting cushion attachment mechanisms and the rattan weave, which are important for assembly and stability.

OPERATING INSTRUCTIONS

Your Devoko Patio Furniture Sofa Set is designed for versatile outdoor use. Here are guidelines for optimal enjoyment:

- **Arrangement:** The sectional design allows for flexible arrangement. The corner sofa and armless sofa can be configured together as a single unit or used independently to suit your space and needs.
- **Cushion Use:** The high-quality thickened seat and back cushions provide comfort. Ensure they are properly secured to prevent movement during use.
- **Placement:** Position the furniture on a flat, stable surface. Avoid placing it on uneven ground to prevent instability.



Image: The sofa set positioned on a patio, illustrating a common arrangement for outdoor leisure.

MAINTENANCE AND CARE

Proper maintenance will extend the life and appearance of your patio furniture.

- **Frame Cleaning:** Wipe the PE wicker frame with a soft cloth dampened with mild soap and water. Rinse thoroughly with clean water and dry completely to prevent water spots. Avoid harsh chemicals or abrasive cleaners.
- **Cushion Care:** The cushions are designed for outdoor use. For general cleaning, spot clean with a mild soap

solution and a soft brush or cloth. Allow to air dry completely. For deeper cleaning, refer to the care label on the cushions. Store cushions indoors during prolonged periods of non-use or inclement weather to protect them from fading and moisture.

- **Weather Protection:** While the furniture is all-weather resistant, covering it with a protective cover during heavy rain, snow, or extreme temperatures is recommended to further preserve its condition.
- **Regular Inspection:** Periodically check all bolts and connections to ensure they remain tight. Retighten as necessary.



Image: A close-up view of the sofa's cushions and rattan frame, highlighting the materials that require regular cleaning and care.

TROUBLESHOOTING

This section addresses common issues you might encounter with your patio furniture.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Sofa feels unstable or wobbly.	Uneven ground; loose connections.	Ensure furniture is on a flat surface. Check and tighten all assembly bolts.
Cushions slide off easily.	Cushion fixings not secured.	Ensure horn button fixings or ties are properly attached to the frame.
Rattan appears dull or dirty.	Accumulation of dirt and grime.	Clean the rattan frame as described in the Maintenance section.

SPECIFICATIONS

Key specifications for the Devoko Patio Furniture Sofa Set (Model: 1AS0BG).

Brand: Devoko

Model Number: 1AS0BG

Color: Beige

Material: Rattan (PE Wicker)

Product Dimensions (L x W x H): 25 x 53.1 x 24.5 inches (overall for the 2-piece set)

Item Weight: 47 pounds

Special Feature: Rearrangeable sectional design



Widely used for different space

Suitable for leisure time



Image: A diagram illustrating the key dimensions of the assembled 2-piece sofa set for reference.

WARRANTY AND CUSTOMER SUPPORT

Devoko is committed to providing quality products and customer satisfaction. Your purchase includes:

- Worry-free after-sale service.
- Friendly customer service.

For specific warranty details, claims, or any questions regarding your product, please refer to the warranty information included in your package or contact Devoko customer support directly. Contact information can typically be found on the product packaging or the official Devoko website.

