

[Manuals.plus](#) /

› [DRomance](#) /

› DRomance Flameless Window Candles with Remote and Timer Instruction Manual

DRomance CGLGL-6yin

DRomance Flameless Window Candles with Remote and Timer

MODEL: CGLGL-6YIN

Introduction

Thank you for choosing DRomance Flameless Window Candles. These battery-operated LED taper candles are designed to provide a warm, flickering glow, enhancing your home's ambiance without the hazards of real flames. Featuring a real wax exterior, remote control, and timer functions, they are perfect for holiday decorations or everyday use. This manual provides detailed instructions for setup, operation, and maintenance to ensure optimal performance and safety.



Image: DRomance Flameless Window Candles in a festive setting.

What's Included

- 6 x Flameless Taper Candles (Real Wax, Ivory)
- 6 x Silver Holders
- 6 x Suction Cups for Window Mounting
- 1 x 10-Key Remote Control

Product Features

- **LED Flickering & Warm Light:** Amber yellow light with a realistic flickering effect.
- **Real Wax Exterior:** Provides an authentic candle appearance and feel.
- **Dimensions:** Each candle measures approximately 2.3"D x 12"H.
- **Battery Operated:** Each candle requires 2 AA batteries (not included).

- **10-Key Remote Control:** Functions include ON/OFF, Timer, Mode (Flickering/Steady Light), and Brightness adjustment.
- **Timer Modes:** Set for 2, 4, 6, or 8 hours, with an automatic 24-hour cycle.
- **Dimmable Function:** Adjust light intensity to suit your preference.
- **Versatile Placement:** Includes suction cups for easy window installation and silver holders for tabletop display.

Setup Instructions

1. Battery Installation

Each flameless taper candle requires two AA batteries. The remote control uses one button cell battery (CR2025, typically pre-installed with a protective tab).

1. Gently twist the bottom cap of each candle counter-clockwise to open the battery compartment.
2. Insert 2 AA batteries into each candle, ensuring correct polarity (+/-).
3. Twist the bottom cap clockwise to close and secure the compartment. The candle will illuminate once the cap is fully tightened, indicating it is powered on.
4. For the remote control, remove the plastic protective tab from the battery compartment if present.



Image: Components of the candle set, showing battery placement and remote.

2. Attaching Holders and Suction Cups

The candles can be used freestanding with the silver holders or mounted to windows using the included suction cups.

- To use with the silver holder: Simply place the candle firmly into the top of the silver holder.
- To use with suction cups for windows: Attach the small plastic clip of the suction cup to the candle body at your desired height. Press the suction cup firmly against a clean, smooth window surface until it adheres securely.



Image: Flameless candle with holder and suction cup attached to a window.

Operating Instructions

Remote Control Functions

Ensure all candles have batteries installed and their bottom caps are twisted to the 'ON' position before using the remote. The remote operates all candles simultaneously within its range.

- **ON/OFF:** Press the green 'ON' button to turn on the candles. Press the red 'OFF' button to turn them off.
- **Timer:** Select 2H, 4H, 6H, or 8H to activate the timer. Once set, the candles will automatically turn on for the selected duration and then turn off. They will repeat this cycle every 24 hours.
- **Mode:** Press 'Candle' for a realistic flickering flame effect. Press 'Light' for a steady, non-flickering illumination.
- **Dimming:** Use the '+' button to increase brightness and the '-' button to decrease brightness.

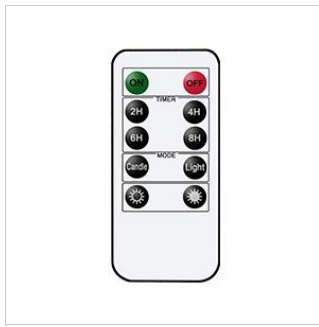


Image: 10-Key Remote Control for Flameless Candles.

Your browser does not support the video tag.

Video: Official DRomance video demonstrating the remote control functions for the flameless window taper candles, including timer and flickering modes.

Maintenance

Battery Replacement

When the light dims significantly or the candle stops working, it's time to replace the batteries.

1. Twist the bottom cap counter-clockwise to open the battery compartment.
2. Remove the old AA batteries and dispose of them properly.
3. Insert new AA batteries, observing correct polarity.
4. Twist the bottom cap clockwise to close and secure.

For the remote control, if it stops responding, replace the button cell battery (CR2025).

Cleaning

Wipe the candles and holders with a soft, dry cloth. Do not use abrasive cleaners or immerse in water.

Troubleshooting

- **Candle does not turn on:**
 - Ensure batteries are inserted with correct polarity.
 - Check if batteries are fresh and fully charged.
 - Verify the bottom cap is twisted fully clockwise to engage the power.
- **Remote control is not working:**
 - Ensure the protective tab has been removed from the remote's battery compartment.
 - Replace the button cell battery (CR2025) in the remote.
 - Ensure there is a clear line of sight between the remote and the candles.
- **Suction cups are not sticking:**
 - Clean the window surface and the suction cup thoroughly to remove dust or grease.
 - Apply slight pressure to the suction cup when attaching to the window.

Specifications

Brand	DRomance
Model Name	CGLGL-6yin
Product Dimensions	0.8"D x 0.8"W x 10"H (candle only)
Size (Candle)	2.3"D x 12"H (with holder)
Item Weight	1.12 pounds (total for 6 candles)
Material	Real Wax Outside
Light Source Type	LED
Light Color	Amber yellow
Power Source	Battery Powered (2 AA batteries per candle, not included)
Control Method	Remote
Special Features	10-Key Remote, Cycle timer, Dimmable, Suction Cups, With holder
Indoor/Outdoor Usage	Indoor
Water Resistance Level	Not Water Resistant
Battery Life	Approximately 2000 Hours

Safety Information

- These flameless candles are for indoor use only. Do not expose to water or high humidity.
- Keep batteries out of reach of children and pets. Button cell batteries (used in the remote) can be hazardous if swallowed. Seek immediate medical attention if ingested.
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the product is not used for an extended period to prevent leakage.
- Do not place candles near heat sources or in direct sunlight, as the real wax exterior may melt or deform.

Warranty and Support

For any issues or questions regarding your DRomance Flameless Window Candles, please contact DRomance customer support. Refer to your purchase documentation for specific warranty details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question