

INTECHING A-HW-NAVIGATOR

INTECHING Projector Remote Control User Manual

Model: A-HW-NAVIGATOR

1. INTRODUCTION

This user manual provides instructions for the INTECHING Projector Remote Control, designed for seamless operation of compatible Ask Proxima projectors. This remote control is a direct replacement and requires no programming or pairing.

Compatible Projector Models:

- Ask Proxima C160
- Ask Proxima C175
- Ask Proxima C180
- Ask Proxima C185
- Ask Proxima C250
- Ask Proxima 250W
- Ask Proxima C315
- Ask Proxima C350
- Ask Proxima C445

2. SETUP

2.1. Battery Installation

The remote control requires two (2) AAA batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.

3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.





Figure 2.1: Rear view of the remote control with the battery compartment visible. The compartment cover is located at the bottom half of the remote's back.

Once batteries are installed, the remote control is ready for use. No programming, pairing, or setting is needed.

3. OPERATING INSTRUCTIONS

The INTECHING Projector Remote Control is designed for intuitive operation. Ensure there is a clear line of sight between the remote control and the projector's infrared receiver for optimal performance.





Figure 3.1: Front view of the remote control, displaying all function buttons.

3.1. Button Functions Overview

Button Name	Function
Power	Turns the projector On or Off.
Help	Accesses the projector's help menu or information screen.
Menu	Opens or closes the projector's main menu.
ESC	Exits the current menu or cancels an operation.
Navigation (Up, Down, Left, Right)	Navigates through menu options.
Select	Confirms a selection in the menu.
Source	Cycles through available input sources (e.g., HDMI, VGA, Video).
Auto Image	Automatically adjusts the image settings for optimal display.
Volume Up/Down	Adjusts the audio volume.

Button Name	Function
PC	Selects the PC input source.
Video	Selects the Video input source.
Mute	Mutes or unmutes the audio output.
Keystone	Adjusts the image keystone correction.
Magnify (+/-)	Zooms in or out on the projected image.
Blank	Temporarily blanks the screen.
Presets	Accesses predefined image or display settings.
Freeze	Freezes the current image on the screen.
AV Mute	Mutes both audio and video.
Resize	Adjusts the image size or aspect ratio.
Overscan	Adjusts the overscan setting for the image.
Custom	Activates a user-defined custom function.

4. MAINTENANCE

4.1. Cleaning the Remote Control

To maintain the remote control's appearance and functionality, follow these cleaning guidelines:

- Use a soft, dry cloth to wipe the surface of the remote control.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not spray cleaner directly onto the remote.
- Avoid using harsh chemicals, solvents, or abrasive cleaning materials, as these can damage the remote's finish or internal components.

4.2. Storage

When not in use for extended periods, it is recommended to:

- Remove the batteries to prevent leakage, which can damage the remote.
- Store the remote control in a cool, dry place, away from direct sunlight and extreme temperatures.

5. TROUBLESHOOTING

If you experience issues with your INTECHING Projector Remote Control, refer to the following common troubleshooting steps:

Problem	Possible Cause / Solution
---------	---------------------------

Problem	Possible Cause / Solution
Remote control is not working.	<ul style="list-style-type: none"> ◦ Batteries: Check if the batteries are inserted correctly with the correct polarity (+/-). Replace old or dead batteries with new AAA batteries. ◦ Line of Sight: Ensure there are no obstacles between the remote control and the projector's infrared receiver. The remote requires a direct line of sight. ◦ Distance: Make sure you are within the effective operating range of the projector's IR receiver.
Buttons are unresponsive or sticky.	<ul style="list-style-type: none"> ◦ Dirt/Debris: Clean the remote control surface and around the buttons using a soft, dry cloth. ◦ Battery Level: Low battery power can sometimes cause inconsistent button responses. Replace batteries.
Remote works intermittently.	<ul style="list-style-type: none"> ◦ Battery Connection: Ensure batteries are seated firmly in the compartment. ◦ Interference: Strong light sources or other electronic devices emitting IR signals might interfere. Try using the remote in a different environment.

If the issue persists after trying these steps, please refer to the Warranty & Support section for further assistance.

6. SPECIFICATIONS

Feature	Detail
Product Dimensions	5.51 x 1.57 x 0.79 inches
Item Weight	1.44 ounces
Model Number	A-HW-NAVIGATOR
Batteries Required	2 AAA batteries (not included)
Connectivity Technology	Infrared (IR)
Compatible Devices	Projector
Max Number of Supported Devices	1
Special Feature	Ergonomic

7. WARRANTY & SUPPORT

INTECHING provides comprehensive support for its products:

- **Refund Policy:** A refund is available within 30 days from the order date.
- **Replacement Policy:** A replacement is available within 12 months from the order date.
- **Customer Service:** For any inquiries or assistance, messages will be replied to by our well-trained support team within 24 hours.

For further assistance, please visit the [INTECHING Store on Amazon](#).



© 2024 INTECHING. All rights reserved.