

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Fender](#) /
- › [Fender Mustang GTX-7 Footswitch Instruction Manual](#)

### Fender GTX-7 (Model 0994072000)

# Fender Mustang GTX-7 Footswitch Instruction Manual

Model: 0994072000 | Brand: Fender

## 1. INTRODUCTION

The Fender Mustang GTX-7 Footswitch is designed to enhance the functionality of compatible Fender Mustang GTX and GT series amplifiers, as well as Rumble Studio and Stage amplifiers. This footswitch provides hands-free control over various amplifier functions, including preset selection, effects toggling, looper operations, and chromatic tuning.



Image: The Fender Mustang GTX-7 Footswitch positioned in front of a Fender Mustang GTX amplifier, showcasing its compact design and connectivity.

## 2. PRODUCT FEATURES OVERVIEW

The GTX-7 Footswitch offers a comprehensive control interface for your amplifier, featuring:

- **Preset Mode Control:** Navigate through presets with dedicated bank up/down switches.
- **Mode Selection:** Easily switch between Looper, Effects, and Presets modes.
- **Function Switches:** Five assignable buttons for selecting and controlling various functions within each mode.
- **Integrated Tuner:** Access a chromatic tuner directly from the footswitch.
- **Looper Functionality:** Control record, play, overdub, stop, and undo functions for up to 60 seconds of looping.
- **Display Screen:** Provides visual feedback on selected presets, effects mode, and tuner status.
- **LED Indicators:** Clear LEDs for mode status (Looper, Effects, Presets) and individual function activation.
- **Connectivity:** Includes a 12 ft. TS (tip-sleeve) cable with a 1/4" jack for direct connection to compatible amplifiers.

### 3. SETUP

---

1. **Connect the Footswitch:** Use the included 12 ft. TS cable to connect the GTX-7 Footswitch to the dedicated footswitch input on your compatible Fender amplifier. Ensure the 1/4" jack is securely inserted.
2. **Power On Amplifier:** Turn on your Fender amplifier. The footswitch display and LEDs should illuminate.
3. **Firmware Update (Recommended):** For optimal performance and compatibility, especially with older GT series amplifiers, ensure your amplifier's firmware is updated to the latest version. Refer to your amplifier's manual or the Fender support website for firmware update instructions.
4. **Initial Recognition:** Upon first connection, the amplifier may default to a different footswitch mode (e.g., MGT-4 mode). If certain buttons are unresponsive, try unplugging the footswitch while the amp is on, then plug it back in. A power cycle of the amplifier may also resolve initial recognition issues.

### 4. OPERATING INSTRUCTIONS

---

The GTX-7 Footswitch provides intuitive control through its various switches and indicators:

- **BANK UP/DOWN SWITCH:**
  - Functions in Preset Mode.
  - Pressing and releasing this switch will bank up by 5 presets.
  - Pressing and holding this switch will bank down by 5 presets.
- **MODE/TUNER SWITCH:**
  - Pressing and releasing this switch cycles between three primary modes: Looper, Effects, and Presets.
  - Pressing and holding this switch will activate Tuner mode.
- **FUNCTION SWITCHES (1-5):**
  - These five numbered buttons enable selection and foot control of different functions, which vary depending on the currently selected mode.
  - All functions are activated on a down-press.
  - In PRESETS mode, tapping on the currently selected preset's function switch will change the preset Tempo. The PRESETS mode LED will flash to indicate tempo.
- **DISPLAY SCREEN:**
  - Shows the currently selected preset number, active effects mode, and tuner information.

- **MODE LEDs:**

- Located at the far right of the footswitch, these three LEDs indicate the active mode:
- Looper (Green)
- Effects (Amber)
- Presets (Red)

- **FUNCTION LEDs:**

- A series of five red LEDs positioned above each function switch, just below the display screen. These LEDs indicate various functions currently in use or selected.

## 5. LOOPER FUNCTIONALITY

---

The GTX-7 Footswitch integrates a powerful looper function, allowing for up to 60 seconds of recording. In Looper mode, the function buttons provide control over:

- **Record:** Start recording a loop.
- **Play:** Play back the recorded loop.
- **Overdub:** Add additional layers to an existing loop.
- **Stop:** Halt loop playback or recording.
- **Undo:** Remove the last overdubbed layer.

## 6. TUNER FUNCTIONALITY

---

The built-in chromatic tuner can be accessed by pressing and holding the MODE/TUNER switch. The display screen will show the note being played and indicate whether it is sharp, flat, or in tune, allowing for precise instrument tuning.

## 7. COMPATIBILITY

---

The Fender Mustang GTX-7 Footswitch is compatible with the following Fender amplifier models:

- Mustang GTX series (e.g., GTX50, GTX100)
- Mustang GT series (e.g., GT40, GT100, GT200)
- Rumble Studio 40
- Stage 800

## 8. SPECIFICATIONS

---

- **Model Number:** 0994072000
- **Brand:** Fender
- **Product Dimensions:** 12.8"W x 6.7"D x 3.2"H (32.5 cm W x 17 cm D x 8.1 cm H)
- **Material:** Metal chassis
- **Color:** Black
- **Connectivity:** 1/4" TS (tip-sleeve) jack
- **Cable Length:** 12 ft. (approx. 3.66 m)

## 9. TROUBLESHOOTING

---

- **Footswitch Not Responding:**
  - Ensure the 1/4" TS cable is securely connected to both the footswitch and the amplifier.
  - Verify that your amplifier's firmware is up to date, especially if using a GT series amp. Outdated firmware can cause compatibility issues.
  - Try unplugging the footswitch cable from the amplifier and plugging it back in while the amplifier is powered on.
  - Perform a power cycle on your amplifier (turn off, wait a few seconds, then turn back on) after connecting the footswitch.
- **Incorrect Mode Display:** If the footswitch appears to be in an incorrect mode (e.g., MGT-4 instead of GTX-7), follow the steps for "Footswitch Not Responding" to re-establish proper communication.
- **Tempo Tap Not Working:** Ensure you are in PRESETS mode and tapping the function switch corresponding to the currently selected preset.

## 10. MAINTENANCE

---

To ensure the longevity and optimal performance of your Fender Mustang GTX-7 Footswitch:

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the footswitch. Avoid using abrasive cleaners or solvents.
- **Storage:** Store the footswitch in a dry environment, away from extreme temperatures and direct sunlight.
- **Cable Care:** Avoid kinking or sharply bending the connection cable. Store it neatly when not in use.
- **Avoid Liquids:** Keep the footswitch away from liquids to prevent damage to internal electronics.

## 11. WARRANTY AND SUPPORT

---

For warranty information, product registration, or technical support, please visit the official Fender website or contact Fender customer service. Keep your purchase receipt as proof of purchase for warranty claims.

**Fender Official Website:** [www.fender.com](http://www.fender.com)