

[Manuals.plus](#) /

› [iWorld](#) /

› [iWorld Vibrant Earbuds with Microphone User Manual - Model 840824166557](#)

iWorld 840824166557

iWorld Vibrant Earbuds with Microphone

User Manual - Model 840824166557

INTRODUCTION

Thank you for choosing the iWorld Vibrant Earbuds with Microphone. These wired in-ear headphones are designed to provide clear audio and convenient communication for a variety of devices. This manual provides essential information for setup, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your earbuds.

PACKAGE CONTENTS

- 1 x iWorld Vibrant Earbuds with Microphone



Figure 1: iWorld Vibrant Earbuds Packaging. The image displays three individual packages of iWorld Vibrant Earbuds, each featuring a different color variant (red, black, pink) of the earbuds with an inline microphone and volume control. The packaging highlights "VIBRANT EARBUDS WITH MIC" and "VOLUME CONTROL WITH MIC".

PRODUCT OVERVIEW

The iWorld Vibrant Earbuds feature a standard 3.5mm audio jack for universal compatibility, an in-line microphone for hands-free calls, and integrated volume controls. The cable is designed to be retractable for convenient storage.



Figure 2: iWorld Vibrant Earbuds. This image shows a pair of iWorld Vibrant Earbuds, highlighting the in-ear design, the wired connection, and the integrated control module on the cable which includes a microphone and volume buttons.

Key Components:

- **Earbuds:** In-ear design for sound isolation.
- **In-line Microphone:** For voice calls and commands.
- **Volume Control:** Buttons for adjusting audio levels.
- **3.5mm Audio Jack:** Standard connector for audio devices.
- **Retractable Cable:** For tangle-free storage.

1. **Unpack:** Carefully remove the earbuds from their packaging.
2. **Connect:** Insert the 3.5mm audio jack into the headphone port of your compatible device (e.g., smartphone, tablet, laptop, MP3 player). Ensure the jack is fully inserted for proper audio transmission.
3. **Position:** Place the earbuds comfortably into your ears. The in-ear design provides sound isolation.

OPERATING INSTRUCTIONS

Audio Playback:

- Once connected, audio from your device will play through the earbuds.
- Use the **Volume Control** buttons on the in-line remote to adjust the listening volume.

Making/Receiving Calls:

- When connected to a smartphone, the in-line microphone allows for hands-free communication.
- To answer an incoming call, press the **Push Button** on the in-line remote (if available, typically the center button).
- To end a call, press the **Push Button** again.
- For voice commands (if supported by your device), press and hold the **Push Button**.

Retractable Cable:

- To extend the cable, gently pull both earbuds simultaneously until the desired length is reached.
- To retract the cable, gently pull both earbuds again slightly, then release to allow the cable to retract into the housing. Avoid forcing the retraction mechanism.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to wipe the earbuds and cable. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** When not in use, retract the cable fully and store the earbuds in a clean, dry place to prevent tangling and damage.
- **Avoid Moisture:** Do not expose the earbuds to water or excessive moisture.
- **Handle with Care:** Avoid pulling the cable forcefully or bending the 3.5mm jack excessively.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No sound or low volume	3.5mm jack not fully inserted. Device volume is too low or muted. Earbuds volume control is too low. Incorrect audio output selected on device.	Ensure the 3.5mm jack is securely plugged into the device. Increase the volume on your connected device. Use the in-line volume control to increase earbud volume. Check your device's audio settings to ensure output is directed to the headphone jack.

Problem	Possible Cause	Solution
Microphone not working	3.5mm jack not fully inserted. Device microphone settings. Earbuds are not compatible with device's microphone input.	Ensure the 3.5mm jack is securely plugged in. Check your device's microphone input settings. Test with another compatible device to rule out device-specific issues.
Sound distortion	Volume set too high on device or earbuds. Damaged cable or jack.	Reduce the volume on both your device and the earbuds. Inspect the cable and jack for visible damage. If damaged, replacement may be necessary.

SPECIFICATIONS

- **Model:** 840824166557
- **Connectivity:** Wired
- **Headphones Jack:** 3.5 mm
- **Earpiece Shape:** In-Ear
- **Material:** Plastic
- **Control Type:** Volume Control, Push Button
- **Special Features:** Microphone Included, Retractable Cable, Sound Isolation
- **Compatible Devices:** Laptops, Desktops, Telephones, Smart Speaker, Television, Cellphones
- **Item Weight:** 0.81 ounces (approximately 23 grams)
- **Manufacturer:** World Global Trading LLC

SAFETY INFORMATION

- Avoid listening at high volume levels for extended periods to prevent hearing damage.
- Do not use earbuds in situations where inability to hear ambient sounds could be dangerous (e.g., driving, cycling, walking in traffic).
- Keep out of reach of small children to prevent choking hazards from small parts.
- Do not attempt to disassemble or modify the earbuds. This may void any potential warranty and could cause damage.
- Dispose of the product responsibly according to local regulations.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided at the time of purchase or contact iWorld customer service directly. Contact details are typically available on the manufacturer's official website or product packaging.

Manufacturer: World Global Trading LLC

For further assistance, please visit the [iWorld Store on Amazon](#).