

PAXCESS P3.2 Wash Machine with Hose Reel, Orange-22

PAXCESS Electric Power Washer P3.2 User Manual

Model: P3.2 Wash Machine with Hose Reel, Orange-22

1. PRODUCT OVERVIEW

The PAXCESS Electric Power Washer P3.2 is a versatile and powerful cleaning tool designed for various outdoor tasks. It efficiently converts a standard garden hose into a high-pressure stream, making it suitable for cleaning surfaces such as decks, patios, driveways, sidewalks, sheds, siding, garden furniture, pavers, bricks, and fences. Its compact design and integrated hose reel ensure convenient storage and portability.



Figure 1.1: PAXCESS Electric Power Washer P3.2. This image shows the main unit with its integrated hose reel and spray gun holder.

Key Features:

- **Powerful Cleaning:** Delivers up to 2300 PSI for effective removal of dirt and grime.
- **Adjustable Nozzle:** Easily switch between narrow fan, wide fan, and foam modes by twisting the nozzle.
- **Integrated Hose Reel:** Provides convenient storage for the high-pressure hose.
- **Multiple Applications:** Ideal for cleaning vehicles, outdoor furniture, patios, and more.
- **Two Water Sucking Methods:** Can draw water from a tap or a bucket.
- **IPX5 Waterproof Rating:** Ensures durability and safety in wet conditions.

Main Functions

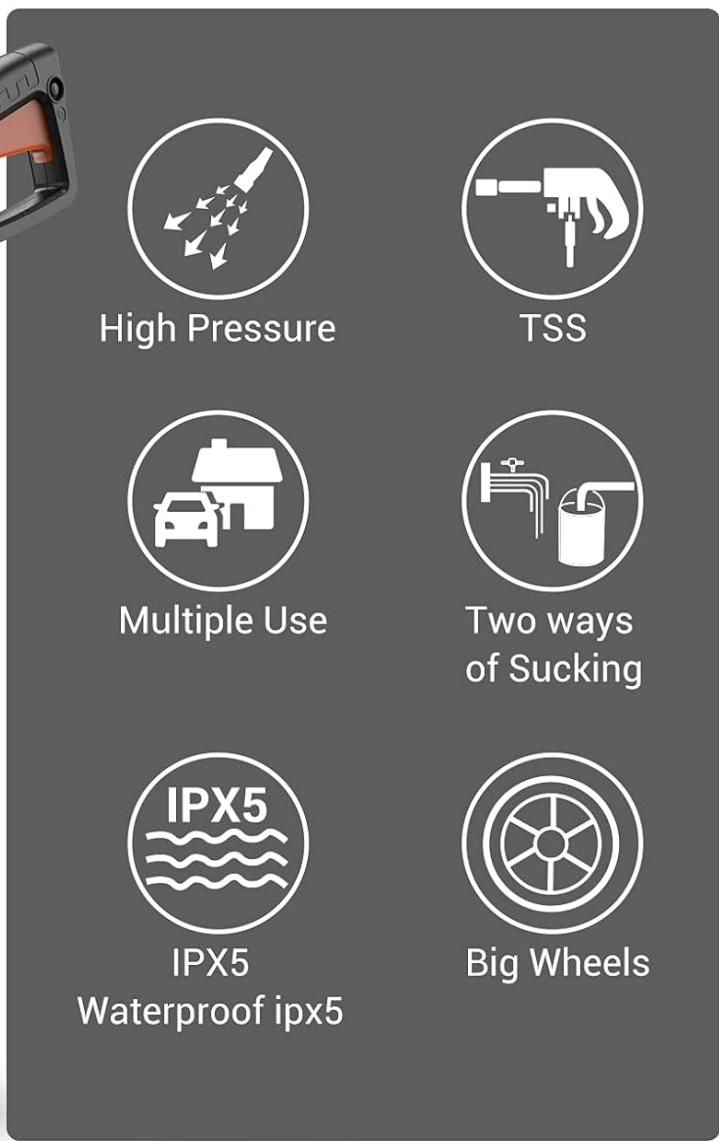


Figure 1.2: Icons illustrating the main functions: High Pressure, TSS (Total Stop System), Multiple Use, Two ways of Sucking, IPX5 Waterproof, and Big Wheels for mobility.



Figure 1.3: Icons highlighting product benefits: Water Save, Less Noise, Long Service Time, and High Pressure.

2. SAFETY INFORMATION

Always read and understand all safety warnings and instructions before operating the pressure washer. Failure to follow the warnings and instructions may result in electric shock, fire, and/or serious injury.

General Safety Rules:

- **Electrical Safety:** Ensure the power outlet is properly grounded. Do not operate the pressure washer with a damaged cord or plug. Keep all connections dry and off the ground.
- **Water Connection:** Use only clean water. Do not connect the unit to a potable water supply without a backflow preventer.
- **Personal Safety:** Wear appropriate personal protective equipment (PPE) such as safety goggles, gloves, and protective footwear. Do not direct the spray at people, pets, or electrical devices.
- **Operating Environment:** Operate the pressure washer on a stable, level surface. Keep the area clear of bystanders.

and obstacles.

- **Children and Pets:** Keep children and pets away from the pressure washer during operation.
- **Maintenance:** Disconnect the power supply before performing any maintenance or cleaning.

3. PACKAGE CONTENTS

Carefully unpack all items and ensure you have received the following components. If any parts are missing or damaged, contact PAXCESS customer support.



Figure 3.1: All components included with the PAXCESS Electric Power Washer. This includes the main unit, spray gun, lance, high-pressure hose, and foam cannon.

- PAXCESS Electric Power Washer Unit
- High-Pressure Spray Gun
- Adjustable Spray Lance
- High-Pressure Hose with Reel

- Detergent Tank (Foam Cannon)
- Garden Hose Adapter
- Power Cord with GFCI
- Nozzle Cleaning Pin
- User Manual

4. SETUP INSTRUCTIONS

Follow these steps to assemble and prepare your PAXCESS Electric Power Washer for first use.

1. **Attach the Handle:** Slide the handle into the designated slots on the main unit until it clicks into place.
2. **Connect the High-Pressure Hose:**
 - Connect one end of the high-pressure hose to the outlet on the pressure washer unit. Tighten securely by hand.
 - Connect the other end of the high-pressure hose to the spray gun. Ensure a tight connection to prevent leaks.
3. **Assemble the Spray Gun and Lance:** Attach the adjustable spray lance to the spray gun. Twist until it locks securely.
4. **Connect the Water Supply:**
 - Attach your garden hose to the water inlet on the pressure washer unit. Ensure the garden hose is free of kinks and has a steady water supply.
 - If using a bucket for water supply, ensure the unit is set to the "Two Ways of Water Sucking" mode and follow specific instructions in the operating section.
5. **Connect to Power:** Plug the power cord into a grounded electrical outlet. Ensure the GFCI (Ground Fault Circuit Interrupter) is reset if necessary.



Two Ways of Water Sucking



Figure 4.1: The pressure washer demonstrating its ability to draw water from a bucket, offering flexibility in water source.

5. OPERATING INSTRUCTIONS

This section details how to operate your PAXCESS Electric Power Washer for various cleaning tasks.

5.1 Initial Start-up and Priming

1. Ensure all connections are secure and the water supply is turned on.
2. Squeeze the trigger on the spray gun to release any air trapped in the system. Allow water to flow through the gun for about 30 seconds until a steady stream is achieved.
3. Turn on the power switch on the pressure washer unit. The motor will start, and pressure will build.

5.2 Adjusting the Spray Pattern

The PAXCESS P3.2 features an adjustable nozzle that allows you to change the spray pattern by simply twisting the end of the lance.

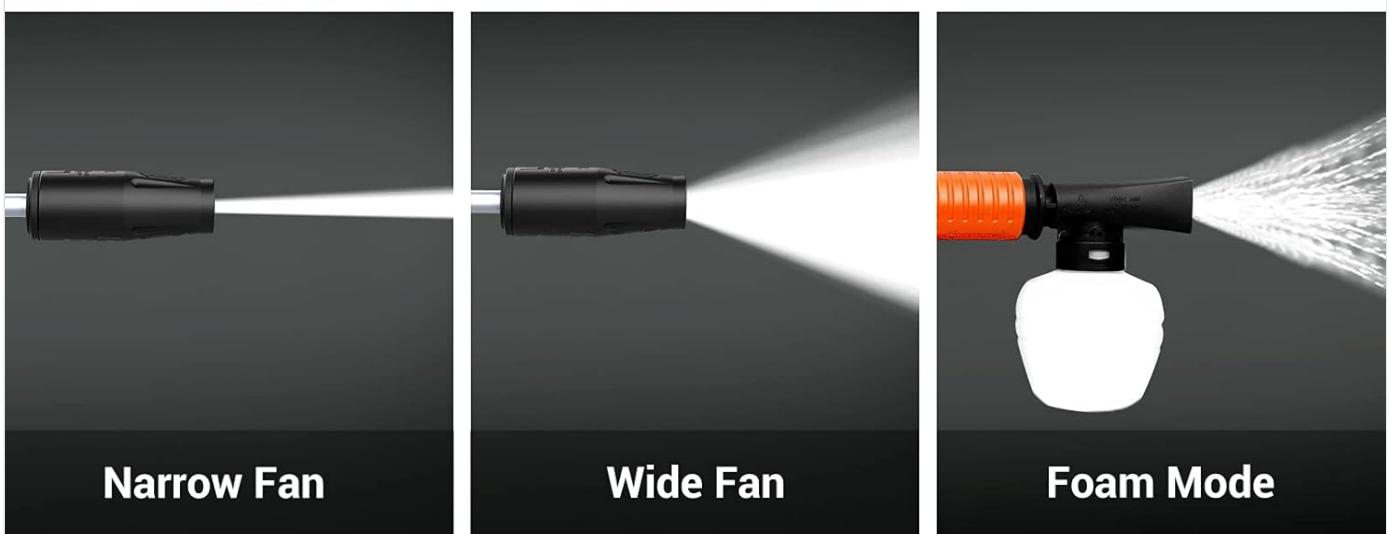


Figure 5.1: Demonstrates the adjustable nozzle, showing narrow fan, wide fan, and foam modes.

- **Narrow Fan:** Provides a concentrated, high-impact stream for tough stains and precise cleaning.
- **Wide Fan:** Offers a broader spray for general cleaning of larger areas.
- **Foam Mode:** Activates the detergent tank for applying soap or cleaning solutions.

Always test the spray pattern on an inconspicuous area first to avoid damaging the surface.

5.3 Using the Detergent Tank (Foam Cannon)

1. Fill the detergent tank with an appropriate pressure washer-safe cleaning solution.
2. Attach the detergent tank to the spray gun.
3. Twist the nozzle to the "Foam Mode" setting.
4. Apply the detergent to the surface. Allow it to soak for a few minutes (refer to detergent instructions).
5. Twist the nozzle back to a fan spray pattern and rinse the surface thoroughly.

5.4 Cleaning Applications

The PAXCESS P3.2 is effective for a variety of cleaning tasks:

- **Patios and Driveways:** Use a wide fan spray for general cleaning, and a narrow fan for stubborn spots.
- **Vehicles:** Apply car wash soap using the foam cannon, then rinse with a wide fan spray. Maintain a safe distance to avoid paint damage.
- **Siding and Fences:** Start with a wide fan spray from a distance and gradually move closer if needed.



Figure 5.2: A visual comparison showing a muddy car before and after cleaning with the pressure washer, highlighting its effectiveness.



2300 PSI
Stronger Cleaning Effect

Figure 5.3: The pressure washer in action, cleaning a patio tile, demonstrating the 2300 PSI cleaning effect.

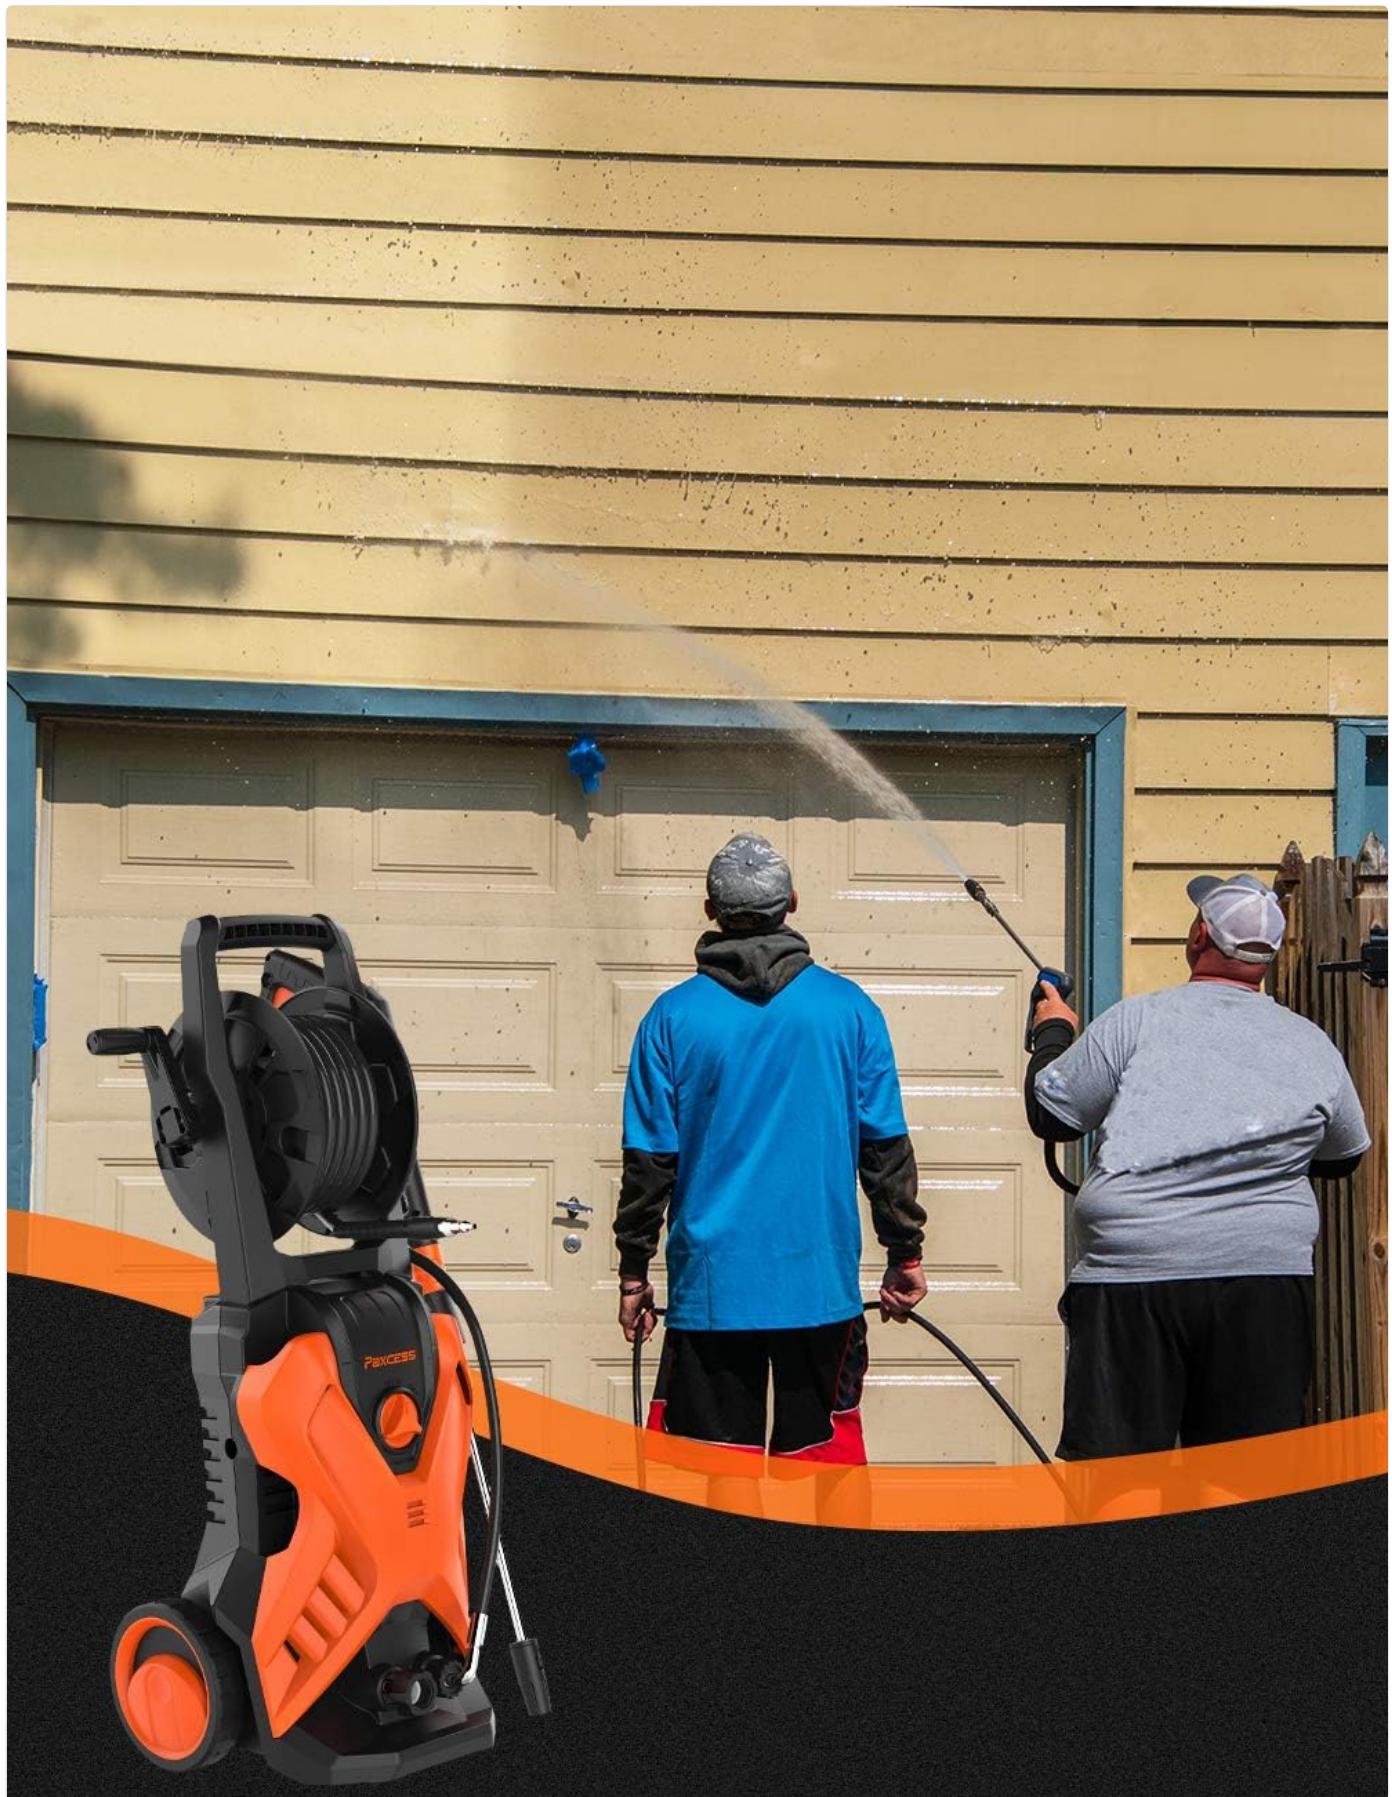


Figure 5.4: Two people using the PAXCESS pressure washer to clean the exterior of a house, showcasing its utility for larger tasks.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your pressure washer.

6.1 After Each Use:

- **Disconnect Power and Water:** Turn off the unit, unplug the power cord, and turn off the water supply.
- **Relieve Pressure:** Squeeze the spray gun trigger to release any remaining pressure in the system.
- **Drain Water:** Disconnect all hoses and drain any water from the pump, hoses, and spray gun.
- **Clean Nozzle:** Use the provided nozzle cleaning pin to clear any debris from the nozzle opening.
- **Wipe Down:** Clean the exterior of the unit with a damp cloth.

6.2 Storage:

- Store the pressure washer in a dry, frost-free area.
- If storing for an extended period, consider using a pump protector or antifreeze solution to prevent damage from freezing.
- Wind the high-pressure hose neatly onto the integrated hose reel.

7. TROUBLESHOOTING

Refer to this section for common issues and their solutions. If the problem persists, contact customer support.

Problem	Possible Cause	Solution
Unit does not start	No power supply; GFCI tripped; Power switch off	Check power connection; Reset GFCI; Turn power switch ON
Low pressure	Insufficient water supply; Kinked hose; Clogged nozzle; Air in pump	Ensure full water flow; Straighten hose; Clean nozzle; Prime pump by squeezing trigger with water on
Pulsating pressure	Air in pump; Water supply restriction; Clogged inlet filter	Prime pump; Check water supply for kinks; Clean inlet filter
Water leaks	Loose connections; Damaged O-rings	Tighten all connections; Replace damaged O-rings

8. SPECIFICATIONS

- **Product Dimensions:** 32 x 33 x 67 inches
- **Item Weight:** 23.4 pounds
- **Manufacturer:** PAXCESS
- **ASIN:** B083FKPVTS
- **Item Model Number:** Hose Reel Electric Power Washer
- **Brand:** PAXCESS
- **Power Source:** Corded Electric
- **Color:** Orange
- **Maximum Pressure:** 3000 Pound per Square Inch (PSI)
- **Maximum Flow Rate:** 1.76 Gallons Per Minute (GPM)

9. WARRANTY AND SUPPORT

PAXCESS products are designed and manufactured to the highest quality standards. This product is covered by a limited warranty from the date of purchase. For detailed warranty information, please refer to the warranty card included in your

package or visit the official PAXCESS website.

For technical support, troubleshooting assistance, or to order replacement parts, please contact PAXCESS customer service:

- **Website:** [Visit the PAXCESS Store on Amazon](#)
- **Email:** Refer to your product packaging or warranty card for specific contact email.
- **Phone:** Refer to your product packaging or warranty card for specific contact number.

Please have your model number (P3.2) and purchase date available when contacting support.

© 2023 PAXCESS. All rights reserved.