

COSTWAY GT-88231OD

COSTWAY Juicer Machine GT-88231OD User Manual

Model: GT-88231OD

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance and retain them for future reference.

Always follow basic safety precautions to reduce the risk of fire, electric shock, and personal injury.

- Ensure all parts are properly assembled before operation. The juicer is designed with a safety lock unit that prevents operation if not correctly assembled.
- Do not operate the appliance with a damaged cord or plug.
- Keep hands and utensils out of the feed chute during operation to prevent injury. Use the food pusher provided.
- The motor is equipped with overload protection. If the motor overheats, the power will automatically cut off to prevent damage and prolong the machine's service life. Allow the unit to cool down before resuming use.
- Do not immerse the motor base in water or other liquids.
- This appliance is for household use only.

2. PRODUCT COMPONENTS

Familiarize yourself with the parts of your COSTWAY Juicer Machine.

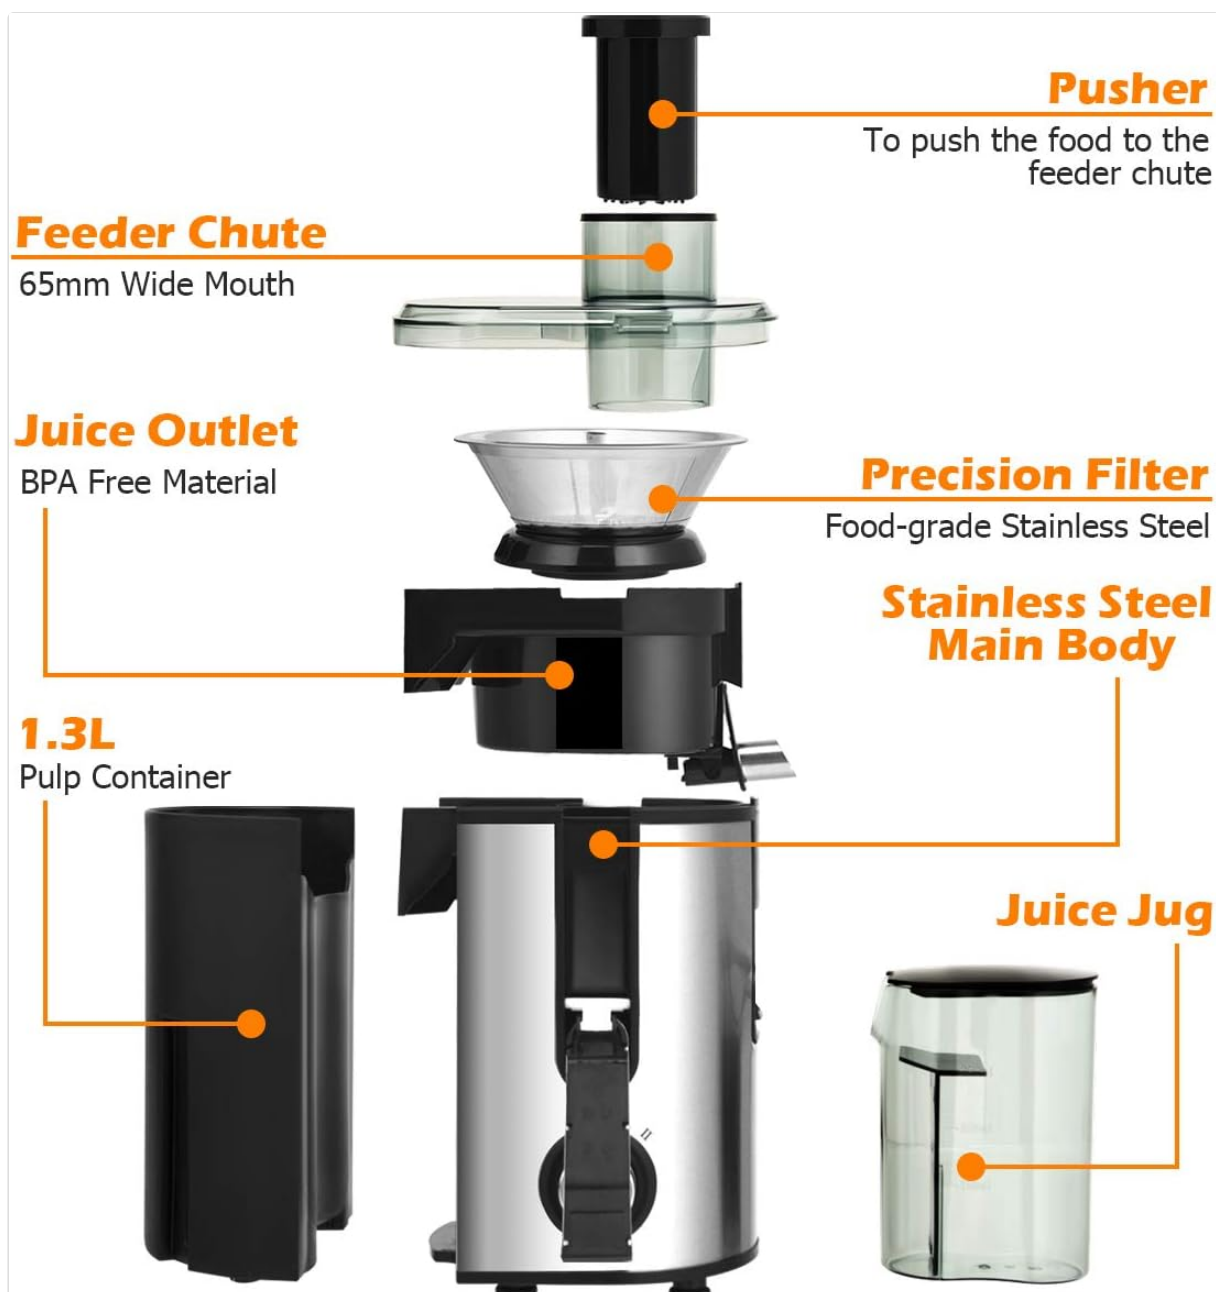


Image: Exploded view showing the various components of the juicer, including the pusher, feeder chute, juice outlet, precision filter, stainless steel main body, pulp container, and juice jug.

- **Pusher:** Used to guide fruits and vegetables into the feeder chute.
- **Feeder Chute:** 65mm (2.5-inch) wide opening for inserting produce.
- **Juice Outlet:** Spout for dispensed juice, made from BPA-free material.
- **Precision Filter:** Food-grade stainless steel filter for separating pulp from juice.
- **Stainless Steel Main Body:** The primary housing of the juicer.
- **Pulp Container:** 1300ml capacity container for collecting discarded pulp.
- **Juice Jug:** 350ml capacity cup for collecting extracted juice.
- **Motor Unit:** The base of the juicer containing the 400W motor.

3. SETUP AND ASSEMBLY

The juicer is designed for easy assembly. Follow these general steps:

1. Place the motor unit on a stable, flat, and dry surface.
2. Carefully place the precision filter onto the motor unit, ensuring it is seated correctly.

3. Attach the juice outlet and feeder chute assembly onto the motor unit, aligning all parts.
4. Secure the safety locking arm into place. The juicer will not operate unless this is correctly engaged.
5. Position the pulp container under the pulp ejection spout.
6. Place the juice jug under the juice outlet.
7. Insert the pusher into the feeder chute.



Image: The COSTWAY Juicer Machine fully assembled with the juice cup positioned to collect juice.

4. OPERATING INSTRUCTIONS

4.1 Preparing Fruits and Vegetables

- Wash all fruits and vegetables thoroughly.
- The 2.5-inch wide feed chute can accommodate large pieces of produce, reducing preparation time. For very large items, cut them into smaller pieces that fit comfortably into the chute.
- Remove large seeds (e.g., peaches, plums) and hard pits.
- Some fruits and vegetables, such as bananas, avocados, and potatoes, contain very little water and are not ideal for juicing with this type of machine.

65MM WIDE FEEDER CHUTE

For apples, oranges, tomatoes and other large fruits and vegetables



Image: Illustration demonstrating the 65mm wide feeder chute, capable of accepting whole apples, oranges, tomatoes, and carrots.

4.2 Juicing Process

1. Ensure the juicer is properly assembled and the juice jug and pulp container are in place.
2. Plug the power cord into a suitable electrical outlet.
3. Select the appropriate speed setting using the dual-speed control knob:
 - **Speed I (Weak Grinding):** Suitable for soft fruits and vegetables such as oranges, tomatoes, watermelon, kiwi, and strawberries.
 - **Speed II (Strong Grinding):** Suitable for hard fruits and vegetables like apples, carrots, celery, and ginger.
4. Turn the juicer ON.
5. Gradually feed the prepared fruits and vegetables into the feeder chute using the pusher. Do not force produce into the chute.
6. The juice will flow into the juice jug, and the pulp will collect in the pulp container.
7. The anti-drip outlet helps prevent juice from spilling onto your countertop.
8. Once juicing is complete, turn the juicer OFF and unplug it from the power outlet.



SPEED I

SOFT FRUITS & VEG

For soft fruits like orange, tomato, watermelon, kiwifruit, strawberry and more



SPEED II

HARD FRUITS & VEG

For hard fruits and vegetables like apple, carrot, celery, bitter gourd and more



LITTLE WATER



Image: Diagram illustrating Speed I for soft fruits (orange, tomato, watermelon, kiwi, strawberry) and Speed II for hard fruits/vegetables (apple, carrot, celery, bitter gourd). Also shows a warning for fruits with little water like bananas, mangoes, and potatoes.

Safety Lock

Prevent danger caused by idling



Sharp Blade Filter

Sharp for efficient juicing

Anti-drip Outlet

Prevent mess on the countertop



Image: Close-up views highlighting the safety lock mechanism, the sharp blade filter for efficient juicing, and the anti-drip outlet design.

5. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your juicer.

1. Always unplug the juicer from the power outlet before cleaning.
2. Disassemble all detachable parts (pusher, feeder chute, filter, pulp container, juice jug).
3. Rinse all detachable parts under running water. Use a brush to clean the precision filter thoroughly to remove any pulp residue.
4. All detachable parts are recommended for hand washing only. Do not wash them in a dishwasher.
5. Wipe the stainless steel main body and motor unit with a damp cloth. Do not immerse the motor unit in water.
6. Ensure all parts are completely dry before reassembling or storing the juicer.

HIGH JUICE YIELD

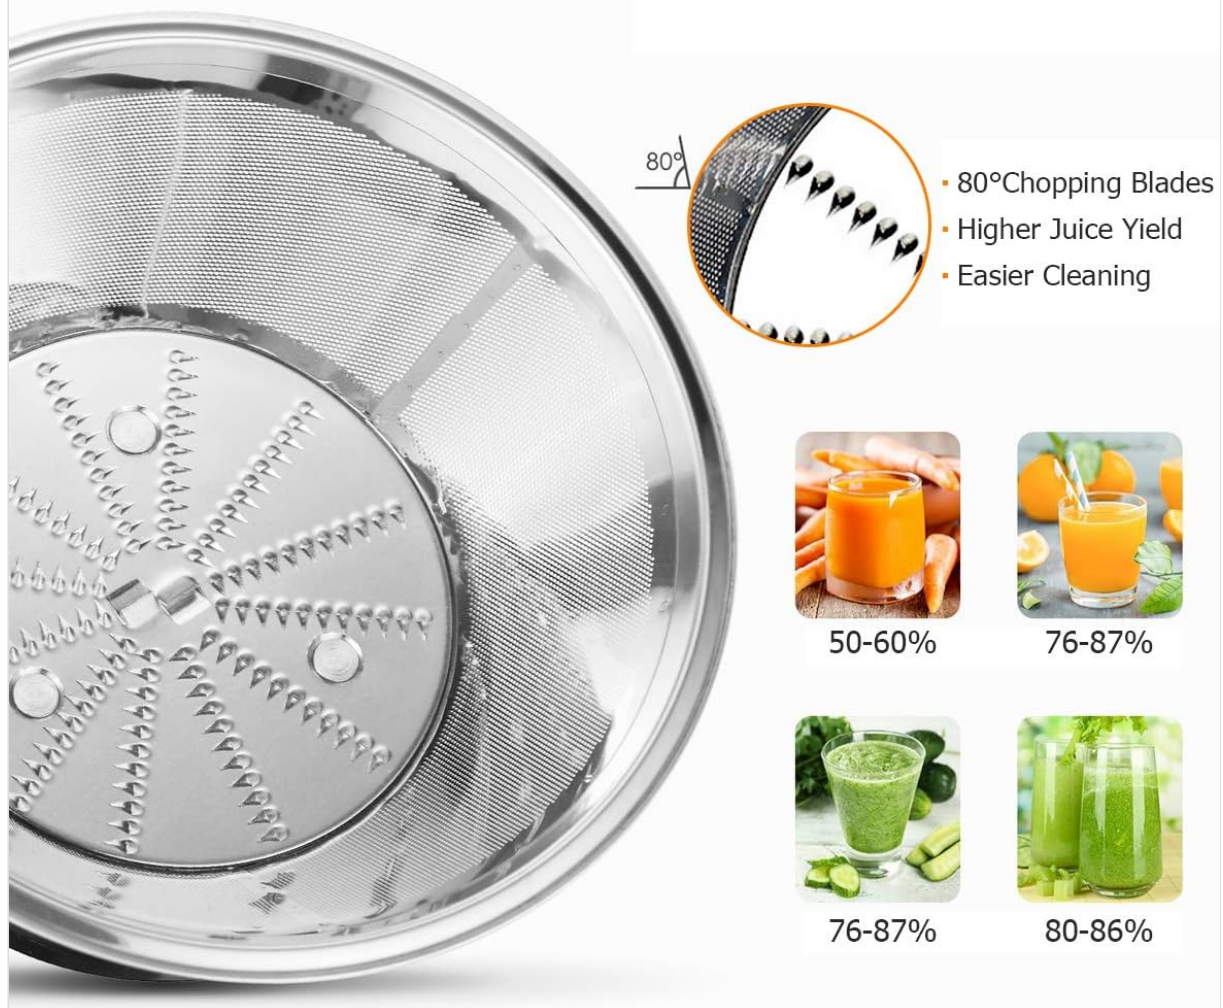


Image: Detailed view of the precision filter, highlighting its 80-degree chopping blades designed for high juice yield and ease of cleaning.

6. TROUBLESHOOTING

This section provides solutions to common issues. If you encounter a problem not listed here, please contact customer support.

- **Juicer does not turn on:** Ensure the power cord is securely plugged in and the safety locking arm is fully engaged. Check if the motor has overheated and activated the overload protection; allow it to cool down.
- **Low juice yield or excessive pulp:** Ensure the precision filter is clean and free of clogs. Use the appropriate speed setting for the type of produce being juiced.
- **Vibrations or loud noise:** Check that all components are correctly assembled and securely locked. Reduce the amount of produce being fed at once.

7. SPECIFICATIONS

Feature	Specification
Brand	COSTWAY

Model Number	GT-88231OD
Color	Silver
Special Features	BPA Free, Non Toxic
Product Dimensions (D x W x H)	8.5" x 6" x 11"
Material	Stainless Steel
Recommended Uses	Fruits, Vegetables
UPC	798470405035
Unit Count	1 Count
Included Components	Centrifugal juicer machine, Juice Cup, User's manual
Maximum Power	400 watts
Wattage	400 watts
Power Source	Corded Electric
Voltage	120 volts
Number of Speeds	2
Controller Type	Button
Product Care Instructions	Hand Wash Only
Blade Material	Stainless Steel
Juice Cup Capacity	350 ml
Pulp Container Capacity	1300 ml



Image: Diagram showing the dimensions of the juicer: 11.0 inches in height, 8.5 inches in depth, and 6.0 inches in width, with a close-up of the 65mm/2.5" wide mouth.

8. WARRANTY AND SUPPORT

Specific warranty details are typically provided with your purchase documentation. Please refer to the warranty card or contact the retailer for information regarding your product's warranty period and terms.

For technical support, replacement parts, or any inquiries not covered in this manual, please contact COSTWAY customer service through their official website or the contact information provided with your product.