

Udreamer 3-Speed Precision

Udreamer Voksun 3-Speed Precision Turntable with Dual 15 Watt Speakers Instruction Manual

MODEL: 3-SPEED PRECISION

Introduction

Thank you for choosing the Udreamer Voksun 3-Speed Precision Turntable. This high-fidelity vinyl record player is designed to provide an exceptional audio experience with its magnetic cartridge, belt-drive system, and dual 15-watt speakers. It also features Bluetooth connectivity for versatile audio streaming. This manual will guide you through the setup, operation, and maintenance of your new turntable to ensure optimal performance and longevity.

Product Overview

Components and Controls

Familiarize yourself with the various parts of your turntable:

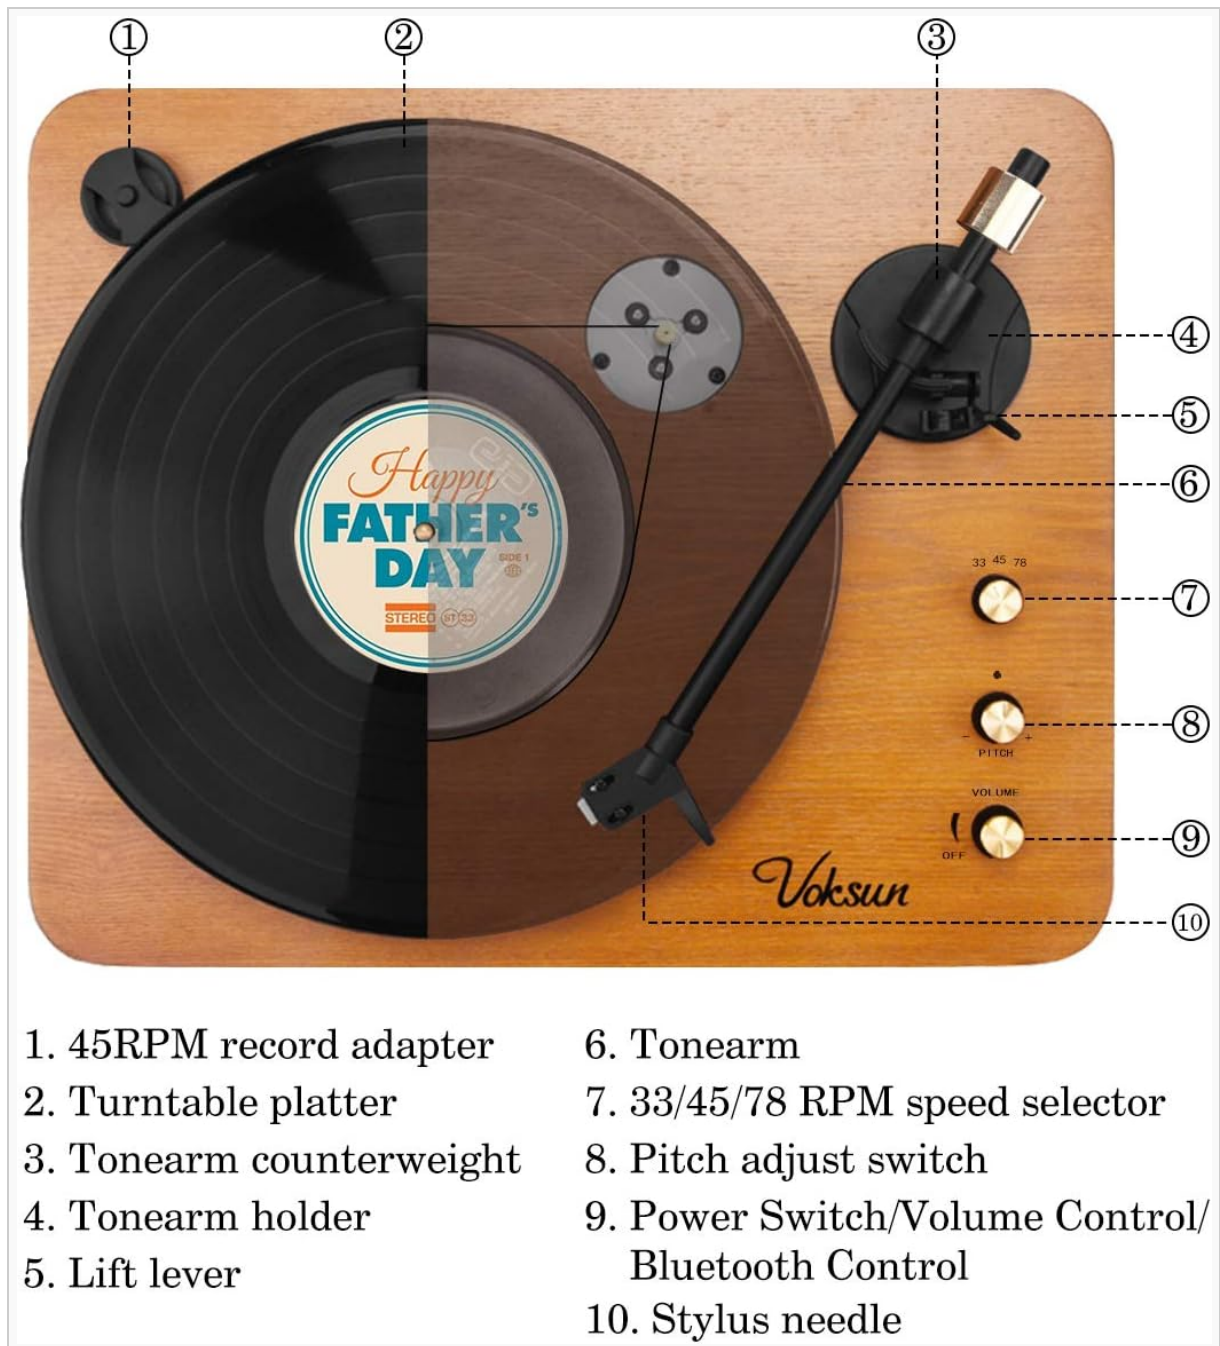


Figure 1: Turntable Components Overview

1. **45 RPM Record Adapter:** Used for playing 7-inch records with a large center hole.
2. **Turntable Platter:** The rotating platform where records are placed.
3. **Tonearm Counterweight:** Balances the tonearm for proper tracking force.
4. **Tonearm Holder:** Secures the tonearm when not in use.
5. **Lift Lever:** Raises and lowers the tonearm gently onto the record.
6. **Tonearm:** Holds the cartridge and stylus.
7. **33/45/78 RPM Speed Selector:** Adjusts the platter speed to match your record.
8. **Pitch Adjust Switch:** Fine-tunes the playback speed.
9. **Power Switch/Volume Control/Bluetooth Control:** Multi-function knob for power, volume, and mode selection.
10. **Stylus Needle:** The needle that reads the grooves of the record.

Setup

1. Unpacking

Carefully remove all components from the packaging. Ensure all parts listed in the Product Overview section are present. Retain packaging for future transport or storage.

2. Belt Installation

The belt is pre-stored in the groove on the back of the iron turntable. To install:

1. Hold up the turntable platter and rotate it 90 degrees.
2. Locate the belt in the groove and carefully place it onto the drive shaft.



Figure 2: Belt Installation Steps

3. Speaker Connection

Connect the included dual 15-watt speakers to the turntable using the provided speaker cables. Ensure the left speaker is connected to the 'SP-L' output and the right speaker to the 'SP-R' output on the rear of the turntable.



Figure 3: Rear Connections for Speakers

4. Power Connection

Connect the power adapter to the DC input on the rear of the turntable, then plug it into a suitable wall outlet.

Operating Instructions

1. Playing a Record

1. Place a record on the turntable platter. If playing a 7-inch record, use the 45 RPM adapter.
2. Select the appropriate speed (33, 45, or 78 RPM) using the speed selector knob.
3. Gently release the tonearm from its holder.
4. Lift the tonearm using the lift lever.
5. Position the tonearm over the desired starting groove of the record.
6. Slowly lower the tonearm using the lift lever. The stylus will make contact with the record, and playback will begin.
7. Adjust the volume using the volume control knob.
8. To stop playback, lift the tonearm using the lift lever, return it to the tonearm holder, and secure it.

2. Speed and Pitch Adjustment

The turntable supports three playback speeds: 33, 45, and 78 RPM. Use the speed selector knob to choose the correct speed for your record. The pitch adjust switch allows for minor adjustments to the playback speed, which can be useful for fine-tuning or correcting slight variations in record pressings.



Figure 4: Speed and Pitch Controls

3. Bluetooth Mode

The turntable features a built-in Bluetooth receiver, allowing you to stream music wirelessly from your

smartphone, tablet, or other Bluetooth-enabled devices through the turntable's speakers.

1. Turn on the turntable.
2. Rotate the Power/Volume/Bluetooth Control knob to select Bluetooth mode. The indicator light will typically change to a blue flashing light, indicating it's in pairing mode.
3. On your external device, enable Bluetooth and search for available devices. Select 'Voksun Turntable' (or similar) from the list.
4. Once paired, the indicator light will become solid blue, and you can begin streaming audio.



Figure 5: Bluetooth Connectivity

4. Operational Videos

Video 1: Demonstrates the Voksun turntable in operation, showcasing its features and sound quality. This video provides a practical overview of the product's functionality.

Video 2: Shows the turntable playing a record, highlighting its ease of use and immediate functionality right out of the box.

Maintenance

1. Cleaning

Regularly dust the turntable and speakers with a soft, dry cloth. Avoid using harsh chemicals or abrasive

cleaners, as these can damage the finish. For records, use a dedicated record cleaning brush and solution to remove dust and static before each play.

2. Stylus Care

The stylus is a delicate component. Clean it periodically with a soft brush designed for stylus cleaning, brushing gently from back to front. Avoid touching the stylus with your fingers. A worn or damaged stylus can harm your records and degrade sound quality. Replace the stylus when necessary.



Figure 6: Audio-Technica Stylus

Troubleshooting

Problem	Possible Cause	Solution
No power	Power adapter not connected or outlet not working.	Ensure power adapter is securely connected to the turntable and a live power outlet.

Problem	Possible Cause	Solution
No sound from speakers	Speakers not connected, volume too low, or incorrect mode.	Check speaker cable connections. Increase volume. Ensure turntable is not in Bluetooth pairing mode if playing records.
Skipping records	Dirty record, worn stylus, or unstable surface.	Clean the record. Inspect and replace stylus if worn. Place turntable on a stable, level surface.
Bluetooth not connecting	Turntable not in pairing mode, device too far, or interference.	Ensure turntable is in Bluetooth pairing mode. Move device closer to the turntable. Restart both devices.

Specifications

Feature	Detail
Brand	Udramer
Model Name	3-Speed Precision
Material	Engineered Wood
Color	Walnut
Speeds	33, 45, 78 RPM
Motor Type	AC Motor
Power Consumption	15 Watts
Connectivity Technology	Wireless (Bluetooth)
Compatible Devices	Speaker
Manufacturer	VOKSUN
UPC	744678239309
ASIN	B083FPMH78

Warranty and Support

Your Udramer Voksun 3-Speed Precision Turntable comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions. For technical support, troubleshooting assistance, or to inquire about replacement parts, please contact Udramer customer service through the retailer where you purchased the product or visit the official Udramer website.

