

[manuals.plus](#) /

› [JOLIKE](#) /

› [JOLIKE 64GB MP3 Player User Manual](#)

JOLIKE M5-16GB-Black

JOLIKE 64GB MP3 Player User Manual

MODEL: M5-16GB-BLACK

1. INTRODUCTION

Thank you for choosing the JOLIKE 64GB MP3 Player. This portable music player is designed to provide a high-fidelity audio experience with versatile features. It boasts a full touch screen, Bluetooth 5.3 connectivity, and a compact design, making it ideal for various activities including sports, travel, and daily use.

Key features include:

- Full 1.8-inch Touch Screen for intuitive navigation.
- Bluetooth 5.3 for stable and fast wireless audio streaming.
- HiFi Lossless Sound Quality with professional digital noise reduction.
- Multi-functional capabilities: FM radio, voice recording, picture browsing, video playback, e-book reading (TXT format), and a built-in pedometer.
- Integrated speaker for audio playback without headphones.



The JOLIKE 64GB MP3 Player, showcasing its touch screen interface and compact design.

2. WHAT'S IN THE Box

Please check the package contents upon unboxing to ensure all items are present:

- 1 × Bluetooth MP3 Player
- 1 × Wired Headphones
- 1 × USB Cable
- 1 × Anti-Lost Rope
- 1 × Silicon case
- 1 × User Manual (this document)



Packing box



Mp3 Player

JOLIKE Music Player M5
User Manual



User Manual



Earphones



USB Cable



Anti-lost rope



Protective case

All components included in the JOLIKE MP3 Player package.

3. SETUP

3.1 Charging the Device

Before first use, fully charge the MP3 player. Connect the included USB cable to the device's charging port and the other end to a USB power adapter (not included) or a computer's USB port. The battery indicator on the screen will show charging status.

3.2 Power On/Off

To power on, press and hold the power button located on the side of the device until the screen lights up. To power off, press and hold the power button until the power-off prompt appears, then confirm.

3.3 Transferring Files

Connect the MP3 player to your computer using the provided USB cable. The device will appear as a removable disk. You can then drag and drop music, video, picture, and e-book files directly into the appropriate folders on the device. Ensure files are in supported formats (MP3 / WMA / APE / FLAC / WAV / ACELP for audio; TXT for e-

books).

3.4 Bluetooth Pairing

The MP3 player supports Bluetooth 5.3 for connecting to wireless headphones or speakers. Note that this device acts as a Bluetooth transmitter and cannot be paired with mobile phones.

1. Go to the 'Bluetooth' menu on the MP3 player.
2. Turn on Bluetooth.
3. Ensure your Bluetooth headphones or speaker are in pairing mode.
4. Select 'Search for devices' on the MP3 player.
5. Choose your device from the list to connect.

Bluetooth 5.3

Bluetooth Headphones



Bluetooth Speakers



Bluetooth Earbuds



The MP3 player's Bluetooth 5.3 feature allows connection to various audio devices.

4. OPERATING INSTRUCTIONS

4.1 Touch Screen Navigation

The MP3 player features a responsive touch screen for easy navigation. Swipe left or right to browse through menus

and tap icons to select functions or confirm actions. Use the back arrow icon to return to the previous screen.

Full Touch Screen

Simple touch the screen to control the device



Easy to use
and sensitive



Interacting with the MP3 player's full touch screen for simple and sensitive control.

4.2 Music Playback

From the main menu, select 'Music'. You can browse your music by artist, album, genre, or all songs. Tap a song to begin playback. Use the on-screen controls for play/pause, skip tracks, and volume adjustment. The device supports MP3, WMA, APE, FLAC, WAV, and ACELP audio formats.

4.3 FM Radio

To use the FM radio, connect wired headphones as they act as the antenna. Navigate to the 'FM Radio' option from the main menu. You can auto-scan for stations or manually tune to a specific frequency.

4.4 Voice Recording

Select 'Record' from the main menu to access the voice recorder. Tap the record button to start and stop recordings. Recordings are saved internally and can be accessed through the file browser.

4.5 E-Book Reader

The MP3 player supports e-books in TXT format. Transfer your TXT files to the device and select 'eBook' from the main menu to read them. You can adjust font size and navigate pages using the touch screen.

4.6 Pedometer Function

The built-in pedometer tracks your steps, making it suitable for fitness activities. Access the 'Pedometer' function from the main menu to start tracking your activity. It displays step count and duration.



Pedometer

Keep tracking your steps
Very suitable for sports
fitness running, and travel

The pedometer feature helps track your steps during exercise or travel.

4.7 Video Playback

The device supports video playback. For optimal performance, it is recommended to convert video files to a compatible format and resolution before transferring them to the device. Access videos through the 'Video' option in the main menu.

Your browser does not support the video tag.

Official video demonstrating various features and functions of the JOLIKE MP3 player.

5. MAINTENANCE

5.1 Cleaning

Wipe the device with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as they may damage the

screen or casing.

5.2 Battery Care

To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for extended periods. Store in a cool, dry place.

5.3 Storage

When not in use, store the MP3 player in its protective silicon case to prevent scratches and minor impacts. Keep it away from extreme temperatures, direct sunlight, and high humidity.

6. TROUBLESHOOTING

If you encounter issues with your JOLIKE MP3 player, please refer to the following common solutions:

- **Device not turning on:** Ensure the battery is charged. Connect to a power source and try again.
- **Cannot connect to Bluetooth:** Make sure the Bluetooth device is in pairing mode and within range. Ensure the MP3 player's Bluetooth is enabled. Remember, the MP3 player is a transmitter only.
- **No sound:** Check volume levels. Ensure headphones are properly connected or Bluetooth device is paired and connected.
- **Files not playing:** Verify that the files are in a supported format and are not corrupted. Re-transfer the files if necessary.
- **Screen unresponsive:** Try restarting the device by holding the power button.

For more detailed troubleshooting, please refer to the official [Troubleshooting Guide \(PDF\)](#).

7. SPECIFICATIONS

Feature	Detail
Brand	JOLIKE
Model Name	M5
Product Dimensions	1.89 x 1.54 x 0.39 inches
Item Weight	1.76 ounces
Memory Storage Capacity	64 GB
Connectivity Technology	Bluetooth 5.3
Screen Size	1.8 Inches
Color	Black
Special Features	Built-In Speaker, Voice Recorder, Touch Screen, Equalizer, FM Radio
Compatible Devices	Windows 7-10
Media Type	Micro SD
Batteries	1 Lithium Polymer battery (included)
Manufacturer	JOLIKE

Country of Origin	China
-------------------	-------

8. WARRANTY & SUPPORT

JOLIKE products are manufactured with quality and reliability in mind. For any warranty claims or technical support, please contact the seller (YC Tech) through your purchase platform or refer to the official JOLIKE website for support information.

You can also find additional resources, including this user manual, at the following link: [JOLIKE MP3 Player User Manual \(PDF\)](#).

© 2024 JOLIKE. All rights reserved.

Related Documents - M5-16GB-Black

	<p>JOLIKE MP3 Player User Manual</p> <p>Comprehensive user manual for the JOLIKE MP3 Player, detailing its features, operations, and specifications. Learn how to enjoy music, videos, FM radio, and e-books with this portable device.</p>
	<p>JOLIKE MP3 Player FAQ: Troubleshooting and Usage Guide</p> <p>Find answers to common questions about the JOLIKE MP3 Player, including connectivity issues, music transfer, playlist creation, Bluetooth problems, and video playback. This guide provides solutions and tips for optimal use.</p>
	<p>JOLIKE M4 Music Player User Manual</p> <p>Comprehensive user manual for the JOLIKE M4 Music Player, covering setup, features like music playback, movie support, FM radio, Bluetooth connectivity, e-book reading, and settings.</p>
	<p>JOLIKE M1 User Manual: Features, Operation, and Specifications</p> <p>Comprehensive user manual for the JOLIKE M1 device, detailing its features, how to get started, music control, Bluetooth connectivity, recorder functions, e-book reader, and technical specifications.</p>



[AGPTEK H9 MP3 Player User Manual](#)

A comprehensive user manual for the AGPTEK H9 MP3 Player, covering charging, button controls, basic operations, music playback, FM radio functions, Bluetooth connectivity, recording features, tools, settings, and troubleshooting.