

generic SUPTPB006

Replacement Remote Control User Manual

Model: SUPTPB006

INTRODUCTION

This manual provides comprehensive instructions for the operation and maintenance of your new replacement remote control. This remote is designed to function as a direct replacement for the original Yamaha soundbar YSP-2200 remote control (FSR111, WV21820). It is a high-quality, new product that requires no programming. Simply insert the batteries, and it is ready for immediate use.

PRODUCT OVERVIEW





Figure 1: Front view of the replacement remote control. This image displays the ergonomic design and the layout of all functional buttons, including power, input selection, volume, channel controls, and navigation keys.








Keys & Functions LAYOUT				
	ORIGINAL	SUPERIOR	ORIGINAL	SUPERIOR
	POWER	POWER	ENHANCER	EPG
	MUTE	MUTE	ENTERTAINMENT	FAV
	MENU	MENU	SUBWOOFER -	GREEN
	OFF	EXIT	PLAY / PAUSE	YELLOW
	INPUT 1 - 3	1	SUBWOOFER+	BLUE
	HDMI 1 - 3	2	MUSIC	SHIFT+MUTE
	TV	3	SURROUND	SHIFT+ 
	CH LEVEL	- / -	UNIVOLUME	SHIFT+ 
	MOVIE			
	DOCK			
	SETUP			
	OPTION			
	VOLUME +	VOL +		
	VOLUME -	VOL -		
	SKIP NEXT	P +		
	SKIP PREV	P -		
	UP	UP		
	DOWN	DOWN		
	LEFT	LEFT		
	RIGHT	RIGHT		
	ENTER	OK		
	RETURN	BACK		
	SLEEP	SLEEP		
	STEREO	TV/DTV		
	INFO	INFO		

Figure 2: Keys & Functions Layout. This chart provides a detailed comparison of button functionalities between the original Yamaha remote and this replacement remote, indicating which replacement button corresponds to the original function.

SETUP

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or outwards to open it.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover by sliding it back into place until it clicks securely.

Note: This remote control does not require any programming. It is ready for use immediately after battery insertion.

OPERATING INSTRUCTIONS

This replacement remote control is designed to replicate the functions of your original Yamaha soundbar remote. Refer to Figure 1 for the button layout and Figure 2 for a comparison of original vs. replacement button functions.

Basic Functions

- **Power ():** Press to turn the soundbar on or off.
- **TV/DTV:** Selects the TV/Digital TV input.
- **TV, SAT, DVD, AUX:** Selects the corresponding input source on your soundbar.
- **Volume (+V / -V):** Increases or decreases the soundbar's volume.
- **Mute ():** Mutes or unmutes the sound.
- **Number Buttons (0-9):** Used for direct input selection or other numerical entries as per your soundbar's capabilities.
- **Navigation (◀▶ ▲ ▼ OK):** Used to navigate menus and confirm selections.
- **MENU:** Accesses the soundbar's main menu.

- **EXIT:** Exits the current menu or screen.
- **BACK:** Returns to the previous screen or menu.
- **INFO:** Displays information about the current input or settings.

Advanced Functions (Refer to Figure 2 for specific mappings)

- **SLEEP:** Activates the sleep timer function.
- **FAV:** Accesses favorite settings or channels.
- **SHIFT:** Used in combination with other buttons for secondary functions, as indicated in Figure 2.
- **SOURCE:** Cycles through available input sources.
- **SIZE:** Adjusts display size or aspect ratio.
- **SETUP:** Enters the setup menu.
- **SUBT.:** Toggles subtitles on/off.
- **P+ / P-:** Navigates through presets or channels.
- **Media Control Buttons ():Play, Pause, Stop, Rewind, Fast Forward, Skip Back, Skip Forward.**
- **EPG:** Accesses the Electronic Program Guide.

For detailed functionality of specific buttons, please consult your Yamaha soundbar’s original user manual in conjunction with Figure 2 of this manual.

MAINTENANCE

Cleaning

- Wipe the remote control with a soft, dry cloth.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not spray cleaner directly onto the remote.
- Avoid using harsh chemicals, solvents, or abrasive cleaning pads, as these can damage the remote's surface or internal components.

Battery Care

- Replace batteries when the remote's performance diminishes or stops working.
- If the remote will not be used for an extended period (e.g., one month or more), remove the batteries to prevent leakage and potential damage.
- Dispose of used batteries according to local regulations.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote control does not work.	Batteries are dead or inserted incorrectly.	Replace batteries with new AAA batteries, ensuring correct polarity (+/-).

Problem	Possible Cause	Solution
Remote control range is poor.	Weak batteries; Obstruction between remote and soundbar; Infrared sensor on soundbar is blocked.	Replace batteries. Ensure a clear line of sight to the soundbar's IR sensor. Remove any obstructions.
Certain buttons do not respond.	Button is stuck or damaged; Function not supported by soundbar.	Gently press the button multiple times. If still unresponsive, the button may be faulty. Verify the function is supported by your specific soundbar model.
Remote works intermittently.	Low battery power; Loose battery connection.	Replace batteries. Ensure batteries are seated firmly in the compartment.

SPECIFICATIONS

- **Model Number:** SUPTPB006
- **Compatible Devices:** Yamaha Soundbar YSP-2200 (FSR111, WV21820)
- **Connectivity Technology:** Infrared
- **Power Source:** 2 x AAA Batteries (not included)
- **Item Weight:** 2.89 ounces (approx. 82 grams)
- **Package Dimensions:** 7.8 x 2.01 x 1.02 inches (approx. 19.8 x 5.1 x 2.6 cm)
- **Manufacturer:** Superior electronics
- **Country of Origin:** China

WARRANTY AND SUPPORT

As a generic replacement product, specific warranty details may vary by retailer. Please refer to the purchase documentation or contact your seller for information regarding warranty coverage and support.

For operational issues related to your Yamaha soundbar, please consult the original Yamaha soundbar user manual or Yamaha's official support channels.

