

## Cshidworld Wireless Bluetooth 5.0 Earbuds

# Cshidworld Wireless Bluetooth 5.0 Earbuds User Manual

Model: Wireless Bluetooth 5.0 Earbuds (ASIN: B083GMRDWB)

## INTRODUCTION

Thank you for choosing Cshidworld Wireless Bluetooth 5.0 Earbuds. This manual provides detailed instructions on how to set up, operate, and maintain your new earbuds. Please read this manual carefully before use to ensure optimal performance and longevity of your device.

## PRODUCT OVERVIEW & PACKAGE CONTENTS

Your Cshidworld Wireless Bluetooth 5.0 Earbuds package includes the following items:

- Wireless Bluetooth Earbuds (Left and Right)
- Portable Charging Case
- USB Charging Cable
- User Manual



Image: Contents of the Cshidworld Wireless Earbuds package, showing the earbuds, charging case, USB cable, and user manual.



Image: The Cshidworld Wireless Earbuds resting inside their compact black charging case, ready for use or charging.

## SETUP GUIDE

### Initial Charging

Before first use, ensure both the earbuds and the charging case are fully charged. Connect the charging case to a USB power source using the provided USB cable. The indicator lights on the case will show charging status.

## One-Step Pairing

The Cshidworld Wireless Earbuds feature an automatic one-step pairing technology:

1. Take both earbuds out of the charging case. They will automatically power on and enter pairing mode.
2. On your device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "Cshidworld Earbuds" (or similar name) from the list to connect. Once connected, you will hear a confirmation tone.

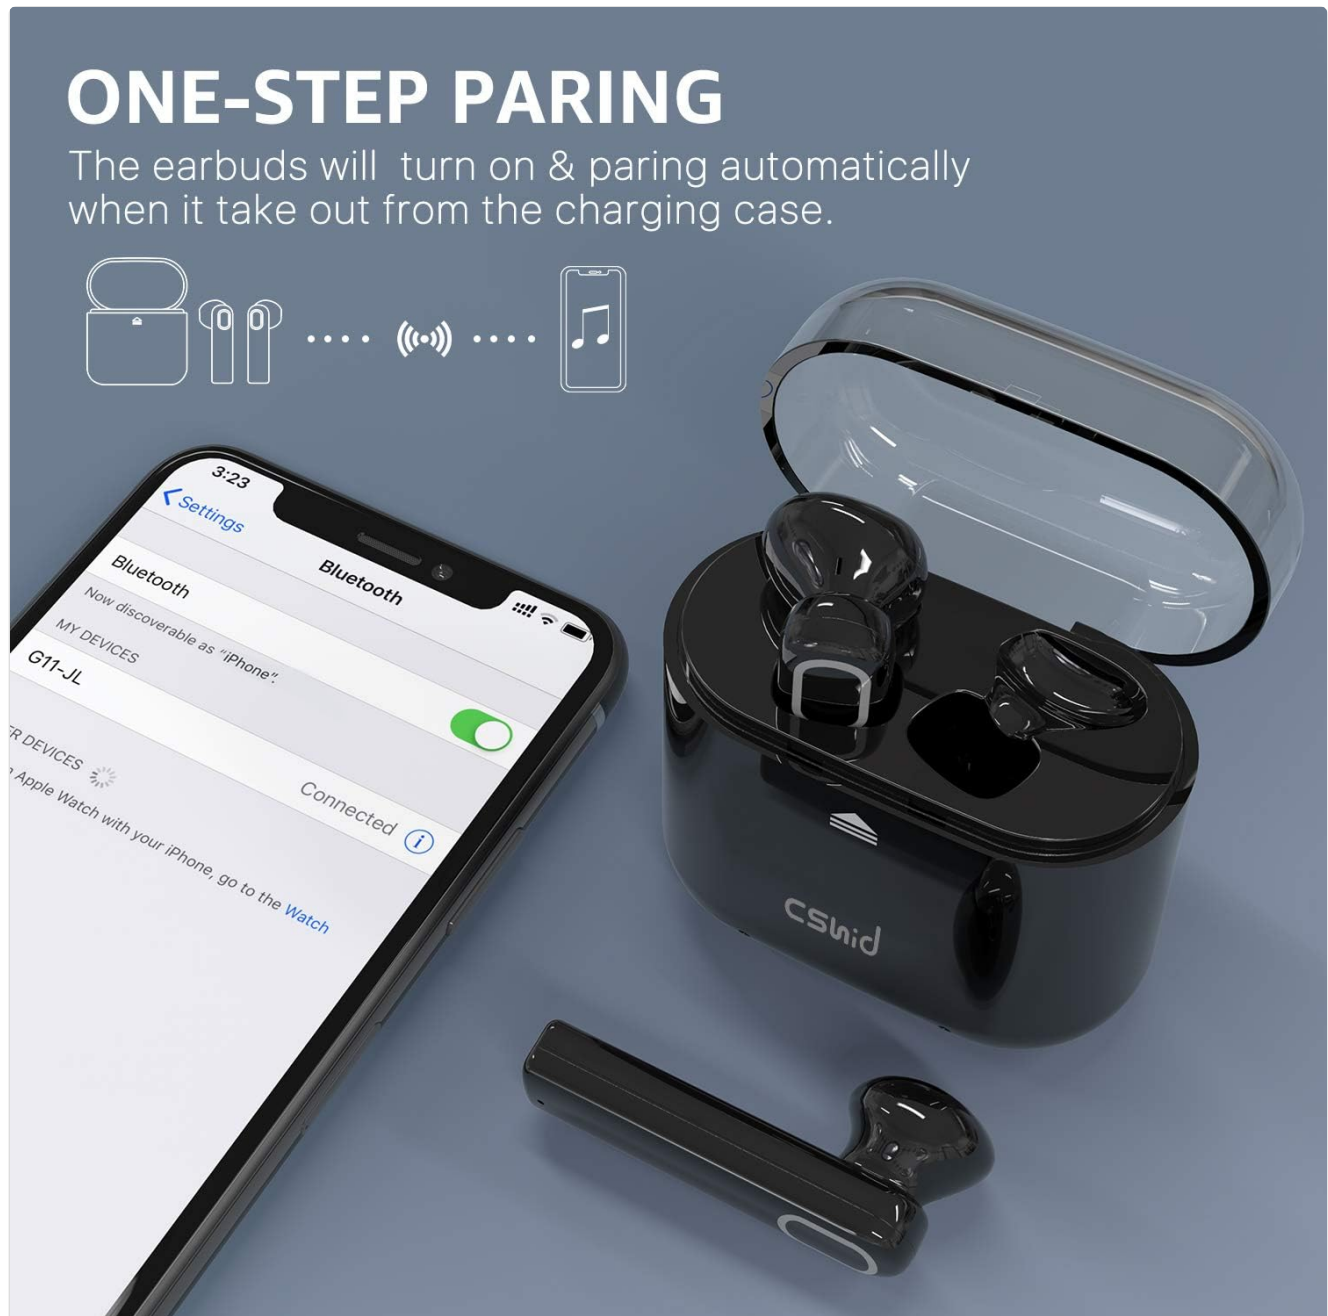


Image: Visual guide demonstrating the one-step pairing process, showing earbuds being removed from the case and connecting to a smartphone via Bluetooth.


After the initial pairing, the earbuds will automatically connect to the last paired device when removed from the charging case, provided Bluetooth is enabled on your device.

## OPERATING INSTRUCTIONS

The earbuds are equipped with touch controls for easy operation:

Function	Action
Play/Pause Music	Single tap on either earbud.
Next Track	Double tap on the right earbud.
Previous Track	Double tap on the left earbud.
Answer/End Call	Single tap on either earbud during an incoming call.
Reject Call	Press and hold either earbud for 2 seconds during an incoming call.
Activate Voice Assistant	Triple tap on either earbud.

For optimal call quality, the earbuds feature dual microphones with uplink noise cancellation and passive noise isolation.

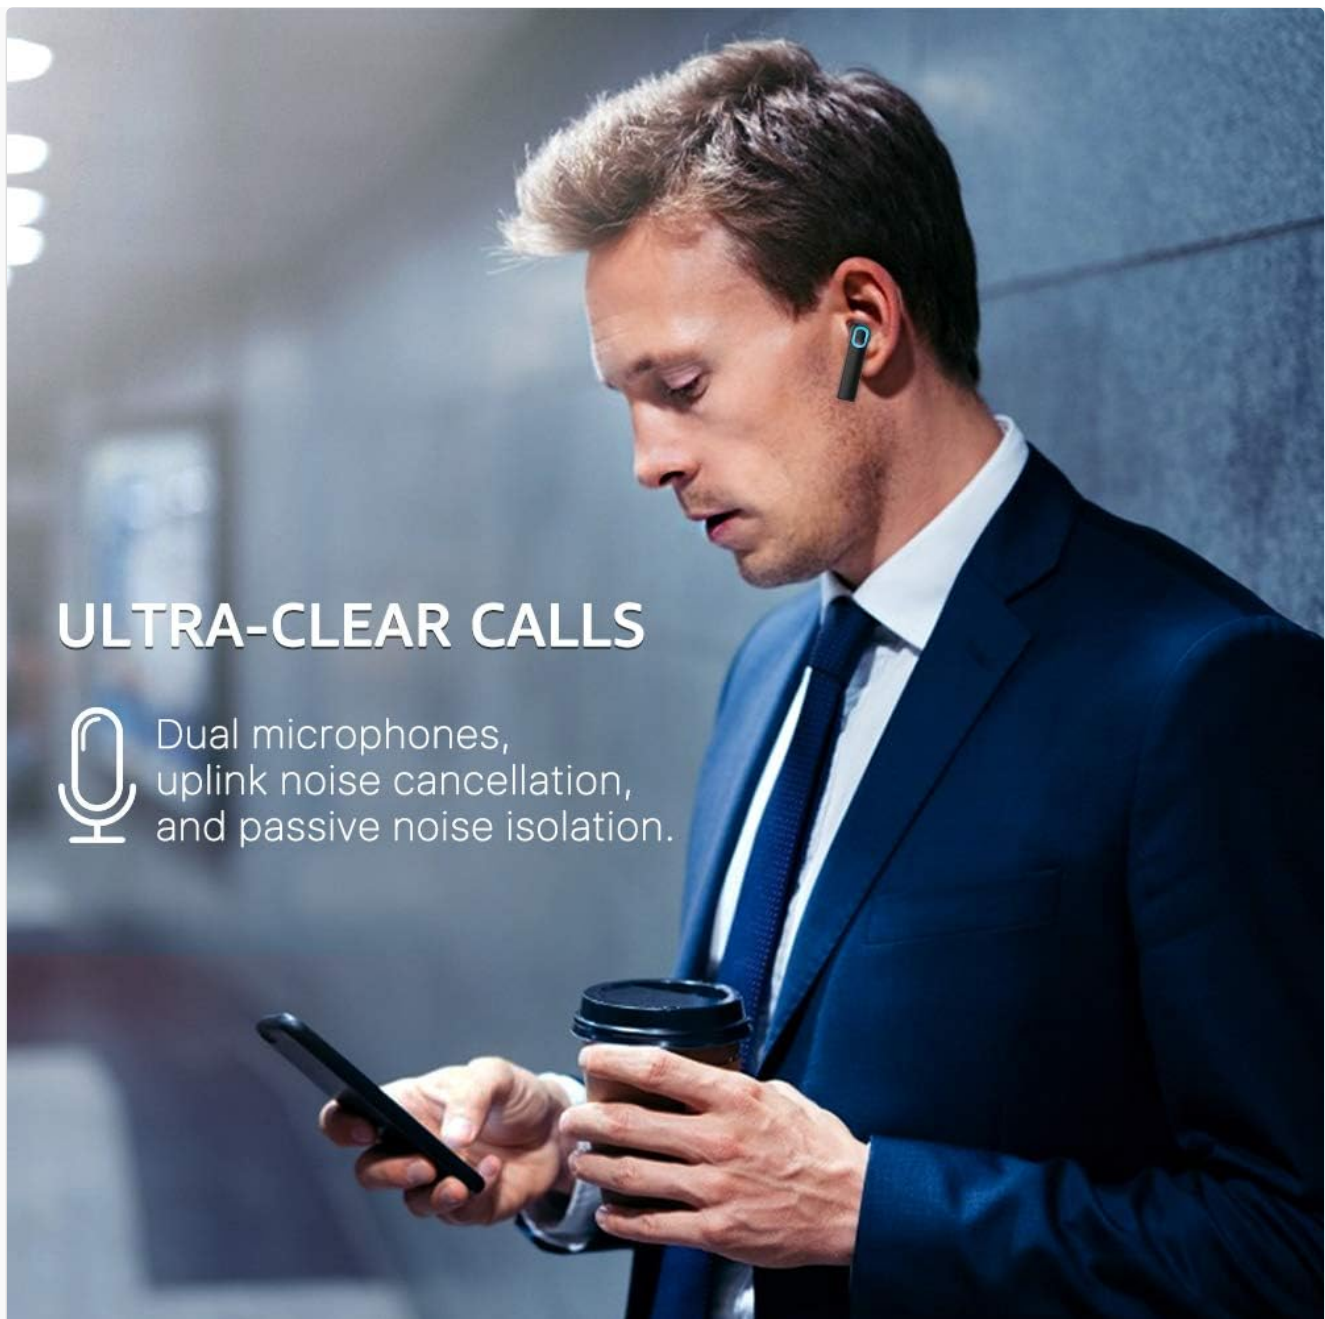

## ULTRA-CLEAR CALLS



Dual microphones,  
uplink noise cancellation,  
and passive noise isolation.

Image: A man wearing the Cshidworld Wireless Earbuds, illustrating the product's capability for ultra-clear calls in a professional setting.

## CHARGING YOUR EARBUDS AND CASE

### Charging the Earbuds

Place the earbuds into the charging case. They will automatically power off and begin charging. The indicator lights on the earbuds will show their charging status.

### Charging the Case

Connect the charging case to a USB power adapter (not included) or a computer's USB port using the provided USB cable. The charging case takes approximately 1.5 hours to fully charge.

A fully charged case can provide up to 6 full charges for the earbuds, offering more than 30 hours of total playback time.



# MORE AND LONGER



*Charging Time*



*MusicTime*



*Cyc play time*

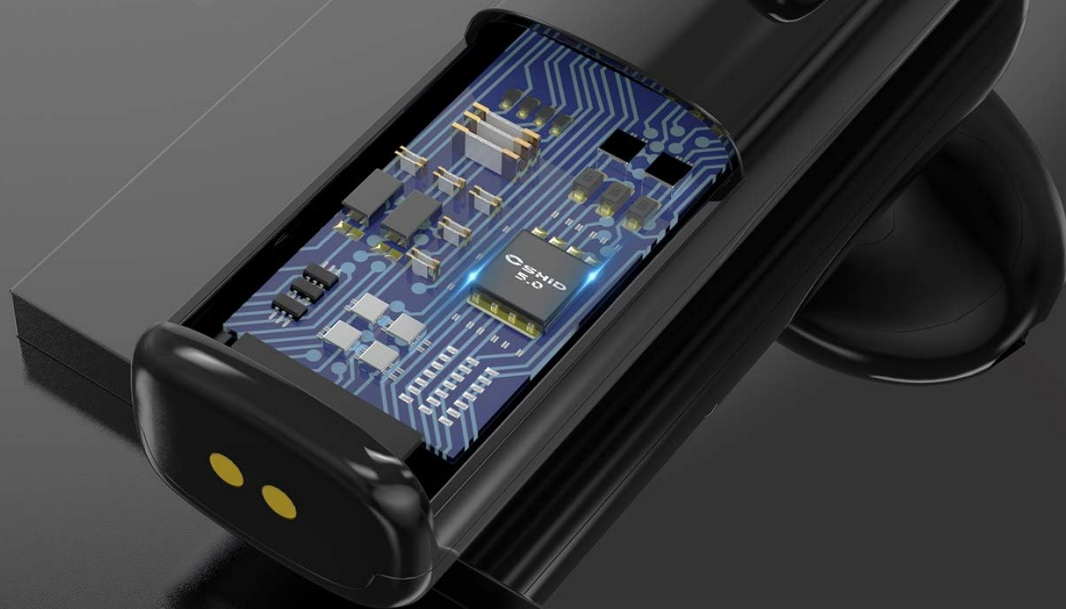


Image: Infographic detailing the charging time (1 hour for earbuds), music playback time (5 hours per charge), and total cycle play time (30+ hours with charging case).

## KEY FEATURES

- **High Fidelity Music Quality:** Advanced Bluetooth with A2DP/AVRCP audio processing system delivers high-fidelity sound.
- **Bluetooth 5.0 Connectivity:** Ensures faster pairing speed, stable connectivity, and a range of up to 33 feet (10 meters).
- **Ergonomic Design & Lightweight:** Designed for a secure and comfortable fit, ideal for extended wear and active lifestyles.
- **IP67 Waterproof:** Resistant to sweat and water, making them suitable for gym, sports, and outdoor activities.

BLUETOOTH



## TWS & BLUETOOTH 5.0

For an audio performance as good as wired  
Stable connection and strong signal even in  
complex enironments

Image: Detailed view of the internal circuitry of the Cshidworld Wireless Earbuds, emphasizing the TWS (True Wireless Stereo) and Bluetooth 5.0 technology for stable and high-performance audio.





## IP67 SWEAT-RESISTANT



Bring it over, boost your  
energy, burn your calorie

Image: A man engaged in physical activity, showing the Cshidworld Wireless Earbuds in use, highlighting their IP67 sweat-resistant design.

### MAINTENANCE AND CARE

- **Cleaning:** Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use, store the earbuds in their charging case to protect them and keep them charged.
- **Avoid Extreme Conditions:** Do not expose the earbuds or case to extreme temperatures, humidity, or direct sunlight for prolonged periods.
- **Water Exposure:** While IP67 waterproof, avoid submerging the earbuds in water. Dry them thoroughly if they get wet from sweat or splashes.

TROUBLESHOOTING

Problem	Solution
Earbuds not pairing/connecting.	Ensure earbuds are charged. Turn off and on Bluetooth on your device. Forget the device in your Bluetooth settings and re-pair. Ensure earbuds are close to the device.
Only one earbud working.	Place both earbuds back into the charging case, close the lid, wait a few seconds, then take them out again. This often re-syncs them.
No sound or low volume.	Check volume levels on both your device and the earbuds. Ensure earbuds are properly connected. Try playing different audio.
Charging case not charging.	Ensure the USB cable is securely connected to both the case and the power source. Try a different USB port or power adapter.

SPECIFICATIONS

Feature	Detail
Brand	Cshidworld
Model	Wireless Bluetooth 5.0 Earbuds (ASIN: B083GMRDWB)
Connectivity Technology	Wireless (Bluetooth 5.0)
Bluetooth Range	Up to 10 meters (33 feet)
Earbud Playback Time	Approx. 5 hours per charge
Total Playback Time (with case)	Over 30 hours
Charging Time (Case)	Approx. 1.5 hours
Water Resistance Level	IP67 Waterproof
Control Method	Touch
Item Weight	80 Grams (total) / 2.82 ounces
Product Dimensions	2 x 2 x 0.8 inches
Noise Control	Active Noise Cancellation (for calls)

WARRANTY AND SUPPORT

Cshidworld products are designed for reliability and performance. For any questions, technical support, or warranty inquiries, please contact Cshidworld customer service through the retailer's platform or the official Cshidworld website.

Please retain your proof of purchase for warranty claims.