

[Manuals.plus](#) /

› [Rowenta](#) /

› Rowenta Trimmer Guide Comb Instruction Manual for Evasion Logic Series

Rowenta HC050, TN1010, TN1350, TN5020

Rowenta Trimmer Guide Comb Instruction Manual

For Evasion Logic Series Models: HC050, TN1010, TN1350, TN5020

1. INTRODUCTION

This manual provides essential instructions for the proper use, installation, and maintenance of your Rowenta Trimmer Guide Comb. This accessory is designed to ensure precise and consistent trimming results with compatible Rowenta hair clippers. Please read this manual thoroughly before using the product.

2. PRODUCT OVERVIEW

The Rowenta Trimmer Guide Comb is a 3mm replacement accessory designed for specific Rowenta hair clipper models. It helps maintain a uniform hair length during trimming.



Figure 1: Rowenta 3mm Trimmer Guide Comb. This image shows the black plastic guide comb with multiple teeth, designed to attach to a hair clipper for uniform hair length cutting. The material type "ABS" is visible on the comb's surface.

3. COMPATIBILITY

This 3mm guide comb is compatible with the following Rowenta hair clipper models:

- Rowenta Evasion Series: TN5020 (A0/7R0, B0/7R0, B2/7R0, C0/7R0, C1/7R0, D0/7R0, D2/7R0, E0/7R0)
- Rowenta Logic Series: HC050, HC051, HC052, TN1003, TN1010 (C0/7R0, D0/7R0, F0/7R0, V0/7R0, A0/7R0), TN1011 (C0/7R0, D0/7R0, F0/7R0), TN1012 (C0/7R0, D0/7R0, F0/7R0), TN1013 (C0/7R0, F0/7R0), TN1014 (C0/7R0, F0/7R0), TN1020, TN1350
- Other compatible models include: 957000, 957005, 957007, 957010, 957020, 959700, HC103

Note: Always verify the model number of your hair clipper, typically found on the information board under the appliance, to ensure compatibility before attaching the guide comb.

4. SAFETY INSTRUCTIONS

- Ensure the hair clipper is turned off and unplugged before attaching or detaching the guide comb.
- Inspect the guide comb for any damage (cracks, broken teeth) before each use. Do not use a damaged comb.
- Keep the guide comb clean and free from hair and debris to ensure proper function and hygiene.
- This accessory is intended for personal grooming only.

5. SETUP

1. **Prepare the Clipper:** Ensure your Rowenta hair clipper is clean, dry, and turned off.

2. **Align the Comb:** Hold the guide comb with the teeth facing away from you. Align the attachment clips on the guide comb with the corresponding slots on the clipper blade head.
3. **Attach the Comb:** Gently push the guide comb onto the clipper blade head until it clicks securely into place. Ensure it is firmly attached and does not wobble.
4. **Verify Attachment:** Lightly tug on the comb to confirm it is securely fastened before turning on the clipper.

6. OPERATING INSTRUCTIONS

Once the 3mm guide comb is securely attached to your Rowenta hair clipper:

1. **Power On:** Turn on your hair clipper.
2. **Trimming Technique:** Hold the clipper with the guide comb flat against the skin or hair surface. Move the clipper slowly and steadily against the direction of hair growth for an even cut.
3. **Consistent Pressure:** Apply consistent, light pressure to ensure the guide comb maintains contact with the skin/hair, preventing uneven cuts.
4. **Clean Regularly:** During extended trimming sessions, periodically turn off the clipper and remove accumulated hair from the comb and blades to maintain performance.
5. **Power Off:** After use, turn off the hair clipper before detaching the guide comb.

7. MAINTENANCE

Proper maintenance ensures the longevity and performance of your guide comb:

- **Cleaning:** After each use, detach the guide comb from the clipper. Use a small brush (often supplied with the clipper) to remove any trapped hair. You may rinse the comb under running water if it is specified as washable by your clipper's manual. Ensure it is completely dry before reattaching or storing.
- **Storage:** Store the guide comb in a clean, dry place, away from direct sunlight and extreme temperatures.
- **Inspection:** Periodically inspect the comb for wear and tear. Replace if any teeth are broken or if the comb no longer attaches securely.

8. TROUBLESHOOTING

- **Comb does not attach securely:**
 - Ensure the guide comb is correctly aligned with the clipper blade head.
 - Check for any debris obstructing the attachment clips or slots.
 - Verify that the guide comb is compatible with your specific clipper model.
 - Inspect the comb and clipper for any damage that might prevent secure attachment.
- **Uneven trimming:**
 - Ensure the guide comb is fully and securely attached.
 - Move the clipper slowly and consistently against the direction of hair growth.
 - Clean the comb and clipper blades, as accumulated hair can affect cutting performance.

9. SPECIFICATIONS

Product Type	Trimmer Guide Comb (Replacement Part)
Brand	Rowenta
Cutting Length	3 mm
Material	ABS Plastic
Compatible Models	Rowenta Evasion Series (e.g., TN5020), Rowenta Logic Series (e.g., HC050, TN1010, TN1350), and others as listed in Section 3.
Dimensions (Approx.)	18.2 x 6.8 x 1.6 cm (Package dimensions)
Weight (Approx.)	10 g (Package weight)
ASIN	B083GX26QG

10. WARRANTY AND SUPPORT

For warranty information regarding your Rowenta hair clipper or this accessory, please refer to the documentation provided with your original hair clipper purchase. For further assistance or to purchase additional Rowenta accessories, please visit the official Rowenta store or contact Rowenta customer support.

Official Rowenta Store: [Rowenta Store on Amazon.nl](#)