



[Manuals.plus](#) /

› [Donner](#) /

› Donner DLP-124B Electric Guitar User Manual

Donner DLP-124B

Donner DLP-124B Electric Guitar User Manual

Full-Size 39 Inch LP Solid Body Electric Guitar Beginner Kit

INTRODUCTION

Thank you for choosing the Donner DLP-124B Electric Guitar. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your new instrument. The DLP-124B is a full-size 39-inch LP style electric guitar designed for beginners and enthusiasts, featuring humbucker pickups and a comfortable "C" shaped neck profile.



Image: The Donner DLP-124B Electric Guitar, a full-size 39-inch LP style instrument.

SETUP

1. Unboxing and Initial Inspection

Carefully remove the guitar and accessories from the packaging. Inspect the guitar for any visible damage. The kit includes a gig bag, guitar strap, and guitar cable.

QUALITY ACCESSORIES



Image: The DLP-124B electric guitar shown with its included gig bag, strap, and cable.

Your browser does not support the video tag.

Video: An unboxing demonstration of the Donner DLP electric guitar, showing how to safely remove the instrument and its accessories from the packaging.

2. Connecting to an Amplifier

Use the provided instrument cable to connect your guitar to an amplifier. Insert one end of the cable into the guitar's output jack (typically located on the lower bout of the body) and the other end into the input jack of your amplifier. Ensure your amplifier is turned off before connecting or disconnecting the cable.

3. Tuning the Guitar

Before playing, tune your guitar. Standard tuning from thickest to thinnest string is E-A-D-G-B-e. You can use a digital tuner, a tuning app, or an online tuner.

1. Turn on your tuner.
2. Pluck each string individually.
3. Adjust the corresponding tuning peg on the headstock until the tuner indicates the correct pitch for each string.
4. Repeat for all six strings.

OPERATING YOUR GUITAR

1. Controls Overview

The DLP-124B features two humbucker pickups, a 3-way pickup selector switch, a master volume knob, and two tone knobs.

- **Volume Knob:** Controls the overall output volume of the guitar. Turn clockwise to increase volume, counter-clockwise to decrease.
- **Tone Knobs:** Each tone knob typically controls the treble response for a specific pickup or set of pickups. Turn clockwise for brighter tones, counter-clockwise for warmer, darker tones.
- **3-Way Pickup Selector Switch:** This switch allows you to select which pickup(s) are active.
 - **Up Position:** Activates the neck pickup (for warmer, smoother tones).
 - **Middle Position:** Activates both neck and bridge pickups (for a balanced tone).
 - **Down Position:** Activates the bridge pickup (for brighter, sharper tones, often used for lead or rock).

3-WAYS PICKUP SWITCH

Offers Natural & Vibrant Sound



Image: Close-up view of the guitar's control knobs and the 3-way pickup selector switch.

Your browser does not support the video tag.

Video: An overview of the Donner DLP-124B electric guitar kit, highlighting its features and components.

2. Humbucker Pickups

The Donner DLP-124B is equipped with 202S humbucker pickups. These pickups are designed to reduce noise and hum, providing a richer, more powerful, and balanced tone with a full intermediate frequency response. They are suitable for

various genres, including rock and roll and blues.

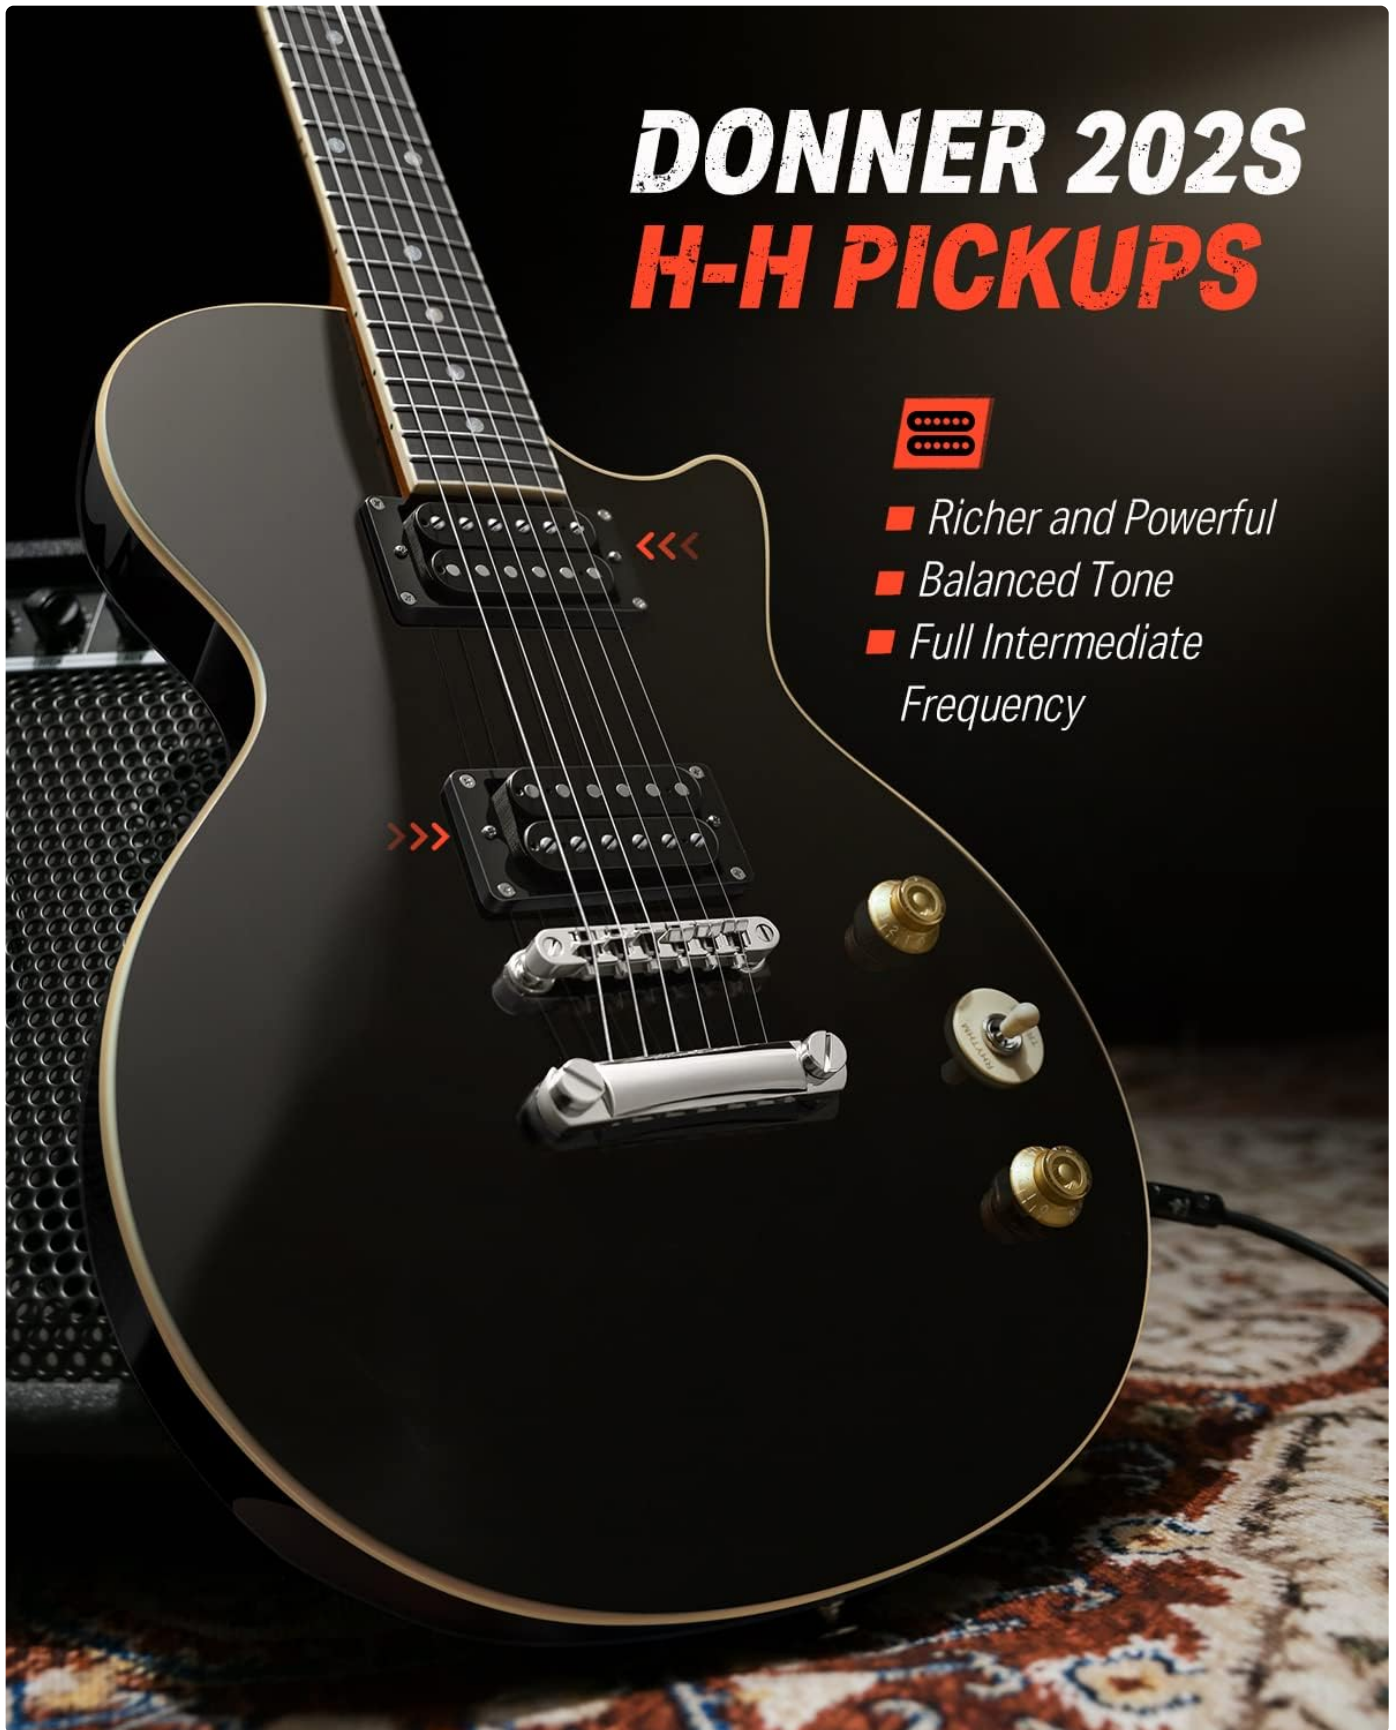


Image: Close-up of the Donner 202S humbucker pickups, designed for rich and powerful tones.

MAINTENANCE

1. Cleaning Your Guitar

Regular cleaning helps preserve your guitar's finish and playability.

- Wipe down the body, neck, and strings with a soft, lint-free cloth after each use to remove sweat and oils.
- For the body, use a guitar-specific polish occasionally to maintain its shine.
- Clean the fretboard with a specialized fretboard cleaner and conditioner to prevent drying and cracking.

2. String Replacement

Strings should be replaced regularly, depending on how often you play and how quickly they corrode. Worn strings can affect tone and intonation.

1. Loosen the old strings using the tuning pegs.
2. Remove the old strings from the bridge and tuning pegs.
3. Thread new strings through the bridge and wind them around the tuning pegs.
4. Stretch the new strings gently and tune them to pitch.

3. General Care and Storage

- Store your guitar in its gig bag when not in use to protect it from dust, humidity changes, and accidental bumps.
- Avoid exposing the guitar to extreme temperatures or humidity, as this can cause damage to the wood.
- Periodically check all screws and hardware for tightness.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No sound from amplifier	<ul style="list-style-type: none">• Cable not fully inserted• Amplifier not turned on or volume too low• Guitar volume knob turned down• Faulty cable	<ul style="list-style-type: none">• Ensure cable is securely connected at both ends.• Check amplifier power and volume settings.• Turn up the guitar's volume knob.• Try a different cable.
Buzzing sound when playing	<ul style="list-style-type: none">• Strings too low (low action)• Uneven frets• Loose hardware	<ul style="list-style-type: none">• Adjust bridge height to raise strings.• Consult a guitar technician for fret leveling.• Check and tighten any loose screws on the bridge or pickups.
Guitar won't stay in tune	<ul style="list-style-type: none">• Old or worn strings• Improper string winding on tuning pegs• Nut issues	<ul style="list-style-type: none">• Replace strings with a fresh set.• Ensure strings are properly wound and stretched.• Consider professional setup if problem persists.

SPECIFICATIONS

Brand	Donner
Model Name	DLP-124B
Model Number	EC1277

Color	Black
Body Material	Basswood
Top Material Type	Maple Wood
Back Material Type	Poplar
Neck Material Type	Okoume Wood
Fretboard Material Type	Perilla
Number of Strings	6
Scale Length	648mm
Guitar Pickup Configuration	H-H (Humbucker-Humbucker)
Guitar Bridge System	Fixed
Hand Orientation	Right
Item Dimensions (L x W x H)	40.75" x 16.93" x 4.72"
Item Weight	4180 Grams
Included Components	Gig bag, guitar strap, guitar cable

WARRANTY AND SUPPORT

Donner provides a **12-month warranty** for this product. For any inquiries or assistance, please contact Donner customer support.

- **Customer Service:** 24/7 services including phone chat and email assistance.
- **Return Policy:** A 30-day free return policy is available.
- For detailed support, please visit the official Donner website or refer to the contact information provided with your purchase.

