

[Manuals.plus](#) /

› [Deco Gear](#) /

› Deco Gear 6FT Universal 4K HDMI 2.0 Cable Instruction Manual

Deco Gear E2DG6FTHDMI

Deco Gear 6FT Universal 4K HDMI 2.0 Cable Instruction Manual

Model: E2DG6FTHDMI

INTRODUCTION

This manual provides instructions for the Deco Gear 6FT Universal 4K HDMI 2.0 Cable. This cable is designed to deliver high-quality audio and video signals between compatible devices, supporting 4K Ultra HD video, HDR, 3D, 2160p, HD 1080p, Ethernet, and Audio Return Channel (ARC). It features 28AWG pure copper conductors and gold-plated connectors for a stable and reliable connection.

The Deco Gear HDMI 2.0 cable is engineered to provide a strong, stable connection with outstanding feedback quality, ensuring an immersive digital experience for your home entertainment setup.

SETUP

Connecting Your HDMI Cable

1. Identify the HDMI ports on your source device (e.g., DVD player, gaming console, computer) and your display device (e.g., TV, monitor, projector).
2. Gently insert one end of the Deco Gear HDMI cable into the HDMI output port of your source device. Ensure the connector is fully seated.
3. Gently insert the other end of the Deco Gear HDMI cable into an available HDMI input port on your display device. Ensure the connector is fully seated.
4. Verify that both connections are secure and free from strain.
5. Select the correct HDMI input on your display device using its remote control or on-screen menu.



Image: Two Deco Gear 6FT Universal 4K HDMI 2.0 Cables, coiled and ready for connection.



Image: Close-up view of the gold-plated HDMI connector pins on a Deco Gear cable, highlighting the robust construction.

OPERATING INSTRUCTIONS

Once the Deco Gear HDMI 2.0 cable is properly connected between your source and display devices, it will automatically transmit audio and video signals. No additional software or drivers are required for basic operation.

- The cable supports bandwidth up to 18Gbps, meeting HDMI 2.0 standards for 4K HDR video at 60Hz, 2160p, and 48-bit/px color depth.
- Ensure your source device and display are configured to output and receive the desired resolution and audio format for optimal performance.
- For features like Audio Return Channel (ARC) or Ethernet over HDMI, ensure both connected devices support these functionalities and are properly configured in their respective settings.

MAINTENANCE

Proper care of your Deco Gear HDMI 2.0 cable will ensure its longevity and consistent performance.

- **Cleaning:** Keep the cable clean and free from dust. Use a soft, dry, lint-free cloth for cleaning the cable and connectors. Avoid using liquid cleaners directly on the connectors.
- **Handling:** Avoid bending the cable sharply or placing heavy objects on it, as this can damage the internal conductors. Always grasp the connector housing when plugging or unplugging the cable, not the cable itself.
- **Storage:** Store the cable in a cool, dry place when not in use. Avoid exposing the cable to extreme temperatures, direct sunlight, or excessive moisture.

TROUBLESHOOTING

If you encounter issues with your Deco Gear HDMI 2.0 cable, refer to the following troubleshooting steps:

- **No Signal or Flickering Image:**
 - Ensure both ends of the HDMI cable are securely connected to the respective ports.
 - Try a different HDMI port on your display device.
 - Verify that the correct input source (HDMI 1, HDMI 2, etc.) is selected on your display using its remote control.
 - Test the cable with another known working device to rule out issues with the source or display.
- **No Audio:**
 - Check the audio settings on both your source device and display to ensure HDMI audio output is enabled and selected.
 - Ensure the cable is fully inserted into both devices.
 - Adjust the volume on both your source device and display.
- **Poor Picture Quality (e.g., blurry, distorted colors):**
 - Ensure your source device and display are set to compatible resolutions. This cable supports 4K resolution; ensure your devices also support 4K for optimal quality.
 - Verify that the cable is not physically damaged.
 - Try a different HDMI port or a different cable if available to isolate the issue.

SPECIFICATIONS

Feature	Detail
Model Number	E2DG6FTHDMI
Brand	Deco Gear
Connector Type	HDMI (A-Male to A-Male)
Cable Type	HDMI 2.0
Length	6 Feet (1.8 meters)
Conductor Material	28AWG Pure Copper
Connector Plating	Gold-plated
Supported Resolutions	4K Ultra HD @ 60Hz, 2160p, 1080p
Supported Features	HDR, 3D, Ethernet, Audio Return Channel (ARC)
Bandwidth	Up to 18Gbps
Compatible Devices	DVD Player, Monitor, PC, Projector, Television, Gaming Consoles (Xbox, PlayStation, Nintendo Switch), Apple TV, Roku TV, Fire TV

WARRANTY AND SUPPORT

For warranty information, technical support, or customer service inquiries regarding your Deco Gear 6FT Universal 4K HDMI 2.0 Cable, please refer to the official Deco Gear website or contact their customer service department directly. It is recommended to keep your purchase receipt as proof of purchase for any warranty claims.

You can visit the Deco Gear store for more information:[Deco Gear Store](#)

© 2023 Deco Gear. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question