

## CUCKOO CRP-M1077S

# Cuckoo CRP-M1077S Electric Pressure Rice Cooker User Manual

Model: CRP-M1077S

## 1. IMPORTANT SAFEGUARDS

---

Please read all instructions carefully before using your Cuckoo CRP-M1077S Electric Pressure Rice Cooker to ensure safe and optimal performance. Keep this manual for future reference.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the main body of the rice cooker in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance cooks under pressure. Improper use may result in scalding injury. Make certain unit is properly closed before operating.
- Never force open the rice cooker. Do not open until unit has cooled and internal pressure has been released.

## 2. PRODUCT OVERVIEW

---

Familiarize yourself with the components of your Cuckoo CRP-M1077S Electric Pressure Rice Cooker.



**Figure 2.1:** Front view of the rice cooker, showing the main body, control panel with display, and lid handle. The control panel features buttons for 'MENU/SELECTION', 'TIME', 'PRESSURE TURBO', 'CANCEL', and 'AUTO CLEAN'.



**Figure 2.2:** The rice cooker with its lid open, revealing the stainless steel inner lid and the cavity for the inner pot. This view highlights the internal structure and sealing mechanism.



**Figure 2.3:** The Xwall Diamond Coated inner pot, featuring clear measurement markings for various rice types such as 'MIXED RICE', 'GLUTIN / MIXED RICE', 'LONG GRAIN', 'BROWN RICE', and 'THIN PORRIDGE', up to 10 cups.



**Figure 2.4:** Rear view of the rice cooker, highlighting the removable water collection tray. This tray gathers condensation and excess moisture during the cooking process.

## Key Components:

- **Main Body:** The primary unit housing the heating element and control system.
- **Inner Pot (Xwall Diamond Coated):** The non-stick cooking pot where rice and water are placed. Features measurement lines.
- **Lid Assembly:** Includes the inner lid, steam vent, and pressure sealing mechanism.
- **Control Panel:** Digital display and buttons for selecting cooking modes, setting time, and other functions.
- **Steam Vent:** Releases steam during and after cooking.
- **Water Collection Tray:** Gathers condensation from the lid.

## 3. SETUP

---

### 3.1 Unpacking and Initial Cleaning

1. Carefully remove the rice cooker and all accessories from the packaging.
2. Wash the inner pot, inner lid, measuring cup, and rice paddle with warm, soapy water. Rinse thoroughly and dry completely.
3. Wipe the exterior of the main body with a damp cloth. Do not immerse the main body in water.

## 3.2 Placement

- Place the rice cooker on a stable, level, and heat-resistant surface.
- Ensure there is adequate space around the unit for proper ventilation and steam release, especially above the steam vent.
- Keep the appliance away from direct sunlight, heat sources, and areas with high humidity.

## 3.3 Power Connection

- Ensure the voltage of your electrical outlet matches the 240V requirement of the rice cooker.
- Plug the power cord securely into the rice cooker's power inlet, then into a grounded wall outlet.

# 4. OPERATING INSTRUCTIONS

---

## 4.1 Preparing Rice

1. Measure the desired amount of rice using the provided measuring cup. Rinse the rice thoroughly until the water runs clear.
2. Place the rinsed rice into the Xwall Diamond Coated inner pot.
3. Add water according to the measurement lines inside the inner pot. For example, for white rice, fill water to the corresponding 'WHITE RICE' line for the number of cups of rice used.
4. Wipe the exterior of the inner pot dry and place it into the main body of the rice cooker. Ensure it is seated correctly.

## 4.2 Starting the Cooking Process

1. Close the lid securely. Ensure the lid handle is locked into position.
2. Plug in the rice cooker. The display will illuminate.
3. Press the 'MENU/SELECTION' button repeatedly to cycle through the available cooking modes (e.g., White Rice, Mixed Rice, Brown Rice, Porridge). The selected mode will be displayed.
4. Once the desired mode is selected, the cooker will automatically begin the cooking process after a few seconds, or you may press the 'START' button if available (refer to specific model display).
5. The display will show the remaining cooking time or a progress indicator.

## 4.3 Special Functions

- **PRESSURE TURBO:** This function allows for faster cooking of certain rice types. Consult the manual for specific usage with different rice modes.
- **KEEP WARM:** After cooking is complete, the rice cooker will automatically switch to 'KEEP WARM' mode to maintain the rice at an optimal serving temperature.
- **CANCEL:** Press the 'CANCEL' button to stop the current cooking cycle or to exit a menu selection.
- **AUTO CLEAN:** This function uses steam to clean the internal components of the cooker. Refer to the

'Maintenance' section for detailed instructions.

## 4.4 After Cooking

1. Once cooking is complete and the pressure has fully released (the float valve will drop), carefully open the lid.
2. Use the provided rice paddle to fluff the rice.
3. Serve the rice. If not serving immediately, leave the cooker in 'KEEP WARM' mode.

## 5. MAINTENANCE AND CLEANING

---

Regular cleaning ensures the longevity and hygienic operation of your rice cooker.

### 5.1 Daily Cleaning

1. **Inner Pot:** After each use, remove the inner pot and wash it with warm, soapy water. The Xwall Diamond coating is non-stick, making cleaning easy. Avoid abrasive cleaners or metal scrubbers.
2. **Inner Lid:** Detach the inner lid from the main lid and wash it with warm, soapy water. Rinse and dry thoroughly before reattaching.
3. **Water Collection Tray:** Empty and clean the water collection tray after each use.
4. **Main Body Exterior:** Wipe the exterior with a soft, damp cloth. Do not use harsh chemicals.

### 5.2 Periodic Cleaning

- **Steam Vent:** Periodically check the steam vent for any blockages. Clean with a small brush if necessary.
- **AUTO CLEAN Function:** To clean the internal steam path, fill the inner pot with water up to the 'AUTO CLEAN' line (if marked, otherwise use 2 cups of water). Close the lid and select the 'AUTO CLEAN' function. Follow the on-screen prompts.

## 6. TROUBLESHOOTING

---

If you encounter issues with your rice cooker, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Rice is too hard or undercooked.	Insufficient water; incorrect cooking mode; lid not properly sealed.	Ensure correct water-to-rice ratio. Select appropriate cooking mode. Check lid for proper sealing.
Rice is too soft or mushy.	Too much water; incorrect cooking mode.	Reduce water slightly next time. Ensure correct cooking mode is selected.
Steam leaks from around the lid.	Lid not closed properly; sealing gasket dirty or damaged.	Ensure lid is securely locked. Clean or replace the sealing gasket if necessary.
Cooker does not turn on.	Power cord not plugged in; power outage.	Check power cord connection. Verify power outlet is functional.

Problem	Possible Cause	Solution
---------	----------------	----------

Error code displayed.	Internal malfunction or sensor issue.	Unplug the unit for 5 minutes, then plug back in. If the error persists, contact customer support.
-----------------------	---------------------------------------	--

If the problem persists after attempting these solutions, please contact Cuckoo customer support for further assistance.

## 7. SPECIFICATIONS

---

Technical details for the Cuckoo CRP-M1077S Electric Pressure Rice Cooker.

Feature	Detail
Model Number	CRP-M1077S
Capacity	10 Cups (cooked rice)
Power Source	Electric
Voltage	240 Volts
Inner Pot Material	Xwall Diamond Coated
Lid Material	Stainless Steel
Special Features	Fuzzy Logic & Intelligent Cooking, Automatic Shut Off, Pressure Cooking
Dimensions (Approx.)	17.4 x 13.8 x 13.3 inches
Item Weight (Approx.)	17.66 pounds

## 8. WARRANTY AND SUPPORT

---

Your Cuckoo CRP-M1077S Electric Pressure Rice Cooker comes with a manufacturer's warranty. Please refer to the warranty card included with your product for specific terms and conditions, including coverage duration and limitations.

For technical support, service, or to inquire about replacement parts, please contact Cuckoo customer service. You can typically find contact information on the official Cuckoo website or on your product's packaging.

Always ensure you have your model number (CRP-M1077S) and proof of purchase ready when contacting support.