

[manuals.plus](#) /

› [TOPTECH](#) /

› [TOPTECH Jet-4 Bluetooth Speaker User Manual](#)

TOPTECH JET-4-BLUE

TOPTECH Jet-4 Bluetooth Speaker User Manual

Model: JET-4-BLUE

INTRODUCTION

Thank you for choosing the TOPTECH Jet-4 Portable Bluetooth Speaker. This manual provides essential information for setting up, operating, and maintaining your speaker to ensure optimal performance and longevity. Please read this manual thoroughly before using the product.



Image: The TOPTECH Jet-4 Bluetooth Speaker, showcasing its compact design and vibrant LED lighting.

SAFETY INFORMATION

To prevent fire or shock hazards, always follow basic safety precautions when using this product:

- Do not expose the speaker to rain or moisture.
- Do not disassemble or modify the speaker. Refer all servicing to qualified personnel.
- Keep the speaker away from direct sunlight, heat sources, and extreme temperatures.

- Avoid dropping or subjecting the speaker to strong impacts.
- Use only the specified charging cable and power adapter.

PACKAGE CONTENTS

- TOPTECH Jet-4 Bluetooth Speaker
- USB Charging Cable
- User Manual

PRODUCT OVERVIEW

Controls and Ports



Image: Detailed view of the speaker's top control panel, showing various buttons and input ports.

- **MIC Input:** Connect an external microphone for karaoke.
- **OFF/ON Switch:** Power the speaker on or off.
- **M (Mode) Button:** Switch between Bluetooth, AUX, USB, and TF Card modes.
- **Previous / Volume Down Button:** Short press for previous track, long press to decrease volume.
- **Play / Pause Button:** Play or pause audio playback.
- **Next / Volume Up Button:** Short press for next track, long press to increase volume.
- **T CARD Slot:** Insert a TF (MicroSD) card for direct audio playback.
- **U FLASH (USB) Port:** Insert a USB flash drive for direct audio playback.
- **DC 5V Port:** Connect the USB charging cable to power and charge the speaker.

Key Features



Image: An infographic showing the TOPTECH Jet-4 speaker with icons representing its key features: easy portability, mic port, mode karaoke, disco light, TF card port, and USB port.

- **Powerful Sound:** Dual-driver stereo output delivers crisp highs and deep bass for a premium audio experience.
- **Multi-Mode Playback:** Supports Bluetooth, AUX, USB, and TF card input for versatile music streaming.
- **Karaoke Ready:** Built-in karaoke mode with light effects and mic support makes any party more fun.
- **TWS Pairing Support:** Connect two speakers wirelessly for immersive, room-filling sound.
- **Long Battery Life:** Enjoy up to 6 hours of playtime with a rechargeable battery, perfect for all-day events.

SETUP

Initial Charge

Before first use, fully charge the speaker. Connect the provided USB charging cable to the DC 5V port on the speaker and the other end to a USB power adapter (not included) or a computer USB port.



Image: A visual representation of a fully charged battery, symbolizing the speaker's long battery life.

The charging indicator light will illuminate during charging and turn off or change color when fully charged. A full charge typically takes a few hours.

OPERATING INSTRUCTIONS

Bluetooth Pairing

1. Turn on the speaker by sliding the OFF/ON switch to the 'ON' position. The speaker will enter Bluetooth pairing mode automatically, indicated by a flashing LED light and an audible prompt.
2. Enable Bluetooth on your smartphone, tablet, or other Bluetooth-enabled device.
3. Search for available Bluetooth devices and select "JET-4" from the list.
4. Once connected, the speaker will provide an audible confirmation, and the LED light will stop flashing.
5. You can now play audio from your device through the speaker.



Image: The TOPTECH Jet-4 speaker positioned next to a smartphone, illustrating the seamless Bluetooth connection process.

Playback Modes (AUX, USB, TF Card)

Press the 'M' (Mode) button to cycle through available playback modes:

- **AUX Mode:** Connect an external audio device using a 3.5mm audio cable (not included) to the AUX input.
- **USB Mode:** Insert a USB flash drive into the 'U FLASH' port. The speaker will automatically detect and play compatible audio files.
- **TF Card Mode:** Insert a TF (MicroSD) card into the 'T CARD' slot. The speaker will automatically detect and play compatible audio files.

Karaoke Mode

To use the karaoke function, connect a microphone (not included) to the 'MIC' input port. Adjust the microphone volume as needed. The speaker's built-in light effects will enhance the karaoke experience.

TWS Pairing (True Wireless Stereo)

For an enhanced stereo sound experience, you can pair two TOPTECH Jet-4 speakers together:

1. Ensure both Jet-4 speakers are powered on and not connected to any Bluetooth device.
2. On one speaker (this will be the primary speaker), long press the 'M' (Mode) button until you hear a pairing tone.
3. The two speakers will automatically connect to each other. Once connected, you will hear a confirmation tone.
4. Now, connect your Bluetooth device to the primary speaker as described in the 'Bluetooth Pairing' section. Audio will play through both speakers in stereo.

Connect 2 Speakers at one



Image: Two TOPTech Jet-4 speakers wirelessly connected to a smartphone, demonstrating the True Wireless Stereo (TWS) pairing feature for expanded sound.

MAINTENANCE

- Clean the speaker with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Store the speaker in a cool, dry place when not in use.
- Avoid prolonged exposure to extreme temperatures or humidity.

TROUBLESHOOTING

Problem	Solution
Speaker does not power on.	Ensure the battery is charged. Connect the speaker to a power source using the USB cable.

Problem	Solution
No sound from the speaker.	Check the volume level on both the speaker and your connected device. Ensure the correct playback mode is selected.
Bluetooth pairing fails.	Ensure the speaker is in pairing mode. Turn off Bluetooth on your device and turn it back on. Try restarting both the speaker and your device. Make sure no other devices are connected to the speaker.
Poor sound quality.	Move the speaker closer to your Bluetooth device to reduce interference. Ensure the audio source is of good quality.

SPECIFICATIONS

Feature	Detail
Brand	TOPTECH
Model Number	JET-4-BLUE
Power Source	Battery Powered
Connectivity Technology	Bluetooth, USB
Audio Input	Guitar Input, Karaoke Input, USB
Number of Channels	2
Material	Plastic, Metal
Item Weight	1.54 pounds
Package Dimensions	9.29 x 6.38 x 4.17 inches
UPC	689259338593

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the contact details provided on the product packaging or visit the official TOPTECH website. Keep your purchase receipt as proof of purchase for any warranty claims.