

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [QUMOX](#) /

› [QUMOX Gamepad Bluetooth Wireless 6-axis Turbo Controller for Switch PS4 PC Android User Manual](#)

QUMOX L376U

QUMOX Gamepad Bluetooth Wireless 6-axis Turbo Controller User Manual

Model: L376U

INTRODUCTION

This manual provides detailed instructions for the QUMOX Bluetooth Wireless Gamepad, Model L376U. This versatile controller is designed for use with multiple platforms, including Nintendo Switch, PlayStation 4 (PS4), iOS 13 and above, Android devices, and PC. It features Bluetooth wireless communication, a 6-axis gyroscope, dual motor vibration, a touch screen, a headphone jack, and integrated speakers, offering an enhanced gaming experience.

Please read this manual thoroughly before using the product to ensure proper operation and to maximize your gaming enjoyment.

PACKAGE CONTENTS

Verify that all items are present in the package:

- 1x QUMOX Wireless Controller (Model L376U)
- 1x USB Charging Cable (1.8m)
- 1x English User Manual



Image: The retail packaging for the QUMOX Wireless Controller, showing the product box with branding and key features.

PRODUCT OVERVIEW

The QUMOX Wireless Gamepad is designed for comfort and precision. Below are images illustrating the controller's various angles and components.



Image: Front view of the QUMOX Wireless Controller, displaying the dual analog sticks, D-pad, action buttons, and central touchpad.



Image: Top view of the QUMOX Wireless Controller, showing the shoulder buttons (L1, R1) and trigger buttons (L2, R2).



Image: Angled left view of the QUMOX Wireless Controller, highlighting the ergonomic grip and button layout from a side perspective.



Image: Angled right view of the QUMOX Wireless Controller, showing the ergonomic grip and button layout from the opposite side.

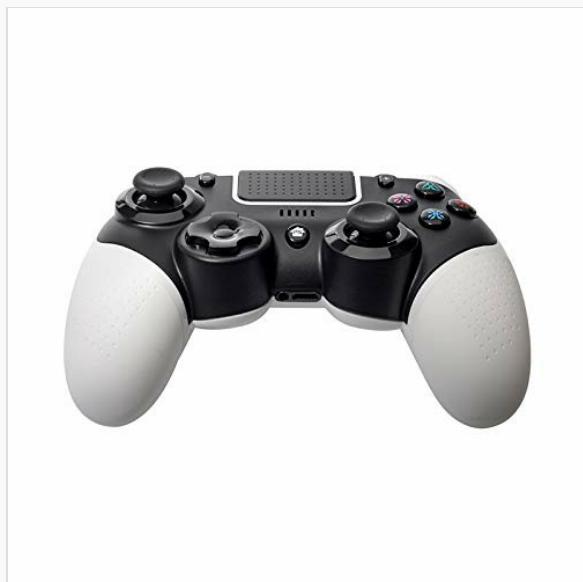


Image: Bottom view of the QUMOX Wireless Controller, revealing the charging port and other underside details.

Key Features:

- **Multi-Platform Compatibility:** Works with Nintendo Switch, PlayStation 4, iOS 13+, Android, and PC.
- **Wireless Bluetooth Connectivity:** Ensures stable connection and strong anti-interference ability.
- **6-Axis Gyroscope Function:** Provides precise motion control for supported games.
- **Dual Motor Vibration:** Enhances immersion with haptic feedback.
- **Integrated Touchpad:** Offers additional input options for compatible games.
- **Headphone Jack & Speakers:** For audio output directly from the controller.
- **Ergonomic Design:** Comfortable for extended gaming sessions.

SETUP AND PAIRING

The controller does not require specific driver installation; it can be used after successful pairing with your host device.

Charging the Controller:

Before first use, fully charge the controller. Connect the provided USB charging cable to the controller's charging port and the other end to a USB power source (e.g., console, PC, USB wall adapter). The indicator lights on the controller will show charging status and turn off or change color when fully charged.

Pairing Instructions:

Specific pairing methods may vary slightly depending on the platform. Generally, ensure the controller is sufficiently charged before attempting to pair.

- **For Nintendo Switch:**

1. From the HOME Menu, select "Controllers" > "Change Grip/Order".
2. On the controller, press and hold the SYNC button (usually a small button on the top or back) for a few seconds until the indicator lights begin to flash.
3. Once paired, the player indicator light(s) on the controller will illuminate steadily.

- **For PlayStation 4 (PS4):**

1. Ensure your PS4 is on.
2. Connect the controller to the PS4 using the USB cable.
3. Press the PS button on the controller. The controller should pair and the light bar will illuminate.
4. You can then disconnect the USB cable for wireless play.

- **For iOS (13+) / Android Devices:**

1. Enable Bluetooth on your iOS/Android device.
2. Put the controller into pairing mode (often by holding a combination of buttons like SHARE + PS button, or a dedicated pairing button, refer to the controller's specific instructions if different). The indicator lights will flash rapidly.
3. On your device, search for new Bluetooth devices and select "QUMOX Gamepad" or similar from the list.
4. Once connected, the indicator light will become solid.

- **For PC (Windows):**

1. For wired connection: Connect the controller to your PC using the USB cable. The PC should automatically detect and install necessary drivers.
2. For Bluetooth connection (requires a Bluetooth adapter on PC):
 - Go to "Settings" > "Devices" > "Bluetooth & other devices" on your PC.
 - Click "Add Bluetooth or other device" > "Bluetooth".
 - Put the controller into pairing mode (as described for iOS/Android).
 - Select "QUMOX Gamepad" from the list of available devices.

OPERATING INSTRUCTIONS

This section details the primary functions and features of your QUMOX Wireless Gamepad.

Basic Controls:

- **Analog Sticks:** Used for movement and camera control.
- **D-Pad:** For directional input, menu navigation.

- **Action Buttons (X, O, Triangle, Square / A, B, X, Y):** Perform in-game actions.
- **Shoulder Buttons (L1, R1) & Trigger Buttons (L2, R2):** For various in-game functions like aiming, shooting, or special abilities.
- **PS/Home Button:** Powers on the controller, accesses system menus.
- **SHARE/SELECT Button:** Used for sharing content or accessing specific in-game menus.
- **OPTIONS/START Button:** Pauses games or accesses game options.

Special Features:

- **Turbo Function:**

The Turbo function allows for rapid, automatic pressing of a button. To activate:

1. Press and hold the desired action button (e.g., X, O, Triangle, Square, L1, R1, L2, R2).
2. While holding the action button, press the TURBO button (refer to controller diagram for location).
3. Release both buttons. The selected button will now rapidly repeat its input when held down.

To deactivate Turbo for a specific button, repeat the process. To clear all Turbo settings, press and hold the TURBO button for 5 seconds.

- **6-Axis Gyroscope:**

The built-in 6-axis gyroscope provides motion sensing capabilities, allowing for intuitive control in games that support tilt or motion input. This feature is automatically active when supported by the connected platform and game.

- **Dual Motor Vibration:**

The controller features dual motors for haptic feedback, providing immersive vibration effects during gameplay. Vibration intensity is typically controlled by the game or console settings.

- **Touchpad:**

The central touchpad functions as an additional input method, similar to a mouse or trackpad, in games and applications that utilize it. It also acts as a clickable button.

- **Headphone Jack & Speakers:**

Connect a standard 3.5mm headset to the headphone jack for in-game audio and voice chat. The integrated speaker provides additional audio cues in supported games.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the controller. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals or abrasive materials.
- **Storage:** Store the controller in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the controller frequently. Charge it regularly, even if not in constant use.
- **Avoid Drops:** Protect the controller from drops and impacts, which can damage internal components.

TROUBLESHOOTING

Problem	Possible Solution
Controller does not power on.	Ensure the controller is fully charged. Connect it to a power source using the USB cable.

Problem	Possible Solution
Cannot pair with device.	<ul style="list-style-type: none"> Ensure the controller is in pairing mode (indicator lights flashing). Check that Bluetooth is enabled on your device. Remove any previous pairings of the controller from your device's Bluetooth settings and try again. Restart both the controller and the host device. Ensure the controller is within range of the device.
Buttons are unresponsive or delayed.	<ul style="list-style-type: none"> Check battery level; low battery can affect performance. Ensure there are no obstructions between the controller and the host device. Try re-pairing the controller. If on PC, try a wired connection to rule out Bluetooth interference.
Vibration not working.	<ul style="list-style-type: none"> Verify that the game or console settings have vibration enabled. Some games may not support vibration.

SPECIFICATIONS

Feature	Detail
Model Number	L376U
Connectivity	Bluetooth Wireless
Compatibility	Nintendo Switch, PS4, iOS 13+, Android, PC
Special Features	6-axis Gyroscope, Dual Motor Vibration, Touchpad, Headphone Jack, Speakers, Turbo Function
Dimensions	6.3 x 2.95 x 2.95 inches
Weight	12.7 ounces
Manufacturer	QUMOX

WARRANTY AND SUPPORT

QUMOX products are manufactured with quality and reliability in mind. For specific warranty information, please refer to the documentation included with your purchase or contact QUMOX customer support directly.

If you encounter any issues not covered in this manual, or require further assistance, please visit the official QUMOX website or contact their customer service department. Please have your model number (L376U) and purchase details ready when seeking support.

