

[Manuals.plus](#) /

› [Energizer](#) /

› Energizer LED Headlamp User Manual

Energizer ENHDDA32E

Energizer LED Headlamp User Manual

Model: ENHDDA32E | Brand: Energizer

PRODUCT OVERVIEW

The Energizer LED Headlamp is designed to provide reliable, hands-free illumination for various activities, from outdoor adventures to detailed work. It features advanced lighting technology and a durable, comfortable design.

Key Features:

- **Bright Illumination:** Delivers up to 315 lumens for clear visibility.
- **Digital Focus Technology:** Easily switch between spot and flood light with the press of a button.
- **Multiple Light Modes:** Includes high, low, wide, wide low, green, red, and flashing red light options to suit different needs.
- **Memory Recall:** Quickly access your last used focus setting.
- **Durable & Water Resistant:** IPX4 water resistant and impact-resistant up to 1 meter with a shatterproof lens.
- **Adjustable Comfort:** Features an adjustable head strap for a secure and comfortable fit.

SETUP AND BATTERY INSTALLATION

Your Energizer LED Headlamp requires three AAA alkaline batteries (included). Follow these steps to install or replace batteries:

1. Locate the battery compartment on the back of the headlamp unit.
2. Gently lift the latch or tab to open the battery compartment cover.
3. Insert three AAA batteries, ensuring the positive (+) and negative (-) ends align correctly with the indicators inside the compartment.
4. Close the battery compartment cover securely until it clicks into place.



The Energizer LED Headlamp comes with three AAA batteries for immediate use.

OPERATING INSTRUCTIONS

The headlamp features intuitive controls for various lighting modes and focus adjustments.

Power and Mode Selection:

Use the power button (typically on the top of the unit) to cycle through the different light modes. A quick press will usually turn the unit on to its last used setting or a default high mode. Subsequent presses will cycle through available modes:

- **High Mode:** Maximum brightness (315 lumens).
- **Low Mode:** Reduced brightness for extended battery life.
- **Wide Mode:** Broad illumination for close-up tasks.
- **Wide Low Mode:** Dimmer broad illumination.
- **Red Light:** Preserves night vision, ideal for discreet use.
- **Flashing Red Light:** For signaling or increased visibility.
- **Green Light:** Specific uses like hunting or map reading.

Digital Focus Technology:

The patented Digital Focus technology allows you to seamlessly transition between a narrow spot beam and a wide flood beam. Press and hold the focus button (if available, or the power button for some models) to adjust the beam. The Memory Recall feature will save your preferred focus setting for the next use.

Pivoting Head:

The headlamp unit can be tilted up or down to direct the light exactly where you need it, providing optimal hands-free

illumination.



315

LUMENS



FL1 STANDARD
315
LUMENS
HIGH MODE

The headlamp provides a powerful 315 lumens of light.

DIGITAL FOCUS

SPOT LIGHT TO FLOOD LIGHT
WITH THE PRESS OF A BUTTON



Digital Focus allows seamless transition between spot and flood beams.

5 MODES

HIGH MODE



SPOT MODE



Explore various lighting options with 5 distinct modes.

MAINTENANCE AND CARE

To ensure the longevity and optimal performance of your Energizer LED Headlamp, follow these maintenance guidelines:

- **Cleaning:** Wipe the headlamp with a soft, damp cloth to remove dirt or debris. Do not use abrasive cleaners or solvents.
- **Water Resistance:** The headlamp is IPX4 water resistant, meaning it can withstand splashing water from any direction. It is not designed for submersion. Ensure the battery compartment is securely closed before exposure to water.
- **Impact Resistance:** Designed to be impact-resistant up to 1 meter. Avoid dropping it from greater heights or subjecting it to severe impacts.
- **Battery Replacement:** Replace batteries as described in the Setup section when the light dims significantly or

stops working. Always use fresh, high-quality AAA alkaline batteries.

- **Storage:** Store the headlamp in a cool, dry place when not in use. If storing for extended periods, remove the batteries to prevent leakage.

IPX4 WATER RESISTANCE

WITHSTANDS SPLASHING



The headlamp is IPX4 water resistant, designed to withstand splashing.

TROUBLESHOOTING

If you encounter issues with your Energizer LED Headlamp, try the following solutions:

- **Light Does Not Turn On:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace with fresh AAA batteries.
 - Ensure the battery compartment cover is fully closed.

• **Light is Dim or Flickering:**

- Batteries may be low. Replace all three AAA batteries.
- Ensure battery contacts are clean and free of corrosion.

• **Beam Adjustment Not Working:**

- Ensure you are pressing and holding the correct button for digital focus adjustment.
- If the pivoting head is stiff, gently clean around the pivot points.

If problems persist after trying these steps, please contact Energizer customer support.

PRODUCT SPECIFICATIONS

Feature	Specification
Brand	Energizer
Model Number	ENHDDA32E
Color	Rustic Red
Light Source Type	LED
Brightness	315 Lumens
Light Path Distance	85 Meters
Power Source	Battery Powered (3 AAA batteries required)
Battery Cell Composition	Alkaline
Runtime	35 hours
Water Resistance Level	IPX4 (Water Resistant)
Item Weight	3.53 ounces (100 Grams)
Product Dimensions	1.89"D x 2.36"W x 4.53"H
Special Features	Lightweight, Durable, Adjustable Strap, Water Resistant

WARRANTY AND SUPPORT

This product is covered by a return policy allowing for refund or replacement within 30 days, handled by Amazon.

For additional support, product information, or to explore other Energizer products, please visit the official Energizer Store:

[Visit the Energizer Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question