

## TIMEX TW00PR238

# TIMEX Analog Silver Dial Couple Watch - TW00PR238 User Manual

### INTRODUCTION

This manual provides essential instructions for the setup, operation, and maintenance of your TIMEX Analog Silver Dial Couple Watch, model TW00PR238. Please read this guide thoroughly to ensure proper use and longevity of your timepiece.

### PRODUCT OVERVIEW

The TIMEX TW00PR238 is an elegant analog couple watch set featuring a silver dial and a multi-color stainless steel band. It is designed for everyday wear with a quartz movement for accurate timekeeping.

#### Key Features:

- **Dial Color:** Silver
- **Case Shape:** Round
- **Dial Glass Material:** Mineral
- **Band Material:** Stainless Steel (Multi-Color)
- **Movement Type:** Quartz
- **Display Type:** Analog
- **Case Material:** Brass
- **Water Resistance Depth:** 30 meters (3 ATM)

#### Components:

- **Dial:** The face of the watch displaying time.
- **Hands:** Hour, minute, and second hands.
- **Crown:** Small knob on the side for setting time.
- **Case:** The main body of the watch protecting the movement.
- **Strap/Band:** Stainless steel bracelet for wearing the watch.



*Image 1: Front view of the TIMEX Analog Silver Dial Couple Watch set, showing both the larger and smaller watches with their silver dials and two-tone stainless steel bands.*



*Image 2: Another perspective of the TIMEX Analog Silver Dial Couple Watch set, highlighting the design against a neutral background.*

## SETUP

---

### Setting the Time:

1. **Pull out the Crown:** Gently pull the crown (the small knob on the side of the watch case) outwards until you feel a click.
2. **Adjust the Time:** Rotate the crown clockwise or counter-clockwise to move the hour and minute hands to the desired time.
3. **Push in the Crown:** Once the time is set, push the crown back into its original position. This will start the watch movement.

## OPERATING YOUR WATCH

---

### Wearing the Watch:

Adjust the stainless steel band to fit comfortably around your wrist. The clasp should secure the watch firmly without being too tight or too loose.

### Water Resistance:

Your TIMEX watch has a water resistance rating of 30 meters (3 ATM). This means it is suitable for everyday use and can withstand splashes or brief immersion in water. It is **not** suitable for swimming, showering, or diving. Always ensure the crown is fully pushed in to maintain water resistance.

## MAINTENANCE

Cleaning:

To maintain the appearance of your watch, wipe the case and band regularly with a soft, dry cloth. For the stainless steel band, a slightly damp cloth can be used, followed by immediate drying. Avoid using harsh chemicals or abrasive materials.

Battery Replacement:

The watch is powered by a quartz movement, which uses a small button-cell battery. When the watch stops or runs erratically, the battery may need replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and maintain water resistance.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch not running	Battery depleted; Crown not pushed in.	Replace battery (professional service recommended); Push crown fully into position.
Time is inaccurate	Weak battery; Exposure to strong magnetic fields.	Replace battery; Keep watch away from strong magnets.
Condensation under crystal	Exposure to extreme temperature changes; Water ingress.	Consult a watch technician immediately to prevent damage.

SPECIFICATIONS

Model Number	TW00PR238
Brand	TIMEX
Movement Type	Quartz
Display Type	Analog
Dial Color	Silver
Case Material	Brass
Case Diameter	40 Millimetres (for larger watch)
Band Material Type	Stainless Steel
Band Color	Multicolor
Band Width	20 Millimetres (for larger watch)
Dial Glass Material	Mineral
Water Resistance Depth	30 meters (3 ATM)
Item Weight	300 g (approximate total for pair)
Product Dimensions	3.6 x 3.5 x 1.5 cm (individual watch dimensions)

## WARRANTY AND SUPPORT

---

### Warranty Information:

This TIMEX watch comes with a **1 Year Warranty** from the date of purchase. The warranty covers manufacturing defects under normal use. It does not cover damage resulting from improper handling, accidents, unauthorized repairs, or normal wear and tear of the case, crystal, or strap.

### Customer Support:

For warranty claims, service, or technical assistance, please contact TIMEX customer service or visit an authorized TIMEX service center. Please retain your proof of purchase for warranty validation.