

Bomann VS 7316.1

Bomann VS 7316.1 Refrigerator Instruction Manual

Model: VS 7316.1

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Bomann VS 7316.1 refrigerator. Please read these instructions carefully before installation and use, and retain them for future reference. Proper installation, use, and maintenance will ensure optimal performance and longevity of your appliance.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

- Ensure the appliance is properly grounded.
- Do not damage the refrigerant circuit.
- Do not use electrical appliances inside the food storage compartments.
- Unplug the appliance before cleaning or maintenance.
- Keep ventilation openings clear of obstruction.
- This appliance is intended for household use only.

3. SETUP AND INSTALLATION

3.1 Unpacking

Carefully remove all packaging materials. Inspect the refrigerator for any damage. Report any damage to your retailer immediately. Keep packaging materials out of reach of children.

3.2 Placement

Place the refrigerator on a firm, level surface. Ensure adequate ventilation around the appliance. Maintain a minimum distance of 10 cm from walls and other furniture to allow for proper air circulation. Avoid direct sunlight and heat sources.



Figure 1: Refrigerator Dimensions (Width: 55.1 cm, Height: 143.4 cm, Depth: 54.2 cm)

3.3 Door Reversibility

The door hinge direction can be reversed to suit your kitchen layout. Refer to the detailed instructions provided in the separate door reversal kit (if applicable) or contact qualified service personnel for assistance.



Figure 2: Reversible Door Hinge Feature

3.4 Electrical Connection

Connect the appliance to a properly installed and grounded power outlet (220 Volt). Ensure the voltage matches the rating label on the appliance. Do not use extension cords or multiple socket adapters.

3.5 First Use

After installation, wait at least 2-4 hours before plugging in the appliance to allow the refrigerant to settle. Clean the interior with a damp cloth. Set the temperature control to the desired setting and allow the refrigerator to cool for several hours before storing food.

4. OPERATING INSTRUCTIONS

4.1 Temperature Control

The refrigerator features an adjustable temperature control. Rotate the dial to select the desired cooling level. A higher number typically indicates a colder temperature. Monitor the internal temperature with a thermometer if precise control is required.

4.2 Interior Layout and Storage

The Bomann VS 7316.1 offers a net capacity of 242 liters, designed for efficient food storage. It includes 5 adjustable glass shelves, 4 door bins, and a transparent vegetable crisper with an egg tray.



Figure 3: Refrigerator Internal Layout

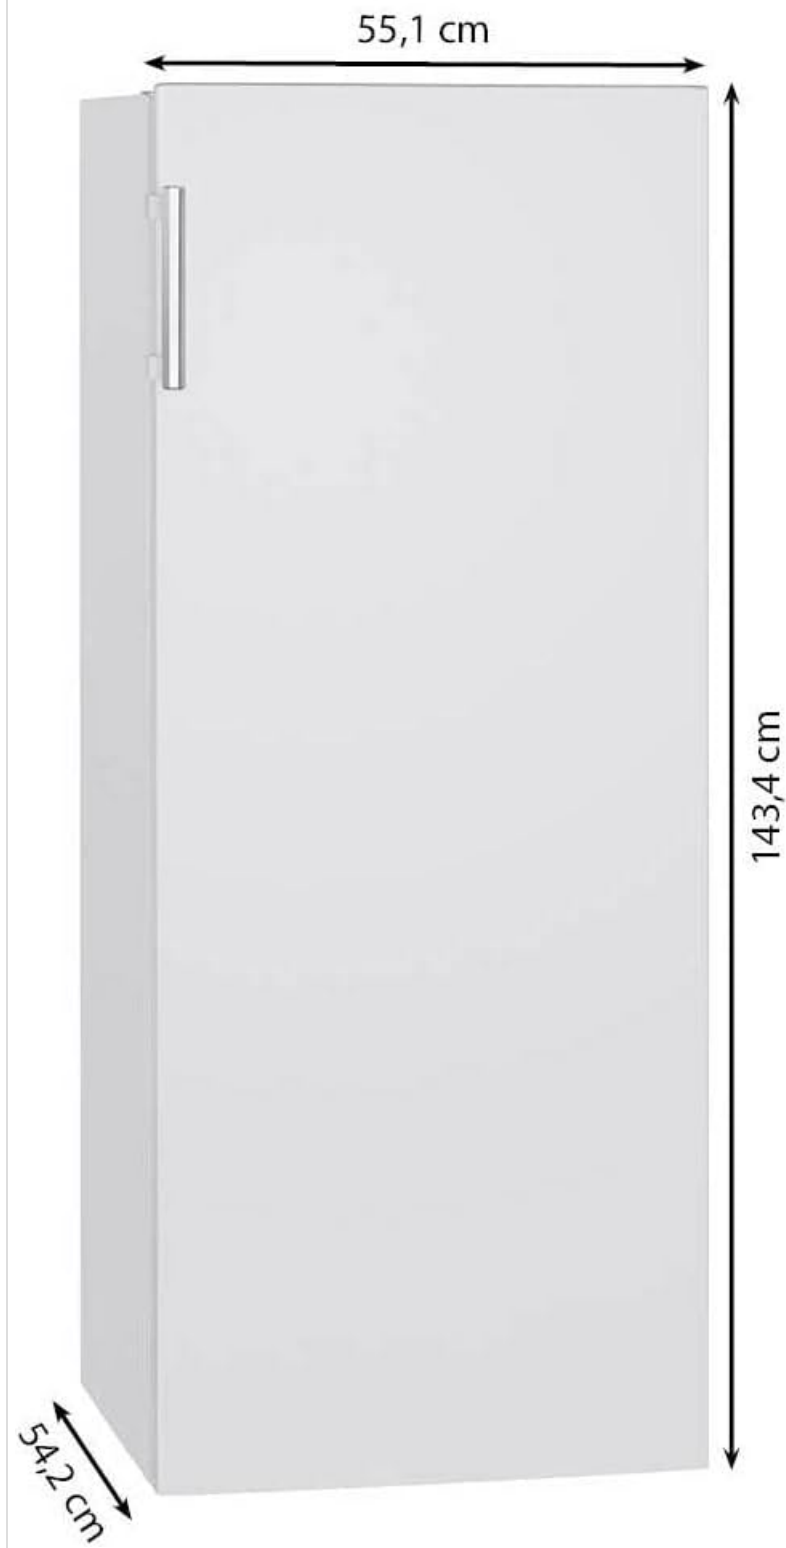


Figure 4: Example of Food Storage



Figure 5: Bottle Storage in Door Bins

4.3 LED Interior Lighting

The refrigerator is equipped with energy-saving LED interior lighting, providing clear visibility of the contents.

LED INNENRAUMBELEUCHTUNG



ENERGIEEFFIZIENZKLASSE

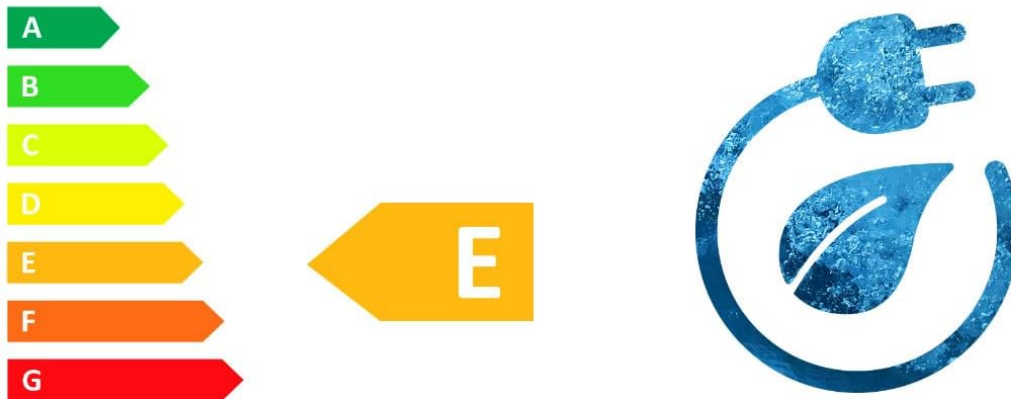


Figure 6: LED Interior Lighting and Energy Class

4.4 Door Alarm

The appliance features a door alarm that activates if the door is left open for an extended period, helping to maintain internal temperature and save energy.

5. MAINTENANCE

5.1 Cleaning the Interior

Regularly clean the interior of the refrigerator with a mild detergent and warm water. Rinse with clean water and dry thoroughly. Do not use abrasive cleaners or solvents. Remove shelves and drawers for easier cleaning.

5.2 Defrosting

This refrigerator features a semi-automatic defrost system. Frost buildup on the back wall is normal and will melt automatically. Water will drain through a channel to an evaporation tray at the back of the appliance. Ensure the drain hole is not blocked.

5.3 Cleaning the Exterior

Wipe the exterior surfaces with a soft, damp cloth. For stubborn stains, use a mild detergent. Avoid spraying water directly onto the appliance.

5.4 Power Outage

In case of a power outage, keep the refrigerator door closed to maintain the internal temperature for as long as possible. Avoid opening the door unnecessarily.

6. TROUBLESHOOTING

Before contacting service, check the following common issues:

Problem	Possible Cause	Solution
Refrigerator not cooling	No power; temperature setting too high; door not closed properly.	Check power supply; adjust temperature control; ensure door is sealed.
Excessive noise	Appliance not level; objects touching the back wall; compressor operation.	Adjust leveling feet; reposition items; compressor noise is normal.
Water on floor	Blocked drain hole; door left open.	Clear drain hole; ensure door is closed.
Door not sealing properly	Door gasket dirty or damaged; appliance not level.	Clean or replace gasket; level the appliance.

7. SPECIFICATIONS

Feature	Specification
Brand	Bomann
Model Name	VS 7316.1
Model Number	733160
Configuration	Compact without freezer
Installation Type	Freestanding
Net Refrigerator Capacity	242 Liters
Color	White
Dimensions (W x H x D)	55.1 cm x 143.4 cm x 54.2 cm
Item Weight	38 Kilograms
Number of Doors	1
Defrost System	Semi-automatic
Voltage	220 Volt
Special Feature	Door alarm
Shelf Type	Tempered Glass
Number of Shelves	5
Adjustable Temperature Control	Yes

Feature	Specification
Power Plug	Type C/EF - 2 pin (EU/FR-DE hybrid)
Door Opening Direction	Right (Reversible)
Annual Energy Consumption	104 Kilowatt hours per year
Refrigerant	R-600A
Country of Origin	China

8. WARRANTY AND SUPPORT

This product is stated to have no warranty. For any technical assistance, spare parts, or further inquiries, please contact the Bomann customer support or your retailer.