

[Manuals.plus](#) /

› [SAMSUNG](#) /

› SAMSUNG Galaxy Buds Plus User Manual

## SAMSUNG SM-R175NZKAXAR

# SAMSUNG Galaxy Buds Plus User Manual

Model: SM-R175NZKAXAR

Brand: SAMSUNG

## INTRODUCTION

This manual provides comprehensive instructions for the use and maintenance of your SAMSUNG Galaxy Buds Plus true wireless earbuds. Please read this manual thoroughly before using the product to ensure proper operation and to maximize its lifespan.

The Galaxy Buds Plus are designed to deliver rich audio with customizable sound features, long-lasting battery life, and a comfortable, secure fit for various activities.

## WHAT'S IN THE BOX

Verify that all components are present in your product packaging:

- SAMSUNG Galaxy Buds Plus Earbuds (Left and Right)
- Wireless Charging Case
- Eartips (3 sizes: Small, Medium, Large)
- Ear Wings (3 sizes: Small, Medium, Large)
- USB Type-C Charging Cable
- User Manual (this document)



Image showing the SAMSUNG Galaxy Buds Plus earbuds and their wireless charging case. The earbuds are black, sleek, and designed for an in-ear fit, while the compact charging case is also black with a smooth finish.

## SETUP

### Charging the Case and Earbuds

Before initial use, fully charge the charging case and earbuds. Connect the provided USB Type-C cable to the charging case and a compatible power source. The LED indicator on the case will show charging status. Alternatively, place the charging case on a compatible wireless charging pad.

The charging case provides approximately 11 additional hours of battery life for the earbuds. A 3-minute charge of the earbuds in the case can provide up to 1 hour of playtime.

# 22 hours of serious sound



**BATTERY LIFE**

22 hours



**TALK TIME**

15 hours



**STREAMING TIME**

11 hours



An illustration detailing the battery life of the Galaxy Buds Plus. It highlights 22 hours of total battery life, with 15 hours of talk time and 11 hours of streaming time on a single charge from the earbuds, supplemented by the charging case.

## Pairing with Your Device

1. Ensure your Galaxy Buds Plus are charged.
2. Open the charging case. The earbuds will automatically enter pairing mode.
3. On your smartphone or tablet, navigate to Bluetooth settings.
4. Select "Galaxy Buds+" from the list of available devices.
5. Follow any on-screen prompts to complete the pairing process.

*Note: For optimal performance and access to all features, download the Samsung Galaxy Wearable app (for Android) or the Galaxy Buds+ app (for iOS) from your device's app store.*

## OPERATING INSTRUCTIONS

### Touch Controls

The Galaxy Buds Plus feature intuitive touch controls on each earbud:

- **Single Tap:** Play/Pause audio, Answer/End call.
- **Double Tap:** Play next song, Answer/End call, Switch between calls.
- **Triple Tap:** Play previous song.
- **Touch and Hold:** Activate Ambient Sound mode, Decline call, Activate a customizable function (e.g., volume control, voice assistant) via the Galaxy Wearable app.

### Sound Modes

The Galaxy Buds Plus offer two primary sound modes:

- **Noise Isolation:** The earbuds are designed to naturally isolate you from distracting noises, allowing you to focus on your audio.
- **Ambient Aware:** This mode allows you to filter in environmental sounds, enabling awareness of your surroundings (e.g., traffic, announcements) while still enjoying your audio. Activate this mode via the touch and hold gesture or through the Galaxy Wearable app.

### Making and Receiving Calls

The earbuds feature a dedicated internal microphone and two external microphones to ensure clear voice transmission, even in noisy environments.

- **Answering a Call:** Double tap either earbud.
- **Ending a Call:** Double tap either earbud.
- **Declining a Call:** Touch and hold either earbud.

## FIT AND COMFORT

For the best sound quality and secure fit, select the appropriate eartip and ear wing sizes. The Galaxy Buds Plus come with three sizes (Small, Medium, Large) of both eartips and ear wings.

Experiment with different combinations to find the most comfortable and secure fit for your ears. A proper seal is crucial for optimal audio performance and noise isolation.

# Fits just right

Three adjustable ear and wing tip sizes come in the box to ensure a comfortable fit. Mix and match to find the perfect fit for any ear shape or size.



Wingtips (S, M, L)



Eartips (S, M, L)



An image illustrating the different sizes of eartips and wingtips (S, M, L) provided with the Galaxy Buds Plus, emphasizing the customizable fit for various ear shapes.

## MAINTENANCE

### Cleaning Your Earbuds and Case

Regular cleaning helps maintain sound quality and hygiene. Use a soft, dry, lint-free cloth to wipe the earbuds and

charging case. For stubborn dirt, slightly dampen the cloth with water. Do not use harsh chemicals or abrasive materials.

Gently remove any earwax or debris from the eartips and speaker mesh using a small, soft brush or cotton swab. Ensure the earbuds are completely dry before placing them back in the charging case.

## Storage

When not in use, store your Galaxy Buds Plus in their charging case to protect them from dust, damage, and to keep them charged.

## Water Resistance

The Galaxy Buds Plus are water-resistant. This means they can withstand splashes, sweat, and light rain. They are not waterproof and should not be submerged in water or exposed to high-pressure water streams.

# TROUBLESHOOTING

## No Sound or Low Volume

- Ensure the earbuds are properly seated in your ears and that you have selected the correct eartip size for a good seal.
- Check the volume level on both your connected device and through the Galaxy Wearable app.
- Ensure the earbuds are charged.
- Try re-pairing the earbuds with your device.

## Earbuds Not Connecting

- Ensure Bluetooth is enabled on your device.
- Place the earbuds back in the charging case, close the lid, wait a few seconds, then open it again to reset them.
- Forget the device in your phone's Bluetooth settings and attempt to pair again.
- Ensure the Galaxy Wearable app is updated to the latest version.

## Poor Call Quality

- Ensure the microphones are not obstructed.
- Move to an area with less background noise.
- Check your device's network signal strength.

# SPECIFICATIONS

Feature	Detail
Model Name	Galaxy Buds+
Model Number	SM-R175NZKAXAR
Connectivity	Bluetooth 5.0
Wireless Range	Up to 10 meters (33 feet)
Earbud Battery Life	Up to 11 hours (single charge)
Total Battery Life (with case)	Up to 22 hours
Quick Charge	3 minutes charge for 1 hour playtime

Earbud Weight	6.3 grams (each)
Case Weight	164.3 grams
Water Resistance	Water Resistant (not waterproof)
Control Type	Touch, App Control
Included Components	Earbuds, Wireless Charging Case, Eartips, USB Cable, User Manual, Ear Wings

## WARRANTY AND SUPPORT

Your SAMSUNG Galaxy Buds Plus are covered by a manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including warranty period and coverage details.

For technical support, service, or additional information, please visit the official SAMSUNG support website or contact their customer service. Contact details can typically be found on the SAMSUNG website or in your product documentation.

*Note: Keep your proof of purchase for warranty claims.*