

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [COOSHADE](#) /

› COOSHADE 13x13Ft Pop Up Canopy Tent Instant Folding Shelter Instruction Manual

COOSHADE JS-01

COOSHADE 13x13Ft Pop Up Canopy Tent Instruction Manual

This manual provides detailed guidance for the setup, operation, and maintenance of your COOSHADE 13x13Ft Pop Up Canopy Tent, designed for large outdoor sun protection.

1. SETUP INSTRUCTIONS

Follow these steps for quick and easy assembly of your COOSHADE Pop Up Canopy Tent.

1.1 Unpacking and Initial Expansion

1. **Remove from Carry Bag:** Carefully remove the folded frame and canopy top from the wheeled carry bag.
2. **Partial Frame Expansion:** With a partner, grasp two opposite legs of the frame. Partially pull the frame apart to about half its full width.

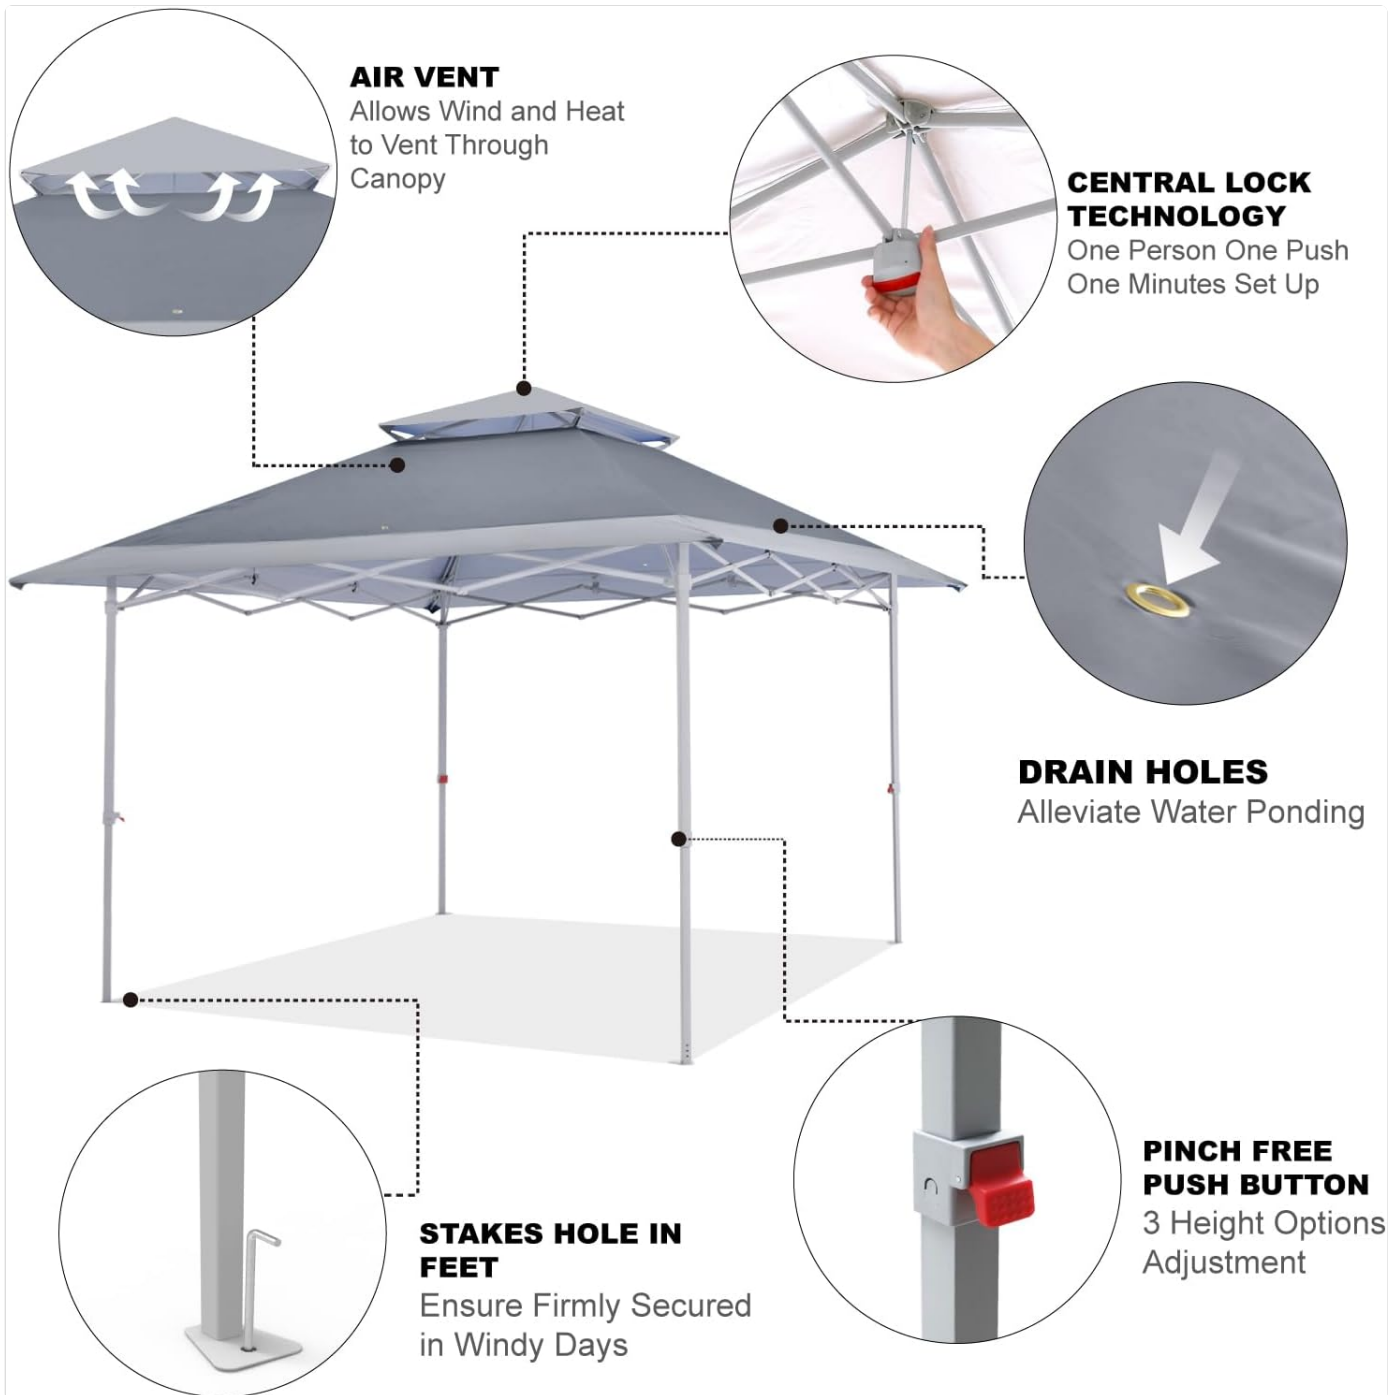 


Image: Partially expanded canopy frame with the canopy top draped over it, ready for attachment.



Image: Step 1 of setup, showing the frame partially opened and the canopy fabric placed over it.

1.2 Attaching the Canopy Top

3. **Secure Canopy to Frame:** Drape the canopy fabric over the partially expanded frame. Secure the canopy top to the frame using the hook and loop straps located at each corner and along the truss joints. Ensure all clips are fastened securely.

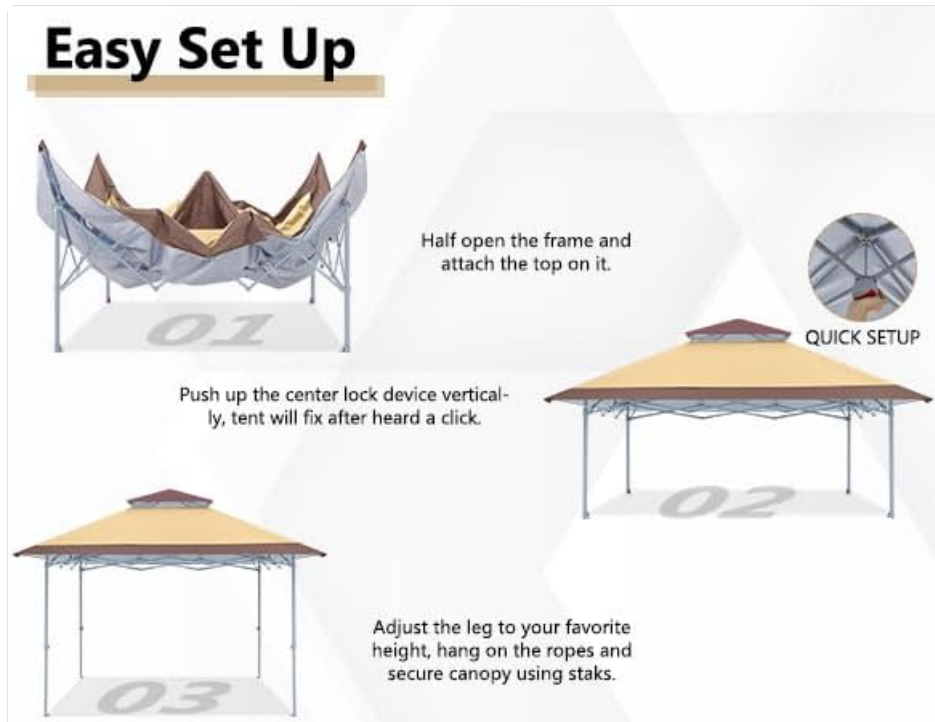 


Image: A hand securing the canopy fabric to the frame using a hook and loop strap.

1.3 Full Expansion and Height Adjustment

4. **Fully Expand Frame:** From underneath the canopy, push up the central lock device vertically until it clicks into position, indicating the frame is fully expanded.
5. **Adjust Leg Height:** Press the red pinch-free push buttons on each leg to adjust the height. Lift the outer leg until it locks into your desired height. There are three height options available.

13FT x 13FT POP UP CANOPY

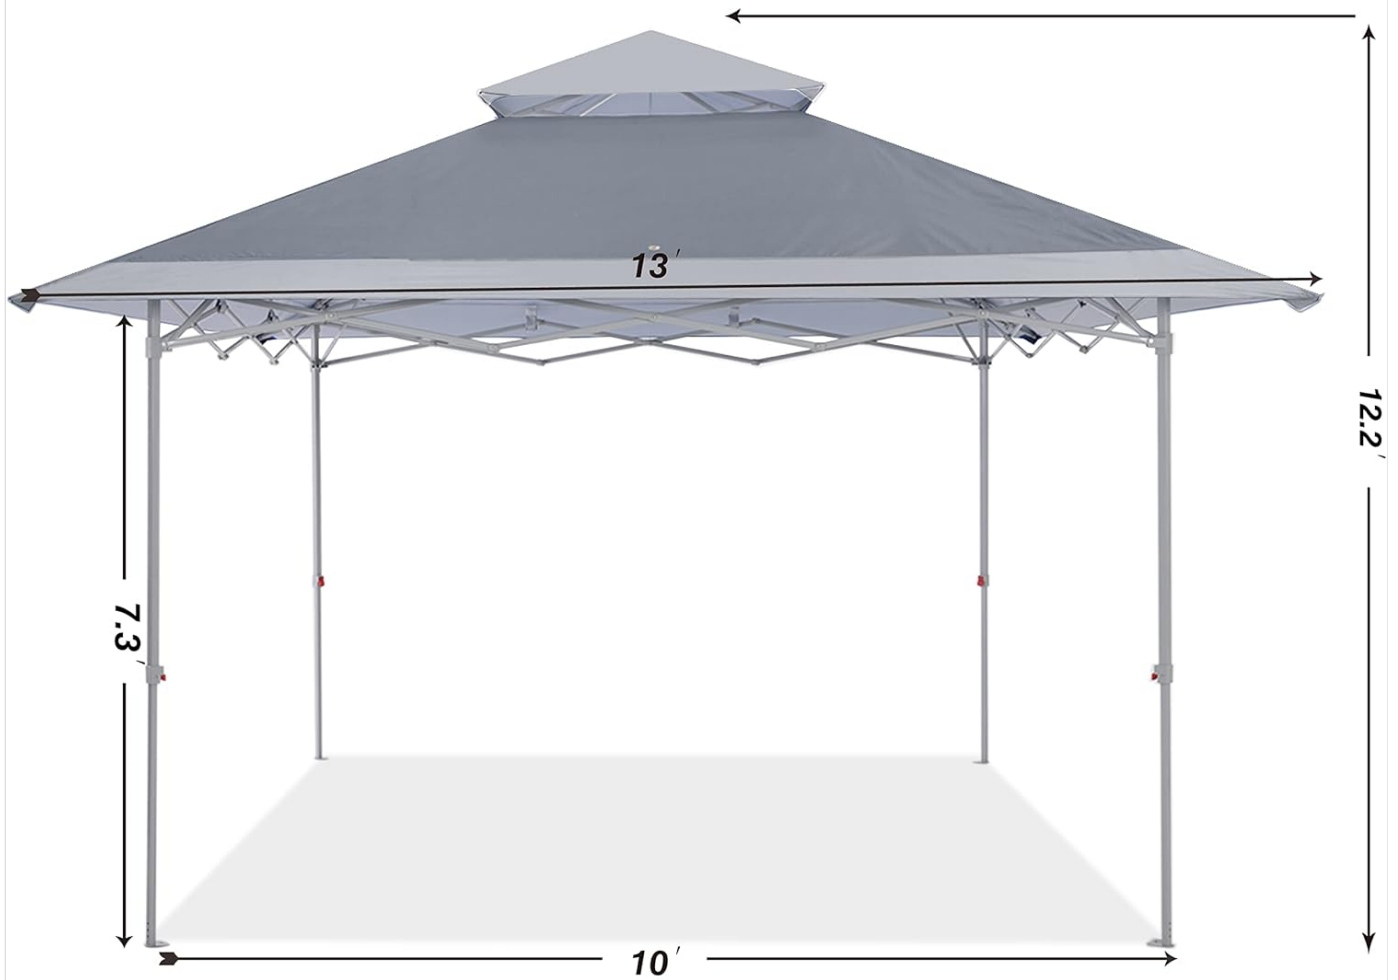 


Image: Detailed diagram showing the central lock device, pinch-free push button for height adjustment, and stakes hole in feet.



Image: Visual representation of the three adjustable height settings for the canopy legs (61, 65, 68.9 inches).

1.4 Securing the Canopy

6. **Use Sandbags and Stakes:** Fill the provided sandbags with sand and attach them to the canopy legs for added stability. Use the included stakes and ropes to firmly secure the canopy to the ground, especially in windy conditions.



Image: Contents of the package, including the canopy top, frame, wheeled roller bag, 4 sandbags, 8 stakes, and 4 ropes.

Setup Video Guide

Your browser does not support the video tag.

Video: A visual guide demonstrating the easy pop-up setup process for the COOSHADE 13x13Ft Canopy Tent.

Your browser does not support the video tag.

Video: Detailed setup instructions for a similar recreational canopy, demonstrating frame expansion, fabric attachment, and leg extension.

Your browser does not support the video tag.

Video: Demonstration of setting up an Eagle Peak 13' x 13' Straight Leg Pop Up Canopy Tent, showing the process of attaching the canopy and extending the legs.

Your browser does not support the video tag.

Video: Setup demonstration for a PHI VILLA 13x13 Canopy, highlighting the ease of assembly.

Your browser does not support the video tag.

Video: Setup guide for an ABCCANOPY 13x13 Pop Up Canopy Tent, showing the steps to erect the tent.

2. OPERATING YOUR CANOPY

Your COOSHADE canopy is designed for ease of use and maximum comfort.

2.1 Shade Coverage and Design Features

- **Large Shade Area:** The 10'x10' straight leg frame with a 13'x13' top provides 169 sq. ft. of shade, comfortably accommodating up to 10 people.

- **Extended Eaves:** The canopy features mega extended-eaves that automatically extend when the gazebo opens, distributing additional shade.
- **Double Top Design:** A wind-vented double top design helps ventilate the interior, releasing trapped heat and increasing stability in windy conditions by allowing air to pass through.
- **Drain Holes:** Several drain holes are integrated into the canopy to alleviate water ponding during rain.



Image: The COOSHADE canopy tent providing shade in an outdoor setting with seating.

PACKING LIST:



CANOPY TOP



8 xStakes



4 xRopes



BONUS WEIGHT BAGS

! WEIGHT BAGS WITHOUT SAND



Frame



Roller Bag

Image: Dimensions of the 13x13ft pop-up canopy, highlighting its waterproof, ventilated, UV protected, and easy setup features.



Image: Illustration of the automatic extended eaves, which provide additional shade coverage.



Image: The 2-tier top design, which allows for smooth airflow and helps adjust the canopy's internal temperature.

2.2 Sun Protection

The Oxford fabric top with silver coating inside provides 99% UV protection from the sun, ensuring a comfortable and protected outdoor experience.

2.3 Wind and Rain Resistance

Your browser does not support the video tag.

Video: Windproof and rainproof testing for the COOSHADE 13x13 Canopy, demonstrating its resilience in various weather conditions.

3. MAINTENANCE

- **Cleaning:** Keep the canopy fabric clean by wiping it with a damp cloth and mild soap. Avoid harsh chemicals that may damage the material.
- **Drying:** Ensure the canopy is completely dry before folding and storing to prevent mold and mildew growth.
- **Storage:** Store the canopy in its provided wheeled carry bag in a cool, dry place when not in use.

4. TROUBLESHOOTING

- **Water Ponding:** If water collects on the canopy, ensure the drain holes are clear and the canopy is taut. Adjust leg heights if necessary to create proper water runoff.
- **Wind Instability:** Always use the provided sandbags, stakes, and ropes to secure the canopy. In strong winds, consider lowering the canopy or disassembling it to prevent damage.
- **Difficulty in Setup/Takedown:** Ensure the frame is fully expanded or collapsed before attempting to lock/unlock the central hub or adjust legs. Two people are recommended for easier handling.

5. SPECIFICATIONS

Feature	Detail
Brand	COOSHADE
Model Number	JS-01

Material	UPF50+ Fabric
Frame Material	Carbon Structural Steel-Q195
Product Dimensions	10"L x 10"W x 7.3"H (Frame)
Floor Area	169 Square Feet (13'x13' top)
Item Weight	43.7 Pounds
Water Resistance Level	Waterproof
UV Protection	99% UV Protection
Assembly Required	No (Instant Folding Design)
Color	Gray

6. IMPORTANT SAFETY WARNINGS

- Always secure the canopy to a stable foundation to prevent it from tipping over in windy conditions.
- Do not set up the canopy near power lines or in areas prone to lightning strikes.
- Be cautious when assembling and disassembling the canopy to avoid injury.
- Keep the canopy clean and dry to prevent the growth of mold or mildew.
- Do not use the canopy in extreme weather conditions.

7. WARRANTY AND SUPPORT

For any questions or concerns regarding your COOSHADE 13x13Ft Pop Up Canopy Tent, please contact our customer support team. We are ready to assist you with product inquiries, parts replacement, or any issues you may encounter.

Refer to your purchase documentation for specific warranty details.