

[Manuals.plus](#) /

› [DQMOON](#) /

› Dinosaur Night Light Projector Instruction Manual

DQMOON B083LZBFB7

Dinosaur Night Light Projector

INSTRUCTION MANUAL

1. INTRODUCTION

Thank you for choosing the DQMOON Dinosaur Night Light Projector. This versatile device is designed to create a magical and soothing environment for children, projecting vibrant dinosaur and car-themed patterns onto walls and ceilings. It also functions as a gentle night light, perfect for bedtime or nursing. Please read this manual carefully to ensure proper use and maintenance of your projector.



Image: The Dinosaur Night Light Projector illuminating a room with colorful dinosaur and plant patterns.

Product Features:

- **Dual Projection Themes:** Includes interchangeable films for Dinosaur World (Tyrannosaurus Rex, Triceratops, Pterosaurs, Stegosaurus) and Car World (excavators, ambulances, fire trucks, buses, airplanes).
- **Multiple Lighting Modes:** Features four color lamps (yellow, blue, green, red) offering six lighting modes (single color, mixed color, transform, and full light).
- **360° Silent Rotation:** Projects moving patterns that can be set to stationary or rotating mode without distracting noise.
- **Versatile Use:** Functions as a projector, night light, bedside lamp, and nursing light.

Package Contents:

- 1 x Projection Light Unit
- 2 x HD Projection Films (Dinosaur and Car themes)

- 1 x USB Cable
- 1 x Instruction Manual

2. SETUP

Powering the Device:

The projector can be powered in two ways:

1. **USB Power:** Connect the provided USB cable to the projector's USB port and plug the other end into a compatible USB power adapter (not included), computer, or power bank.
2. **Battery Power:** Insert 4 x AA batteries (not included) into the battery compartment located at the bottom of the unit. Ensure correct polarity (+/-).



Image: Powering options for the projector, including USB and battery insertion points.

Installing/Changing Projection Films:

1. Gently remove the top dome cover of the projector.
2. Select your desired projection film (Dinosaur or Car).
3. Carefully align the film with the internal grooves of the projector and insert it. Ensure it sits securely.
4. Replace the top dome cover if you wish to use it as a night light without projections, or leave it off for full projection effect.

3. OPERATING INSTRUCTIONS

The projector features intuitive button controls on its base:

- **Power Button (Ⓢ):** Press to turn the projector ON or OFF.
- **Color/Mode Button (Ⓜ):** Press to cycle through different color modes (yellow, blue, green, red, mixed colors, transform mode, full light mode).
- **Rotation Button (Ⓡ):** Press to activate or deactivate the 360-degree rotation feature.



Toy & Gift for Boys and Girls



Easter Gift for Kids



Birthday Gift for Kids

Christmas Gift for Kids



Image: The night light displaying various single and multi-color illumination options.

Projection Modes:

With the dome cover removed, the projector will display patterns on your ceiling and walls. The patterns will vary based on the installed film.



Image: Examples of dinosaur projection patterns in various colors.



Image: Examples of car and truck projection patterns in various colors.

Night Light Mode:

With the dome cover in place, the projector functions as a soft, ambient night light, providing gentle illumination without projecting patterns.

4. MAINTENANCE

Cleaning:

- Wipe the exterior of the projector with a soft, dry cloth.
- Do not use abrasive cleaners or solvents, as they may damage the surface.
- Keep the projection films clean and free of dust or fingerprints to ensure clear projections. Handle them by the

edges.

Storage:

When not in use, store the projector in a cool, dry place, away from direct sunlight and extreme temperatures. If storing for an extended period, remove the batteries to prevent leakage.

5. TROUBLESHOOTING

Issue	Possible Cause	Solution
Projector does not turn on.	No power supply; batteries drained or incorrectly inserted; USB cable faulty.	Check USB connection; replace batteries or ensure correct polarity; try a different USB cable or power source.
Projection is blurry or unclear.	Projection film dirty or improperly installed; room too bright.	Clean the projection film; ensure film is correctly seated; use in a dark room for best results.
Rotation function not working.	Rotation button not pressed; internal mechanism obstruction or fault.	Press the rotation button (ⓘ); ensure no foreign objects are obstructing the mechanism. If issue persists, contact support.
Colors are not projecting correctly or some colors are missing.	Internal LED issue; power fluctuation.	Turn the unit off and on again; try a different power source. If specific colors consistently fail, contact support.
Creaking noises during rotation.	Minor friction in the rotation mechanism.	This may occur with prolonged use. If the noise becomes excessive or rotation stops, contact support.

6. SPECIFICATIONS

Feature	Detail
Brand	DQMOON
Model	B083LZBFB7
Product Dimensions	5.12"D x 5.12"W x 4.72"H
Item Weight	11.3 ounces
Material	Plastic (Acrylonitrile Butadiene Styrene)
Light Source Type	LED

Feature	Detail
Wattage	2 watts
Voltage	5 Volts
Power Source	USB / 4x AA Batteries (not included)
Control Method	Push Button
Color	Blue Kids Night Light
UPC	761127151241

7. WARRANTY AND SUPPORT

For any questions, concerns, or warranty inquiries regarding your DQMOON Dinosaur Night Light Projector, please contact the manufacturer or your point of purchase. Keep your purchase receipt as proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

