

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Steamfast](#) /

› [SF-562 Canister Garment Steamer User Manual](#)

Steamfast SF-562

Steamfast SF-562 Canister Garment Steamer

Model: SF-562

INTRODUCTION

This user manual provides detailed instructions for the safe and effective operation, maintenance, and troubleshooting of your Steamfast SF-562 Canister Garment Steamer. Please read this manual thoroughly before initial use and retain it for future reference.

IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury. This appliance is for household use only.

- Ensure the voltage matches the rating on the appliance.
- Do not immerse the steamer in water or other liquids.
- Unplug the appliance when not in use and before cleaning.
- Keep the steam hose and nozzle away from children and pets.
- Use only distilled or demineralized water to prevent mineral buildup.
- Do not operate the steamer with a damaged cord or plug.
- Always allow the unit to cool completely before storing.

PRODUCT OVERVIEW

The Steamfast SF-562 Canister Garment Steamer is designed to quickly and effectively remove wrinkles and refresh various fabrics using the power of steam.





Figure 1: Full view of the Steamfast SF-562 Canister Garment Steamer with its components assembled.



Figure 2: Diagram highlighting key features including the 57-inch cool-touch fabric hose, 45-second heat-up time, 96-minute steam time, 86-ounce tank capacity, steam nozzle, and telescopic pole.



Figure 3: A user demonstrating the use of the steamer on a jacket, showing steam being applied to fabric.

Warm, clean and smooth steam.

User-friendly steam nozzle helps you get rid of wrinkles on a variety of fabrics.



Figure 4: The steamer in use with the attachable fabric brush on a skirt, illustrating its versatility.



Figure 5: A close-up view of the steam nozzle, highlighting its 9 steam outlets for efficient wrinkle removal.



Easy and convenient.

40-ounce removable water tank provides up to 45 minutes of continuous steam. Remove and refill anytime without waiting for cool-down.

Figure 6: Detail of the removable water tank, emphasizing its ease of refilling without waiting for cool-down.

Perfectly smooth fabric.

The water-conserving, low wear-and-tear way to keep things looking their best.



Figure 7: Top-down view illustrating the chemical-free operation and the two steam settings for different fabric types.

SETUP

- 1. Unpack Components:** Carefully remove all parts from the packaging. Verify all components are present: main unit, telescopic pole, hanger, steam hose with nozzle, fabric brush, and collar helper.
- 2. Assemble Pole and Hanger:** Insert the telescopic pole into the designated opening on the main unit. Secure the hanger assembly to the top of the telescopic pole.
- 3. Attach Steam Hose:** Connect the steam hose to the steam outlet on the main unit, ensuring it is securely fastened.
- 4. Fill Water Tank:** Remove the water tank from the main unit. Fill the tank with distilled or demineralized water. Do not exceed the maximum fill line. Reinsert the water tank securely into the main unit.
- 5. Position Steamer:** Place the steamer on a flat, stable surface. Ensure the power cord is not obstructed and is within reach of a suitable electrical outlet.

OPERATING INSTRUCTIONS

- Power On:** Plug the power cord into a standard 120V AC electrical outlet. Press the power button to turn on the steamer. The indicator light will illuminate.
- Heat Up:** Allow approximately 45 seconds for the steamer to heat up and produce steam. The indicator light may change or turn off once ready, depending on the model.
- Select Steam Setting:** The SF-562 offers two steam settings. Adjust the setting based on the fabric type. Use lower settings for delicate fabrics and higher settings for heavier materials.
- Prepare Garment:** Hang the garment on the integrated hanger. For best results, gently pull the fabric taut with one hand while steaming with the other.
- Begin Steaming:** Hold the steam nozzle a few inches from the fabric. Move the nozzle in a downward motion, allowing the steam to penetrate the fibers. For stubborn wrinkles, hold the nozzle closer or use the fabric brush attachment.
- Continuous Steam:** The steamer provides up to 96 minutes of continuous steam on a full 86-ounce tank.
- Power Off:** When finished, press the power button to turn off the steamer and unplug it from the outlet.
- Cool Down:** Allow the unit to cool completely before emptying the water tank or storing.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your steamer.

- Empty Water Tank:** After each use, empty any remaining water from the tank to prevent mineral buildup.
- Cleaning Exterior:** Wipe the exterior of the steamer with a soft, damp cloth. Do not use abrasive cleaners.
- Descaling (Monthly or as needed):** If you notice reduced steam output or mineral deposits, descaling is necessary.
 - Mix a solution of 50% white vinegar and 50% water.
 - Pour the solution into the water tank.
 - Run the steamer until half of the solution has been used.
 - Turn off and unplug the steamer, allowing it to sit for 30 minutes.
 - Repeat the steaming process until the tank is empty.
 - Rinse the tank thoroughly with fresh water and run a full tank of fresh water through the steamer to flush out any remaining vinegar.
- Storage:** Store the steamer in a cool, dry place. Ensure the water tank is empty and the unit is completely cool before storing.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No steam output	Water tank empty; Unit not plugged in; Not heated up; Mineral buildup.	Refill water tank; Plug in unit; Allow 45 seconds to heat; Descale the unit.
Water leaking from nozzle	Condensation in hose; Overfilled tank.	Hold nozzle upright to allow condensation to drain back; Do not overfill tank.
Reduced steam output	Mineral buildup; Low water level.	Descale the unit; Refill water tank.

Problem	Possible Cause	Solution
Unit not turning on	Not plugged in; Power outlet issue.	Ensure securely plugged in; Test outlet with another appliance.

SPECIFICATIONS

- **Brand:** Steamfast
- **Model:** SF-562
- **Color:** White
- **Product Dimensions:** 13.2" L x 13.2" W x 47.2" H
- **Item Weight:** 11 Pounds
- **Wattage:** 1500 watts
- **Voltage:** 120 Volts
- **Heat Time:** Approximately 45 seconds (0.75 minutes)
- **Capacity:** 86 ounces (5.4 Pounds)
- **Included Components:** SF-562 unit, Owner's Guide
- **Assembly Required:** Yes
- **Care Instructions:** Hand Wipe Clean

WARRANTY AND SUPPORT

Steamfast products are designed and supported in Andover, KS. Your Steamfast SF-562 Canister Garment Steamer comes with a **2-year manufacturer's warranty**. If the product does not meet expectations, Steamfast offers a replacement within this period.

For further assistance or to access the official user guide, please refer to the following resource:

[Download Official User Manual
\(PDF\)](#)

© 2024 Steamfast. All rights reserved.