

## VINABTY GB172WJSA RRMCG172WJSA

# VINABTY GB172WJSA Replacement Remote Control for Sharp AQUOS TV

Instruction Manual

## INTRODUCTION

---

This manual provides comprehensive instructions for the VINABTY GB172WJSA replacement remote control. This remote is designed to function as a direct replacement for various Sharp AQUOS TV models, offering seamless operation without the need for programming. Please read this manual carefully to ensure proper use and longevity of your remote control.

### Compatible TV Models include:

- LC-80LE661U, LC-70C6600U, LC-70EQ30U, LC-70LE661U, LC-60EQ30U, LC-60LE661U, LC-60LE660U, LC-60c6600U, LC-70LE660U
- LC-60LE550U, LC-80UQ17U, LC-70UQ17U, LC-60UQ17U, LC-70TQ15U, LC-60TQ15U, LC-70SQ17U, LC-70SQ15U, LC-70SQ10U, LC-60SQ17U, LC-60SQ15U, LC-60SQ10U, LC-70EQ10U, LC-60EQ10U, LC-80LE650U, LC-70LE650U, LC-70C6500U, LC-60LE650U, LC-60C6500U, LC-90LE657U, LC-80LE642U

## SETUP AND BATTERY INSTALLATION

---

The VINABTY GB172WJSA remote control requires two AAA batteries (not included) for operation. No programming is needed; simply insert the batteries, and the remote is ready to use with compatible Sharp AQUOS TVs.

1. **Open the Battery Compartment:** Locate the battery compartment cover on the back of the remote control. Slide the cover downwards or press the latch and lift to open.
2. **Insert Batteries:** Insert two new AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
3. **Close the Battery Compartment:** Replace the battery compartment cover by sliding it back into place until it clicks securely.
4. **Test the Remote:** Point the remote control at your Sharp AQUOS TV and press the **POWER** button. The TV should respond.






*Image: Front view of the remote control, showing button layout and overall design. This image also displays the product dimensions.*

## OPERATING INSTRUCTIONS

---

The VINABTY GB172WJSA remote control features a standard layout for easy navigation and control of your Sharp AQUOS TV. Below is a general guide to the main functions:

- **POWER:** Turns the TV on or off.
- **TV/STB/DVD-VCR/AUDIO:** Selects the input source for TV, Set-Top Box, DVD/VCR, or Audio devices.
- **Number Buttons (0-9):** Directly selects channels or inputs numerical data.
- **ENT:** Confirms selections or enters channel numbers.
- **VOL +/-:** Adjusts the volume level.
- **CH +/-:** Changes channels up or down.
- **MUTE:** Mutes or unmutes the TV audio.
- **INPUT:** Cycles through available input sources.
- **MENU:** Opens the TV's main menu for settings and options.
- **Navigation Buttons (Up, Down, Left, Right, OK):** Navigates through menus and confirms selections.
- **EXIT:** Exits the current menu or screen.
- **RETURN:** Returns to the previous screen or channel.
- **NETFLIX:** Direct access button for the Netflix application.
- **FAVCH / FAVAPP:** Accesses favorite channels or applications.
- **Colored Buttons (A, B, C, D):** Functionality varies depending on the TV model and current application.
- **Playback Controls (Play, Pause, Stop, Rewind, Fast Forward, Skip):** Controls media playback on compatible devices or applications.
- **DISPLAY/SLEEP/AUDIO/FREEZE:** Provides various utility functions such as displaying information, setting sleep timer, changing audio tracks, or freezing the screen.

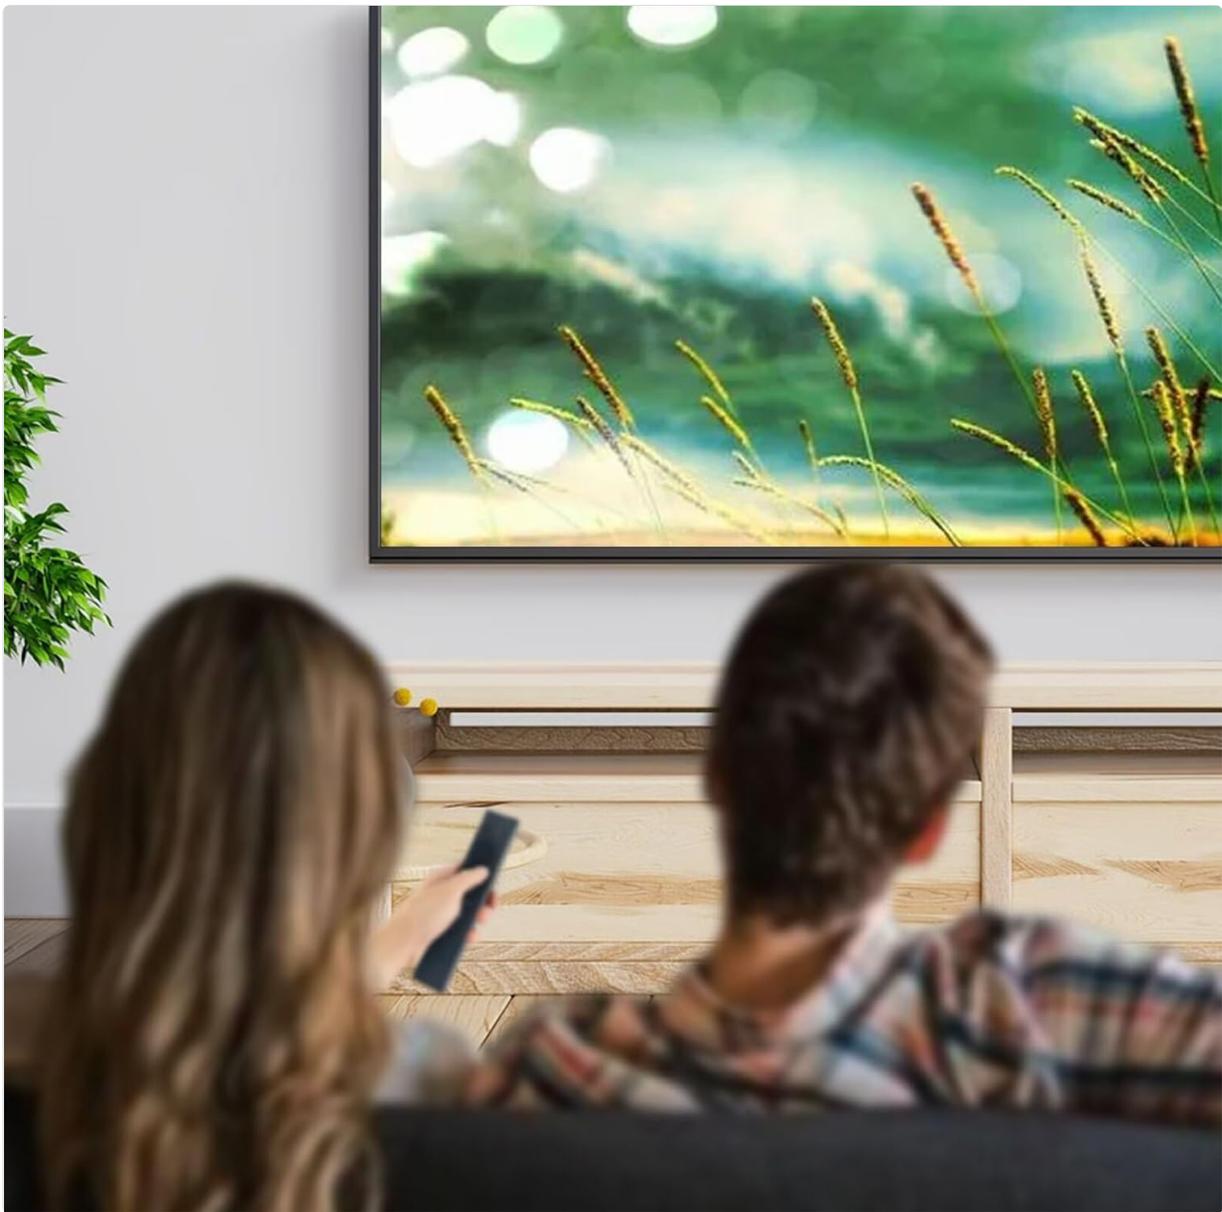

*Image: A user operating the remote control while viewing a television, demonstrating typical usage.*

## MAINTENANCE

---

To ensure the optimal performance and longevity of your remote control, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe the remote control. For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution. Avoid using harsh chemicals or abrasive cleaners.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AAA).
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage, which can damage the device. Store in a cool, dry place.
- **Avoid Damage:** Do not drop the remote control, expose it to extreme temperatures, or immerse it in liquids.

## TROUBLESHOOTING

---

If you encounter issues with your VINABTY GB172WJSA remote control, refer to the following common solutions:

Problem	Possible Cause	Solution
Remote is not working.	Dead or incorrectly inserted batteries.	Replace batteries with new AAA batteries, ensuring correct polarity (+/-).
Remote has short range or intermittent response.	Weak batteries; Obstruction between remote and TV; Infrared sensor on TV is blocked.	Replace batteries. Remove any objects blocking the line of sight between the remote and the TV. Ensure the TV's IR sensor is clear.
Specific buttons are not functioning.	Dirt or debris under the button; Remote malfunction.	Clean the remote surface. If the issue persists, the remote may be faulty and require replacement.
Remote works for some functions but not others.	TV model incompatibility for certain advanced functions.	Verify your TV model is listed as compatible. Some advanced features may not be universally supported across all listed models.

## SPECIFICATIONS

Feature	Detail
Model Number	GB172WJSA RRMCGB172WJSA
Brand	VINABTY
Compatible Devices	Sharp AQUOS Televisions (various models)
Power Source	2 x AAA Batteries (not included)
Product Dimensions	9.5 x 1.8 x 0.65 inches (approximately 24.13 x 4.57 x 1.65 cm)
Item Weight	3.16 ounces (approximately 89.58 grams)
Special Feature	Ergonomic design
Color	Black





Image: Front view of the remote control, highlighting its dimensions (9.45 inches length, 1.77 inches width).

## WARRANTY AND SUPPORT

---

For any questions, concerns, or technical support regarding your VINABTY GB172WJSA replacement remote control, please contact the seller or manufacturer directly through your purchase platform. Please refer to your purchase documentation for specific warranty terms and contact information.

*Note: This remote is a replacement unit and does not require complex programming. Its functionality is*

*designed to mimic the original remote for compatible Sharp AQUOS TV models.*