

[Manuals.plus](#) /

› [CIRCLE JOY](#) /

› CIRCLE JOY Electric Wine Opener Instruction Manual

CIRCLE JOY KB1-601807-SS

CIRCLE JOY Electric Wine Opener Instruction Manual

Model: KB1-601807-SS

INTRODUCTION

Thank you for choosing the CIRCLE JOY Electric Wine Opener. This manual provides essential information for the safe and efficient use of your new wine opener. Please read these instructions carefully before first use and retain them for future reference.

Traditional Corkscrews



CIRCLE JOY Electric Wine Opener

Easy to use

Uncork fastly

Durable

Perfect gift



Image: The CIRCLE JOY Electric Wine Opener, a sleek stainless steel device, shown alongside its retail packaging and a foil cutter.

PRODUCT COMPONENTS

The CIRCLE JOY Electric Wine Opener consists of the following main parts:

- **Electric Wine Opener Body:** The main unit containing the motor and battery compartment.
- **Corkscrew Mechanism:** The spiral worm that penetrates and extracts the cork.
- **Foil Cutter:** A separate accessory used to remove the foil seal from wine bottles.
- **Operation Buttons:** Up and Down buttons for cork extraction and release.



Image: A detailed diagram illustrating the various components of the electric wine opener, including the battery compartment, operation buttons, spiral hook, and foil cutter.

SETUP

Before using your electric wine opener, follow these steps to prepare it:

1. Install Batteries:

- Remove the battery compartment cap from the bottom of the opener.
- Insert 4 AA batteries (not included) according to the polarity indicators (+/-) inside the compartment.
- Replace the battery compartment cap securely.

HOW TO USE?

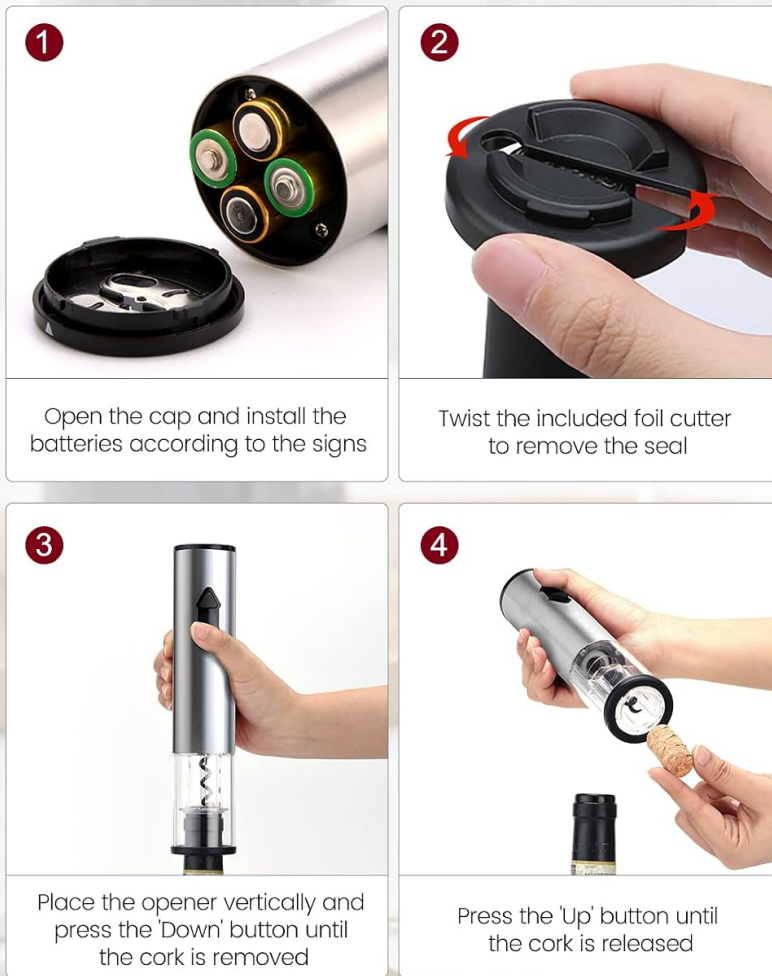


Image: A visual guide demonstrating the battery installation process for the electric wine opener.

OPERATING INSTRUCTIONS

Follow these steps to open a wine bottle:

1. Remove Foil Seal:

- Place the included foil cutter on top of the wine bottle.
- Grip the bottle firmly and twist the foil cutter around the bottle neck to cut and remove the foil seal.



Image: A hand demonstrating the use of the foil cutter to cleanly remove the wine bottle's seal.

2. Extract Cork:

- Place the electric wine opener vertically over the cork, ensuring it is centered.
- Hold the bottle firmly with one hand and press the **Down** button on the opener. The corkscrew will automatically penetrate the cork and pull it out of the bottle.
- Release the button once the cork is fully extracted and the opener stops.



Image: The electric wine opener positioned over a wine bottle, with a hand pressing the 'down' button to initiate cork extraction.

3. Release Cork:

- Once the cork is removed from the bottle, lift the opener away.
- Press the **Up** button to reverse the corkscrew and release the cork from the opener.



Image: The electric wine opener with the cork extracted, showing a hand pressing the 'up' button to release the cork from the device.

Video: A demonstration of the CIRCLE JOY Electric Wine Bottle Opener in action, showing the full process of foil removal, cork extraction, and cork release.

Proper care ensures the longevity of your wine opener:

- **Cleaning:** Wipe the exterior of the opener with a clean, damp cloth. Do not immerse the unit in water or wash it in a dishwasher.
- **Corkscrew Care:** Periodically check the corkscrew for any debris. If necessary, carefully remove any cork fragments.
- **Storage:** Store the wine opener in a dry place, away from direct sunlight and extreme temperatures. Ensure the foil cutter is stored safely.
- **Battery Replacement:** Replace batteries when the opener's performance diminishes. Always use new AA batteries and dispose of old batteries responsibly.

TROUBLESHOOTING

If you encounter issues, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Opener does not turn on or operate.	Batteries are dead or incorrectly installed.	Check battery polarity or replace with new AA batteries.
Cork is not fully extracted.	Opener not centered on the cork; corkscrew is worn; cork is synthetic or very tight.	Ensure opener is vertical and centered. Apply gentle downward pressure. If issue persists, consider replacing the opener if the corkscrew appears damaged.
Cork gets stuck in the opener.	Corkscrew did not fully retract.	Press the Up button again to fully retract the corkscrew. If still stuck, gently twist the cork off by hand.
Foil cutter does not remove foil cleanly.	Foil cutter blades are dull or not positioned correctly.	Ensure the foil cutter is firmly pressed against the bottle neck and rotated completely around.

SPECIFICATIONS

Feature	Detail
Model Number	KB1-601807-SS
Brand	CIRCLE JOY
Material	Carbon Steel, Polycarbonate, Stainless Steel
Color	Clear Stainless (Battery Powered)
Finish Type	Stainless Steel, Steel
Item Weight	0.33 Kilograms
Product Dimensions	0.79"L x 0.17"W
Power Source	4 x AA Batteries (not included)

WARRANTY AND SUPPORT

CIRCLE JOY stands behind the quality of its products. This Electric Wine Opener comes with a **12-Month Satisfaction Service**. For any product-related inquiries, technical support, or warranty claims, please contact our customer service team. We offer a **24-Hour Online Fast Response** to assist you. Please refer to your purchase documentation for specific contact details or visit the official CIRCLE JOY website for support information.

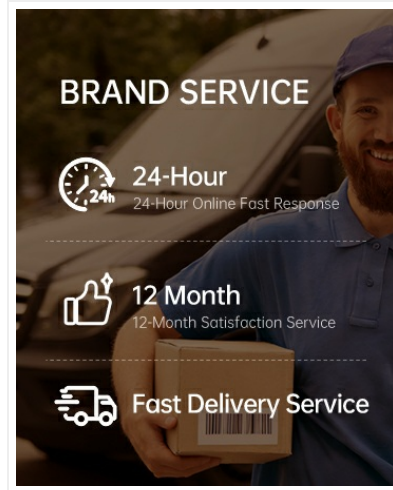


Image: An illustration highlighting CIRCLE JOY's brand service commitments, including 24-hour online support and a 12-month satisfaction guarantee.