

BOTTMA 1072ABC2-R

BOTTMA 1072ABC2-R Universal Remote Control User Manual

Model: 1072ABC2-R

1. INTRODUCTION

This manual provides instructions for the BOTTMA 1072ABC2-R Universal Remote Control. This remote is designed to be compatible with various ARRIS, LCD, and LED televisions, offering a straightforward replacement or secondary control option.

2. PACKAGE CONTENTS

- 1 x BOTTMA 1072ABC2-R Universal Remote Control

3. SETUP

3.1 Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open it.
3. Insert two AAA batteries (not included), ensuring the positive (+) and negative (-) terminals align with the markings inside the compartment.
4. Replace the battery compartment cover until it clicks securely into place.

3.2 Initial Use

This remote control is designed to work immediately after battery installation for compatible ARRIS, LCD, and LED televisions. No programming is typically required.

4. OPERATING INSTRUCTIONS

Familiarize yourself with the buttons on your BOTTMA 1072ABC2-R remote control. A visual representation and description of each button's function are provided below.

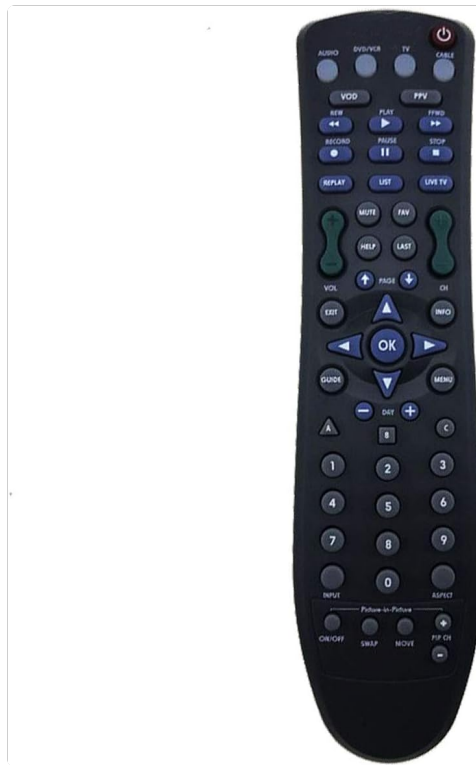


Image: Front view of the BOTTMA 1072ABC2-R Universal Remote Control, showing all buttons and their labels. The remote is black with blue and green function buttons.

4.1 Power and Device Selection Buttons

- **Power (Red button, top right):** Turns the connected device (TV, Cable box) on or off.
- **AUDIO:** Selects audio input mode.
- **DVD/VCR:** Selects DVD/VCR input mode.
- **TV:** Selects TV input mode.
- **CABLE:** Selects Cable box input mode.

4.2 Playback and Recording Controls

- **VOD:** Accesses Video On Demand.
- **PPV:** Accesses Pay Per View.
- **REW (<<):** Rewind.
- **PLAY (>):** Play.
- **FFWD (>>):** Fast Forward.
- **RECORD (Red dot):** Starts recording.
- **PAUSE (||):** Pauses playback.
- **STOP (Square):** Stops playback.
- **REPLAY:** Replays the last few seconds.
- **LIST:** Displays recorded programs list.
- **LIVE TV:** Returns to live television.

4.3 Navigation and Menu Controls

- **MUTE:** Mutes or unmutes audio.
- **FAV:** Accesses favorite channels.
- **HELP:** Displays on-screen help.
- **LAST:** Returns to the previous channel.

- **VOL (+/-)**: Adjusts volume up or down.
- **PAGE (+/-)**: Scrolls through pages in menus or guides.
- **CH (+/-)**: Changes channels up or down.
- **EXIT**: Exits current menu or screen.
- **INFO**: Displays program information.
- **Directional Arrows (Up, Down, Left, Right)**: Navigates through menus and options.
- **OK**: Confirms selection.
- **GUIDE**: Opens the program guide.
- **MENU**: Opens the main menu.
- **DAY (+/-)**: Changes day in the program guide.

4.4 Number Pad and Additional Functions

- **Number Buttons (0-9)**: Directly enters channel numbers.
- **INPUT**: Cycles through video input sources.
- **ASPECT**: Changes screen aspect ratio.
- **Picture-in-Picture (PIP) Controls**:
 - **ON/OFF**: Toggles Picture-in-Picture mode.
 - **SWAP**: Swaps main and PIP screens.
 - **MOVE**: Moves the PIP window.
 - **PIP CH (+/-)**: Changes channel in the PIP window.

5. MAINTENANCE

- **Cleaning**: Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement**: Replace batteries when the remote's performance degrades. Remove batteries if the remote will not be used for an extended period to prevent leakage.
- **Storage**: Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not working.	Dead or incorrectly inserted batteries.	Replace batteries with new ones, ensuring correct polarity (+/-).
Remote not controlling device.	Remote is out of range or line of sight is blocked. Incorrect device selected.	Ensure you are pointing the remote directly at the device's IR receiver. Remove any obstructions. Press the correct device button (TV, CABLE, etc.).
Some buttons are unresponsive.	Dirty contacts under the button.	Clean the remote surface. If the issue persists, the remote may require replacement.

7. SPECIFICATIONS

- **Model**: 1072ABC2-R

- **Brand:** BOTTMA
- **Compatible Devices:** Television (Arris, Universal LCD LED TV)
- **Connectivity Technology:** Infrared
- **Maximum Range:** 10 Meters
- **Power Source:** 2 x AAA Batteries (not included)

8. WARRANTY AND SUPPORT

This BOTTMA remote control comes with a **90-day warranty** from the date of purchase. If the remote control is not suitable for your TV or experiences functional issues within this period, please contact your retailer for assistance or a refund.

For further support or inquiries, please refer to the contact information provided by your point of purchase.