

V7 KW550ESBT

V7 KW550ESBT Bluetooth Keyboard User Manual

MODEL: KW550ESBT

1. Introduction

The V7 KW550ESBT Bluetooth Keyboard is designed to enhance your productivity with versatile connectivity options. This compact, ultra-slim keyboard offers a comfortable and quiet typing experience, featuring laser-etched keys for long-lasting durability. It supports connection to multiple devices via Bluetooth or a 2.4 GHz USB dongle.

Key features include:

- Seamless switching between up to 2 Bluetooth devices or connection via the included 2.4 GHz USB dongle.
- Scissor-switch keys for comfortable and quiet typing.
- Laser-etched keys for enhanced durability.
- Ultra-slim and compact design.
- Includes two AAA batteries for immediate use.

2. Package Contents

Please check the package for the following items:

- V7 KW550ESBT Bluetooth Keyboard
- 2.4 GHz USB Receiver (dongle)
- 2 x AAA Batteries
- User Manual (this document)



Image: The V7 KW550ESBT keyboard shown with its accompanying 2.4 GHz USB receiver, ready for connection.

3. Setup

3.1. Battery Installation

1. Locate the battery compartment on the underside of the keyboard.
2. Open the battery compartment cover.
3. Insert the two AAA batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.

3.2. Connecting via 2.4 GHz USB Dongle

1. Remove the 2.4 GHz USB receiver from its storage slot (usually within the battery compartment or a dedicated slot).
2. Plug the USB receiver into an available USB port on your computer or device.
3. The keyboard should automatically connect. If not, ensure the keyboard is powered on and the connection indicator light (if present) is active.

3.3. Connecting via Bluetooth

The V7 KW550ESBT keyboard supports connecting to up to two Bluetooth devices.

1. Ensure the keyboard is powered on.
2. Press and hold the Bluetooth pairing key (refer to keyboard layout for specific key, often indicated by a Bluetooth symbol or 'BT1'/'BT2') for a few seconds until the Bluetooth indicator light starts blinking, indicating it's in pairing mode.
3. On your device (computer, tablet, smartphone), go to Bluetooth settings.
4. Search for available devices and select "V7 KW550ESBT" (or similar name) from the list.
5. Follow any on-screen prompts to complete the pairing process. You may be asked to enter a code displayed on your screen using the keyboard.
6. Repeat for a second Bluetooth device if desired, using the other Bluetooth pairing key.

3.4. Switching Between Connected Devices

To switch between connected devices (Bluetooth 1, Bluetooth 2, or 2.4 GHz USB), press the corresponding function key (e.g., Fn + BT1, Fn + BT2, or Fn + 2.4G if available). Refer to your keyboard's specific layout for these keys.



Image: Top-down view of the V7 KW550ESBT keyboard, showing the full QWERTY layout and function keys.

4. Operating the Keyboard

4.1. Standard Key Functions

The keyboard features a standard QWERTY layout with all essential alphanumeric keys, punctuation, and modifier keys (Shift, Ctrl, Alt, Windows/Command).

4.2. Multimedia and Function Keys

The top row of keys (F1-F12) often doubles as multimedia or special function keys. These functions are typically accessed by pressing the **Fn** key simultaneously with the desired F-key. Common functions include:

- Volume control (mute, decrease, increase)
- Media playback (play/pause, previous, next)
- Screen brightness adjustment
- Search function
- Lock screen

Refer to the icons printed on your specific keyboard's F-keys for exact functionality.

4.3. Quiet Typing Experience

The scissor-switch key design minimizes typing noise, making it suitable for quiet environments.



Image: Side profile of the V7 KW550ESBT keyboard, highlighting its ultra-slim design.

5. Maintenance

5.1. Cleaning

To clean your keyboard:

- Turn off the keyboard and disconnect it from your device.
- Use a soft, lint-free cloth slightly dampened with water or a mild cleaning solution.
- Wipe the keycaps and surface gently. Avoid excessive moisture.
- For dust and debris between keys, use compressed air.

5.2. Battery Replacement

When the keyboard's performance degrades or the battery indicator (if present) signals low power, replace the AAA batteries as described in Section 3.1.

6. Troubleshooting

If you encounter issues with your V7 KW550ESBT keyboard, try the following solutions:

Problem	Possible Solution
Keyboard not responding	<ul style="list-style-type: none">• Ensure batteries are correctly installed and charged. Replace if necessary.• Check if the keyboard is powered on.• For USB connection: Ensure the USB dongle is securely plugged into a working USB port. Try a different port.• For Bluetooth connection: Ensure Bluetooth is enabled on your device. Re-pair the keyboard if necessary.• Ensure you are on the correct connection channel (BT1, BT2, or 2.4G).
Keys are sticky or unresponsive	<ul style="list-style-type: none">• Clean the keyboard as described in Section 5.1.• Ensure no debris is lodged under the keys.
Bluetooth pairing fails	<ul style="list-style-type: none">• Ensure the keyboard is in pairing mode (blinking indicator).• Make sure your device's Bluetooth is on and discoverable.• Move the keyboard closer to your device.• Remove any previous pairings of the keyboard from your device's Bluetooth settings and try pairing again.

7. Specifications

Feature	Detail
Brand	V7
Model Number	KW550ESBT
Connectivity Technology	Bluetooth, 2.4 GHz Wireless (USB Dongle)
Keyboard Description	Multimedia
Recommended Use	Office
Special Feature	Bluetooth
Color	Black

Feature	Detail
Style	Classic
Product Dimensions	16.1L x 4.7W x 0.8H centimeters
Material	Plastic
Power Source	2 x AAA Batteries (included)

8. Warranty and Support

For warranty information and technical support, please refer to the documentation provided with your purchase or visit the official V7 website. Keep your proof of purchase for warranty claims.