



[Manuals.plus](#) /

› [Outsunny](#) /

› Outsunny 2 Person Porch Swing Instruction Manual

Outsunny CA84A-057V01BG0231

Outsunny 2 Person Porch Swing Instruction Manual

Model: CA84A-057V01BG0231

INTRODUCTION

Thank you for choosing the Outsunny 2 Person Porch Swing. This manual provides essential information for the safe assembly, operation, and maintenance of your new patio swing. Please read these instructions thoroughly before assembly and retain them for future reference.



Figure 1: The Outsunny 2 Person Porch Swing with adjustable canopy and central console.

SAFETY INFORMATION

To ensure safe operation and prevent injury, please adhere to the following safety guidelines:

- **Maximum Weight Capacity:** Do not exceed the maximum weight limit of 181.44 kg (400 lbs). This swing is designed for two persons.
- **Stable Surface:** Always place the swing on a flat, level, and stable surface to prevent tipping.
- **Assembly:** Ensure all parts are correctly assembled and all fasteners are securely tightened before use. Periodically check all bolts and nuts for tightness.
- **Clearance:** Maintain adequate clearance around the swing to prevent collisions with objects or persons.
- **Weather Conditions:** Do not use the swing during strong winds, heavy rain, or other severe weather conditions. The canopy should be lowered or removed in high winds.
- **Children:** Supervise children at all times when they are near or using the swing.
- **Modifications:** Do not modify the product in any way. Unauthorized modifications may compromise safety and void the warranty.
- **Sharp Objects:** Keep sharp objects away from the fabric components to prevent tears or damage.

PACKAGE CONTENTS

Before beginning assembly, verify that all components listed below are present and undamaged. If any parts are missing or damaged, do not proceed with assembly and contact customer support.

Part	Description	Quantity
A	Main Frame Components (Legs, Crossbars)	1 Set
B	Swing Seat Frames	2
C	Seat Cushions	2
D	Canopy Frame	1 Set
E	Canopy Fabric	1
F	Central Console (Table & Storage)	1
G	Hanging Chains/Hooks	1 Set
H	Hardware Pack (Bolts, Nuts, Washers, Wrenches)	1 Set

SETUP (ASSEMBLY INSTRUCTIONS)

Assembly typically requires two adults. It is recommended to use a ratchet wrench for faster and more secure tightening of fasteners, as the included tools may be basic.

- 1. Assemble the Main Frame:** Connect the leg components and crossbars using the provided bolts and nuts. Ensure all connections are firm but do not fully tighten until all frame parts are in place.
- 2. Attach the Canopy Frame:** Secure the canopy support bars to the top of the main frame.
- 3. Install the Canopy Fabric:** Slide the canopy fabric onto its frame. The canopy angle can be adjusted after installation.

ADJUSTABLE TOP CANOPY



The angle of the canopy can be easily adjusted to your needs

Figure 2: The canopy features an adjustable mechanism, allowing you to tilt it to block sunlight as needed.

4. **Assemble the Swing Seats:** Attach the seat frames to the hanging chains. Ensure the metal spring hooks are securely fastened to the main frame.

MORE DETAILS




Metal Spring Hook
for firmly hanging



Sturdy Screws
for steady construction



Well-padded Cushion
for a comfortable seating experience

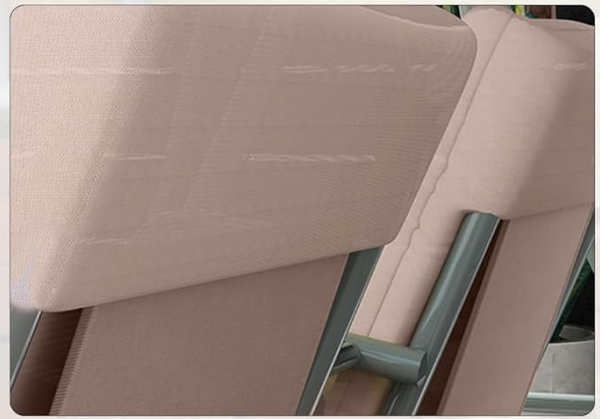

Straps
easy to attach the cushion to seat

Figure 3: Details of the swing's construction, including the metal spring hook for secure hanging, sturdy screws for stability, well-padded cushions for comfort, and straps to attach cushions to the seat.

5. **Install the Central Console:** Position the central console between the two swing seats. This unit includes a pull-out table with cup holders and a storage bag.



PRACTICAL DESIGN

Pull-out table
with 2 cup holders

Storage box with
ample storage space

Figure 4: The practical central console features a pull-out table with two cup holders and a storage box underneath for convenience.

6. **Attach Cushions:** Place the padded cushions onto the swing seats and secure them using the integrated straps.
7. **Final Tightening:** Once all components are in place, go back and fully tighten all bolts and nuts. Do not overtighten.

OPERATING INSTRUCTIONS

Using your Outsunny Porch Swing is straightforward:

- **Seating:** Gently sit on the padded seats. The swing is designed for two individuals.
- **Swinging Motion:** Initiate a gentle swinging motion with your feet. Avoid excessive force or sudden movements.
- **Canopy Adjustment:** To adjust the canopy angle, loosen the knobs on the side of the canopy frame, tilt to the desired position for shade, and then re-tighten the knobs.
- **Central Console:** Pull out the table from the central console when needed for drinks or small items. Push it back in for more space. The storage bag below can hold small outdoor essentials.

MAINTENANCE

Regular maintenance will extend the life and appearance of your swing:

- **Cleaning:**
 - **Frame:** Wipe the steel frame with a damp cloth and mild soap. Rinse thoroughly and dry completely to prevent rust. The frame has a powder-coated finish for durability.
 - **Fabric (Canopy & Cushions):** Clean polyester and Oxford fabric components with a soft brush, mild soap, and water. Allow to air dry completely. Do not use harsh chemicals or abrasive cleaners.
- **Fastener Checks:** Periodically inspect all bolts, nuts, and connections for tightness. Tighten any loose fasteners to ensure stability and safety.
- **Lubrication:** Apply a silicone-based lubricant to moving parts, such as the swing chains and canopy adjustment points, if any squeaking occurs.
- **Storage:** During off-season or prolonged periods of non-use, especially in harsh weather, it is recommended to store the swing indoors or cover it with a weather-resistant cover to protect it from the elements.

TROUBLESHOOTING

Here are solutions to common issues you might encounter:

Problem	Possible Cause	Solution
Swing feels unstable or wobbly.	Loose fasteners or uneven ground.	Ensure all bolts and nuts are securely tightened. Move the swing to a flat, level surface.
Squeaking noise during swinging.	Friction between metal parts.	Apply a silicone-based lubricant to the hanging chains and pivot points.
Canopy does not stay in position.	Canopy adjustment knobs are not tightened sufficiently.	Tighten the adjustment knobs firmly after setting the desired angle.
Cushions feel too thin or uncomfortable.	Personal preference or wear over time.	Consider adding additional padding or a throw pillow for enhanced comfort.

SPECIFICATIONS

Attribute	Detail
Brand	Outsunny
Model Number	CA84A-057V01BG0231
Colour	Beige
Product Dimensions (D x W x H)	112 cm x 175 cm x 165 cm (44.1"D x 68.9"W x 65"H)
Item Weight	22.23 kg (49 lbs)
Material	Polyester, Oxford Fabric, Steel
Frame Material	Metal
Finish Type	Powder Coated
Maximum Weight Recommendation	181.44 kg (400 lbs)

Attribute	Detail
Maximum Number of Compatible Seats	2
Seat Depth	48 cm (18.9")



Figure 5: Dimensional overview of the Outsunny 2 Person Porch Swing.

WARRANTY AND SUPPORT

This product is manufactured by Aosom Canada. For warranty claims, missing parts, or technical support, please contact Aosom Canada directly.

- **Manufacturer:** Aosom Canada
- **Place of Business:** Markham, Ontario, CA
- **Telephone:** 1-416-792-6088

- **Return Policy:** Refer to your retailer's return policy, typically 30 days from purchase for refund/replacement.

Please have your model number (CA84A-057V01BG0231) and purchase information ready when contacting support.