

[manuals.plus](#) /› [RAINBOW](#) /› [Genuine Rainbow E Series Vacuum Cleaner Instruction Manual](#)

## RAINBOW E Series

# Genuine Rainbow E Series Vacuum Cleaner Instruction Manual

## PRODUCT OVERVIEW

This Genuine Rainbow E Series vacuum cleaner features powerful suction and HEPA filtration to deeply clean carpets, bare floors, and upholstery. It utilizes water filtration technology for effective dust and allergen capture.

## SAFETY INFORMATION

- Always unplug the vacuum cleaner before performing any maintenance or cleaning.
- Do not operate the vacuum cleaner without the water basin properly filled and secured.
- Keep hands, feet, loose clothing, and hair away from moving parts.
- Do not pick up flammable or combustible materials, or anything that is burning or smoking.
- Ensure all connections and latches are secure before operation to prevent malfunction.

## SETUP AND ASSEMBLY

1. **Unpacking:** Carefully remove all components from the packaging. Verify all parts are present.
2. **Water Basin Preparation:** Fill the water basin with the recommended amount of clean water. Ensure the water level is between the minimum and maximum indicators.
3. **Attaching the Water Basin:** Securely attach the filled water basin to the main unit, ensuring all latches are properly engaged.
4. **Hose and Wand Assembly:** Connect the flexible hose to the main unit's suction inlet. Attach the desired cleaning wand or accessory to the other end of the hose.
5. **Power Nozzle Connection (if applicable):** If using the power nozzle, connect it to the wand and ensure the electrical connection is secure.



Image: The Rainbow E Series Vacuum Cleaner main unit connected to its hose and power nozzle, ready for use.

## OPERATING INSTRUCTIONS

---

- Power On:** Plug the power cord into a suitable electrical outlet. Press the power button on the main unit to start the vacuum.
- Vacuuming Surfaces:** Guide the cleaning attachment over the desired surface. For carpets, use the power nozzle. For hard floors, use appropriate attachments.
- Adjusting Suction:** The vacuum may have adjustable suction settings. Refer to the unit's controls for specific adjustments.
- Water Filtration:** The water in the basin will trap dirt and debris. The water will become dirty during operation, indicating effective cleaning.
- Power Off:** When finished, press the power button to turn off the vacuum, then unplug the power cord.



Image: A detailed view of the Rainbow E Series Vacuum Cleaner's main unit, highlighting its design and controls.

## MAINTENANCE AND CLEANING

- **Emptying the Water Basin:** After each use, carefully detach the water basin and empty the dirty water. Rinse the basin thoroughly with clean water.
- **Important: DO NOT store the vacuum cleaner with water in the basin.** Always empty and clean the basin after use to prevent odors and mold growth.
- **Cleaning the Separator:** The separator, located above the water basin, should also be cleaned regularly to maintain optimal performance. Refer to the diagram for removal and cleaning.
- **HEPA Filter Maintenance:** The HEPA filter is designed for long-term use. Check it periodically for excessive dust buildup and clean according to manufacturer guidelines.
- **Brush Roll Cleaning:** Periodically inspect the power nozzle's brush roll for tangled hair or debris.

Remove any obstructions to ensure effective cleaning.

- **Exterior Cleaning:** Wipe down the exterior of the vacuum cleaner with a damp cloth. Do not use harsh chemicals.



Image: Top-down view of the transparent water basin and internal separator component of the Rainbow E Series Vacuum Cleaner.



Image: Bottom-up view of the transparent water basin and internal separator component of the Rainbow E Series Vacuum Cleaner.

## TROUBLESHOOTING

- **No Power:** Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker.
- **Loss of Suction:**
  - Verify the water basin is properly filled and securely attached.
  - Check for blockages in the hose, wand, or attachments.
  - Ensure all connections and latches are secure. A loose connection can significantly reduce suction.
  - Clean the separator and HEPA filter if they are clogged with debris.
- **Unusual Noises:** Turn off and unplug the vacuum. Inspect the brush roll and internal components for any foreign objects.
- **Water Leakage:** Ensure the water basin is correctly seated and latched. Check for cracks or damage to the basin.

## PRODUCT SPECIFICATIONS

Feature	Detail
---------	--------

Brand	RAINBOW
Model Name	E Series
Product Type	Vacuum Cleaner
Special Feature	Bagless, HEPA Filtration
Filter Type	Cloth
Power Source	Corded Electric
Maximum Suction	80 Feet
Recommended Surface	Hard Floor, Carpet, Upholstery
Included Components	Brush, Various Attachments
Item Weight	36.5 pounds
Dimensions	29.5 x 18 x 17 inches (Package)

## INCLUDED ATTACHMENTS

---

The Rainbow E Series Vacuum Cleaner comes with a variety of attachments designed for different cleaning tasks:

- **Power Nozzle:** For deep cleaning carpets and rugs.
- **Upholstery Tool:** Ideal for cleaning furniture and delicate fabrics.
- **Crevice Tool:** For reaching tight spaces and corners.
- **Dusting Brush:** For cleaning delicate surfaces and removing dust.
- **Floor Brush:** For effective cleaning of hard floors.
- **Hose:** Flexible hose for extended reach and attachment use.

## WARRANTY AND SUPPORT

---

This product is offered as a renewed item. It includes a 90-day refund/replacement return policy. For any support or warranty claims, please contact the seller, GreatVacs Warehouse, directly.

Seller: [GreatVacs Warehouse](#)