

[Manuals.plus](#) /

> [AIDITIYMI](#) /

> AIDITIYMI RC-056 Replacement Remote Control User Manual for Coby TV

## AIDITIYMI RC-056

# AIDITIYMI RC-056 Replacement Remote Control User Manual

Model: RC-056

## 1. INTRODUCTION

---

This manual provides comprehensive instructions for the setup, operation, and maintenance of your AIDITIYMI RC-056 replacement remote control. This remote is designed to function with various Coby TV models, offering a direct replacement without the need for programming.

### Package Contents:

- 1 x AIDITIYMI RC-056 IR Remote Control

*Note: Batteries and additional instructions are not included in the package.*

## 2. SETUP AND BATTERY INSTALLATION

---

To begin using your RC-056 remote control, you must first install the batteries.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to open.
3. Insert two (2) new 1.5V AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

Once batteries are installed, the remote control is ready for immediate use with compatible Coby TV models. No programming is required.



Figure 2.1: Back of the remote control with the battery cover removed, showing the battery insertion area.

### 3. OPERATING THE REMOTE CONTROL

---

The RC-056 remote control provides full functionality for your compatible Coby TV. Below is a general overview of the buttons and their functions.



Figure 3.1: Front view of the RC-056 remote control.

#### Key Functions:

- **Power (●):** Turns the TV/DVD player on or off.
- **Open/Close:** Opens or closes the DVD tray.

- **Number Buttons (0-9):** Selects channels directly or enters numerical values.
- **TV/DVD:** Switches between TV and DVD modes.
- **Navigation Pad (Up, Down, Left, Right, OK):** Navigates menus and confirms selections.
- **Volume (+/-):** Adjusts the volume level.
- **Channel (CH +/-):** Changes TV channels.
- **Mute:** Mutes or unmutes the audio.
- **Source:** Selects input sources (e.g., HDMI, AV).
- **Menu:** Accesses the main menu of the TV or DVD player.
- **Exit:** Exits the current menu or function.
- **Sleep:** Sets the sleep timer.
- **DVD Setup:** Accesses DVD player settings.
- **Return:** Returns to the previous screen or menu.
- **Playback Controls (Play, Pause, Stop, Fast Forward, Rewind, Skip):** Controls DVD playback.
- **Info:** Displays information about the current program or media.
- **Subtitle:** Toggles subtitles on/off or selects subtitle tracks.
- **Sound/MTS:** Adjusts sound modes or Multi-channel Television Sound.
- **CC:** Activates or deactivates Closed Captions.
- **Program:** Accesses program settings.
- **Guide:** Displays the electronic program guide (if available).
- **Title:** Accesses the DVD title menu.
- **Angle:** Changes camera angles during DVD playback (if available).
- **Zoom:** Zooms in or out on the screen.
- **Repeat:** Repeats a chapter, title, or track during DVD playback.

## 4. MAINTENANCE

---

Proper care will extend the life of your remote control.

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or aerosols.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and damage.
- **Environment:** Avoid exposing the remote control to extreme temperatures, direct sunlight, moisture, or dust.

## 5. TROUBLESHOOTING

---

If you experience issues with your remote control, refer to the following common solutions:

Problem	Solution
Remote control is not working.	<ul style="list-style-type: none"> <li>◦ Ensure batteries are inserted correctly with the correct polarity (+/-).</li> <li>◦ Replace old batteries with new 1.5V AAA alkaline batteries.</li> <li>◦ Check for any obstructions between the remote control and the TV's IR sensor.</li> <li>◦ Verify that the remote control is compatible with your specific Coby TV model.</li> </ul>

Problem	Solution
Some buttons are not responding.	<ul style="list-style-type: none"> <li>◦ Clean the remote control, especially around the unresponsive buttons, to remove any dirt or debris.</li> <li>◦ Ensure the remote is in the correct mode (TV or DVD) for the desired function.</li> </ul>
Remote control range is reduced.	<ul style="list-style-type: none"> <li>◦ Replace batteries with new ones.</li> <li>◦ Ensure there are no strong light sources (e.g., direct sunlight, fluorescent lights) interfering with the IR signal.</li> </ul>

## 6. SPECIFICATIONS

---

- **Model:** RC-056
- **Brand:** AIDITIYMI
- **Compatible Devices:** Coby Television (TFT LCD / LED Widescreen)
- **Power Source:** 2 x 1.5V AAA Alkaline Batteries (not included)
- **Dimensions:** Approximately 6 x 2 x 0.6 inches (15.24 x 5.08 x 1.52 cm)
- **Weight:** Approximately 2 ounces (56.7 grams) (without batteries)
- **Color:** Black
- **Special Feature:** Ergonomic design

## 7. COMPATIBLE COBY TV MODELS

---

This AIDITIYMI RC-056 replacement remote control is compatible with the following Coby TV models:

- LEDVD1596
- TFDVD3295
- LEDVD1996
- TFDVD2695
- LEDVD2396
- TFDVD1995
- TFDVD2395
- TFDVD2495
- TFDVD1595
- TFDVD2295
- LEDVD1596S1
- LEDVD1996S1
- TFDVD2295S2
- TFDVD1995S2
- TFDVD1595S3

*If your Coby TV model is not listed, please verify compatibility before use. Contact customer support if you are unsure.*

## 8. WARRANTY AND SUPPORT

---

This product is a replacement remote control. For specific warranty information, please refer to the retailer or manufacturer's policy at the time of purchase. For technical support or inquiries regarding compatibility, please contact the seller directly.

**Contact Information:** Refer to your purchase documentation or the seller's platform for direct support channels.