

## RL LIVE YOUR LIGHT R50711187

# RL LIVE YOUR LIGHT R50711187 LED Water Column Instruction Manual

Model: R50711187

## 1. INTRODUCTION AND PRODUCT OVERVIEW

The RL LIVE YOUR LIGHT R50711187 LED Water Column is a decorative lighting fixture designed to create a calming and visually engaging atmosphere. This water column features an integrated energy-saving 2.4 watt RGB LED with a color-changing function, providing dynamic illumination. It includes three decorative fish and two decorative balls that move within the bubbling water, enhancing its visual appeal. The column is constructed from durable plastic with a titanium-colored finish.

For optimal bubble results, it is recommended to use distilled water.



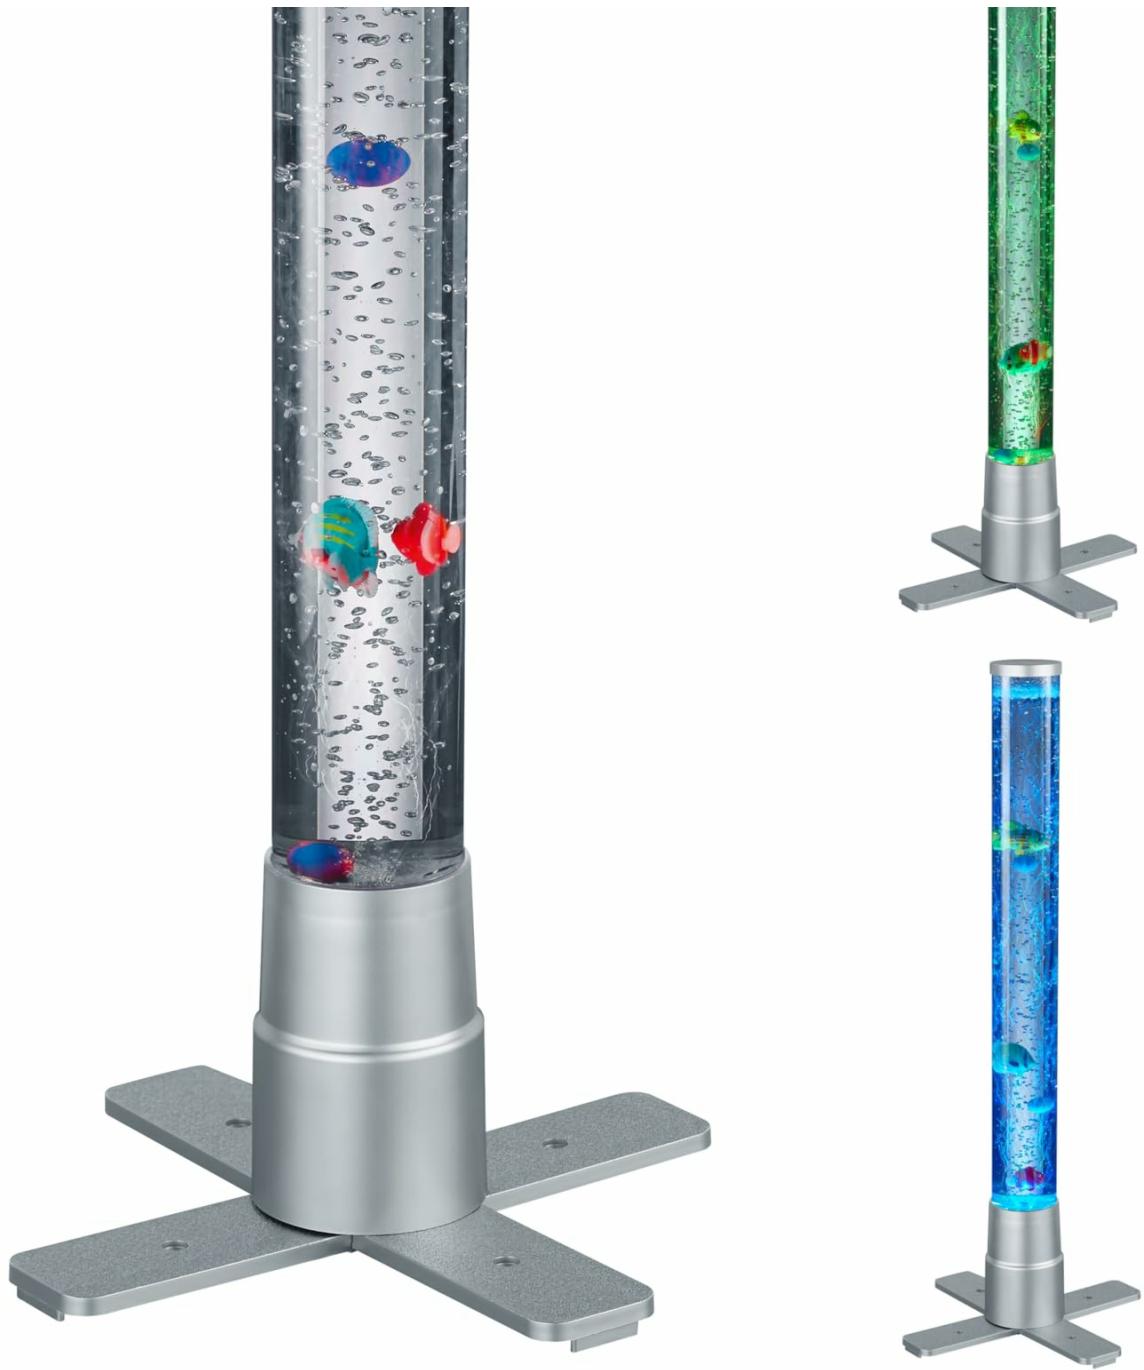


Image 1.1: The RL LIVE YOUR LIGHT R50711187 LED Water Column in a living room environment, showcasing its decorative effect.

## 2. SAFETY INSTRUCTIONS

---

- Read all instructions carefully before use.
- Keep the appliance away from children and pets.
- Ensure the power cable is not damaged and is placed where it cannot be tripped over.
- Only use the provided power adapter.
- Do not immerse the electrical components in water.
- Unplug the unit from the power outlet before cleaning or maintenance.
- Do not operate the unit if it is damaged. Contact customer support.
- Place the water column on a stable, level surface to prevent tipping.
- Avoid placing the unit near heat sources or in direct sunlight.

### 3. PACKAGE CONTENTS

---


Please check that all components are present in the package:

- 1x LED Water Column Unit
- 1x Base (for stability)
- 1x Power Cable with Adapter
- 3x Decorative Fish
- 2x Decorative Balls

### 4. SETUP INSTRUCTIONS

---

1. **Unpack:** Carefully remove all components from the packaging.
2. **Assemble the Base:** Attach the water column to its base. Ensure it is securely fastened and stable.
3. **Fill with Water:** Open the top cap of the water column. Slowly fill the column with **distilled water** up to the indicated fill line (approximately 1-2 cm from the top edge). Using distilled water helps prevent mineral buildup and ensures optimal bubble performance.
4. **Add Decorative Elements:** Gently place the three decorative fish and two decorative balls into the water column.
5. **Secure the Cap:** Close the top cap securely to prevent water spillage.
6. **Position the Unit:** Place the assembled water column on a flat, stable, and dry surface.
7. **Connect Power:** Insert the power cable into the designated port on the water column, then plug the adapter into a standard electrical outlet.

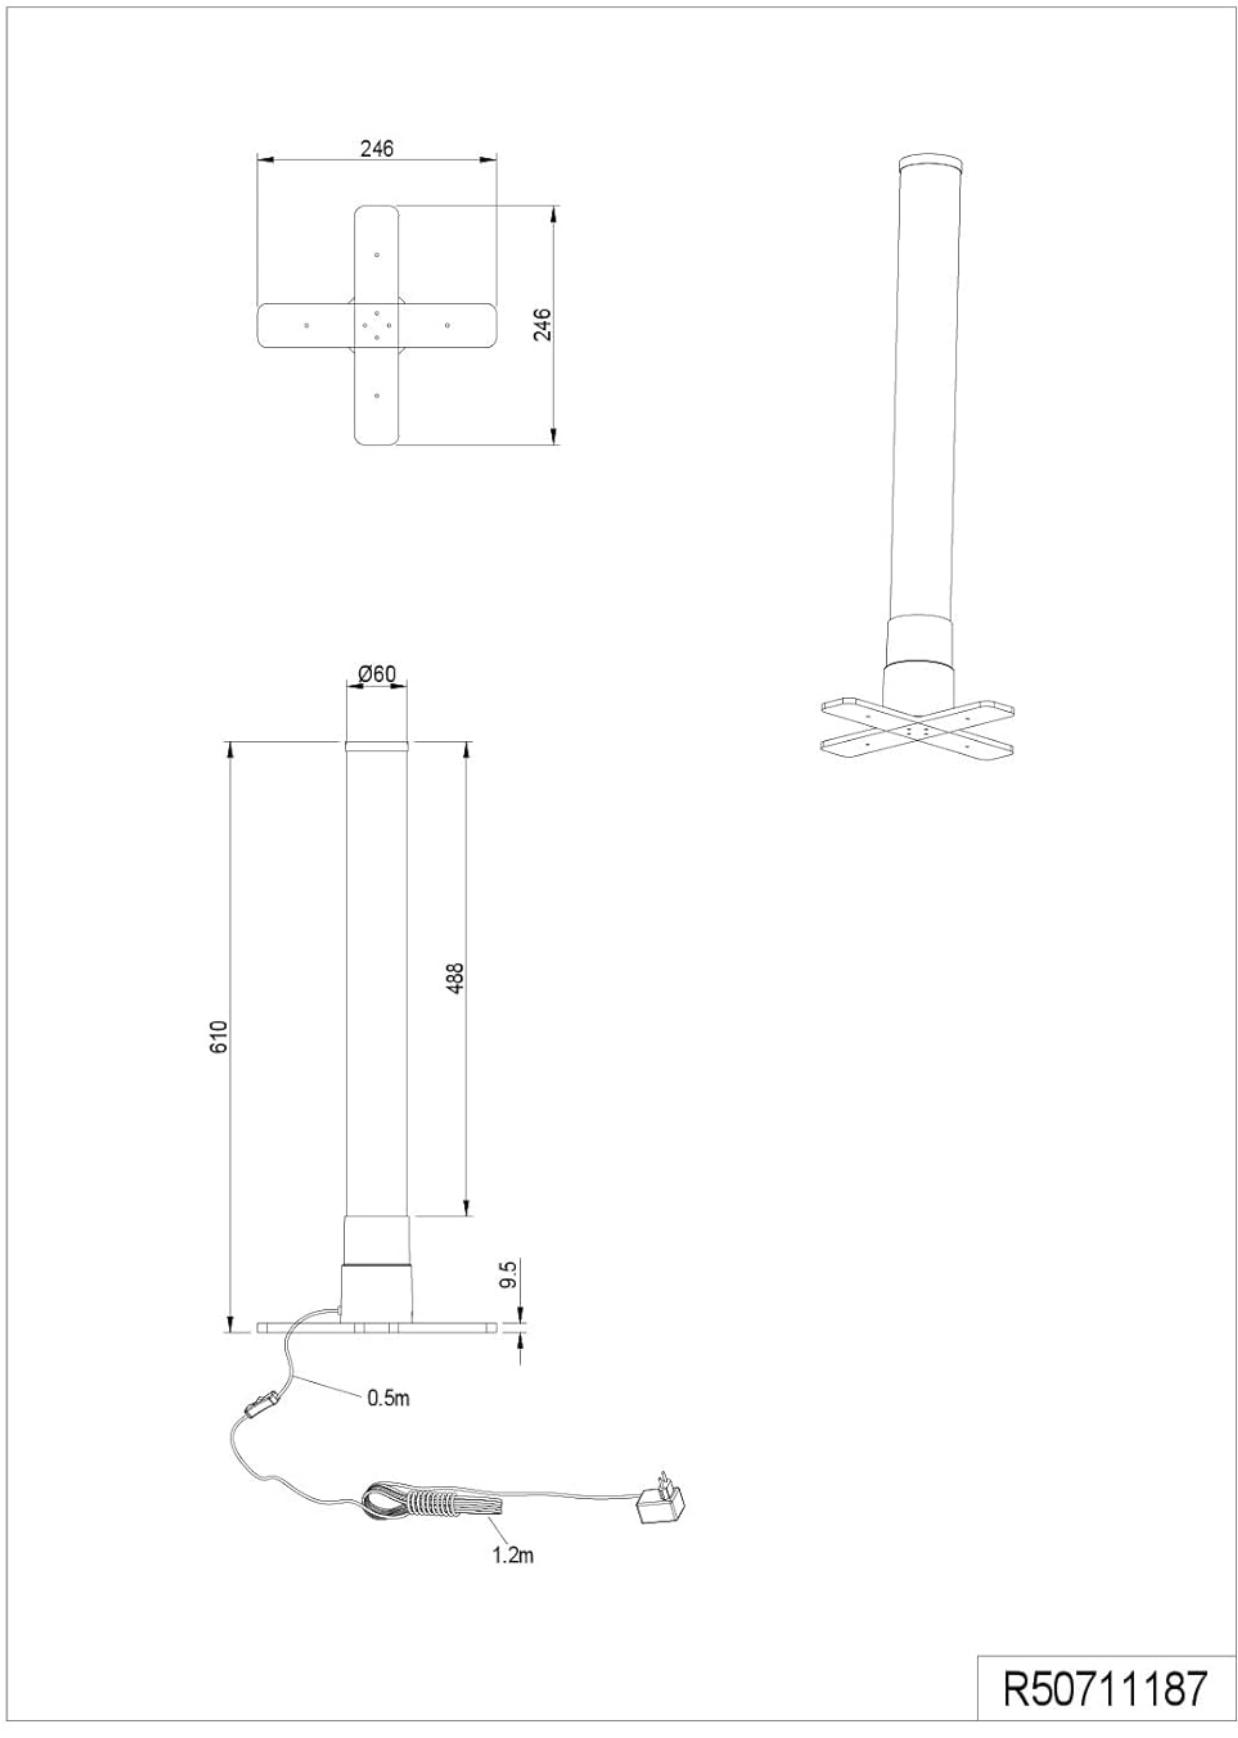

R50711187

Image 4.1: Technical diagram showing the dimensions (610mm height, 246x246mm base) and power connection of the water column.

## 5. OPERATING INSTRUCTIONS

- 
1. **Power On/Off:** The water column is equipped with a touch button switch. Lightly touch the designated area on the unit to turn it on or off.
  2. **Color Changing Function:** The integrated RGB LED will automatically cycle through various colors, creating a dynamic light display. There are no manual controls for specific colors; the unit operates in an automatic color-changing mode.
  3. **Bubble and Movement:** Once powered on, the internal pump will activate, creating bubbles that cause the decorative fish and balls to move and float within the column.

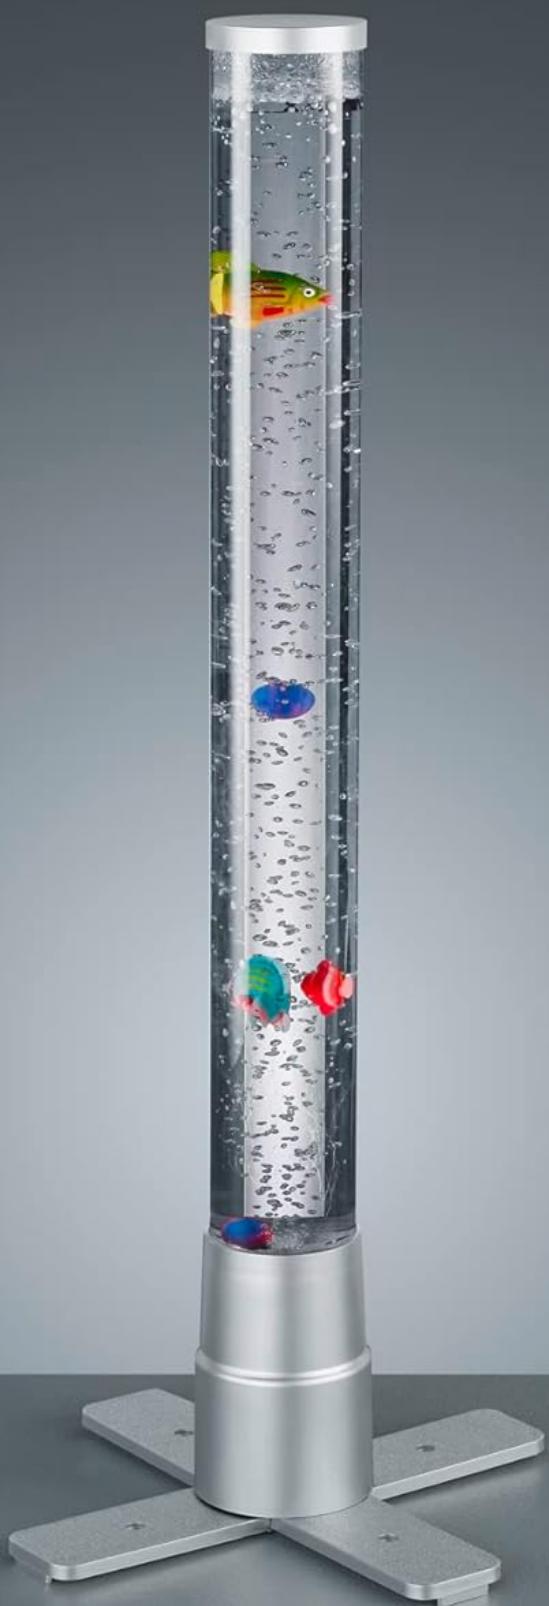


Image 5.1: Water column displaying clear bubbles and fish.



Image 5.2: Water column illuminated with a pink hue.



Image 5.3: Water column illuminated with a blue hue.



## 6. MAINTENANCE

---

- Cleaning:** Unplug the unit before cleaning. Wipe the exterior of the water column with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Water Replacement:** To maintain optimal clarity and bubble performance, it is recommended to replace the distilled water every few months, or sooner if the water appears cloudy.
- Dust Removal:** Periodically dust the unit to prevent accumulation, especially around the base and top cap.

## 7. TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Unit does not turn on.	No power supply; loose connection.	Ensure the power cable is securely plugged into both the unit and the wall outlet. Check if the outlet is functional.
No bubbles or fish movement.	Insufficient water level; pump malfunction.	Check the water level and refill with distilled water if necessary. If the problem persists, the pump may require service.
Unit is making a humming noise.	Vibration against the surface.	Place a soft mat or a book underneath the base of the column to dampen vibrations and reduce noise.
Decorative fish are not swimming freely.	Water quality issues; fish stuck.	Ensure distilled water is used. Gently shake the column to dislodge any stuck fish. Note that some fish may naturally float or sink more than others.

## 8. SPECIFICATIONS

---

Model Number	R50711187
Brand	RL LIVE YOUR LIGHT
Dimensions (H x Base)	61 cm (Height) x 24.6 cm x 24.6 cm (Base)
Material	Plastic
Lamp Type	LED (RGB, Color Changing)
LED Power	2.4 Watts
Switch Type	Touch Button
Included Components	Power Cable, Decorative Fish, Decorative Balls

## 9. WARRANTY AND SUPPORT

---

This product comes with a standard manufacturer's warranty. Please refer to your purchase documentation for specific warranty terms and conditions. For technical support, replacement parts, or further assistance, please contact your retailer or the manufacturer directly. Keep your proof of purchase for warranty claims.

**Manufacturer:** RL LIVE YOUR LIGHT

© 2026 RL LIVE YOUR LIGHT. All rights reserved.