

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [BOSCH](#) /
- › [Bosch Cordless Lawnmower EasyRotak 36-550 Instruction Manual](#)

## BOSCH EasyRotak 36-550

# Bosch Cordless Lawnmower EasyRotak 36-550

Instruction Manual

[Safety Information](#)   [Setup](#)   [Operating](#)   [Maintenance & Support](#)   [Troubleshooting](#)   [Specifications](#)   [Warranty](#)

## 1. IMPORTANT SAFETY INFORMATION

---

Read all safety warnings, instructions, illustrations, and specifications provided with this power tool. Failure to follow all instructions listed below may result in electric shock, fire, and/or serious injury.

- Always wear appropriate personal protective equipment (PPE) such as safety glasses, sturdy footwear, and hearing protection when operating the lawnmower.
- Ensure the work area is clear of debris, stones, and other objects that could be thrown by the blades.
- Do not operate the lawnmower in wet conditions or on steep slopes where you cannot maintain stable footing.
- Keep hands and feet away from the cutting deck while the motor is running.
- Disconnect the battery pack before cleaning, adjusting, or performing any maintenance on the lawnmower.
- Store the lawnmower in a dry, secure place, out of reach of children.

For detailed safety guidelines, refer to the complete safety manual provided with your product.

## 2. SETUP AND ASSEMBLY

---

Before first use, the Bosch EasyRotak 36-550 requires minimal assembly. Follow these steps carefully:

### 2.1 Handle Assembly

Unfold the handles and secure them in place using the quick-release levers or knobs provided. Ensure they are firmly locked to prevent movement during operation.



*Figure 2.1: Ergonomic ErgoFlex handles for comfortable operation.*

## **2.2 Grass Box Assembly**

Assemble the two halves of the grass box according to the instructions in the separate assembly guide. Once assembled, attach the grass box to the rear of the lawnmower, ensuring it clicks securely into position.

## **2.3 Battery Installation and Charging**

The EasyRotak 36-550 operates on a 36V battery (not included with this model). Ensure you use a compatible Bosch 36V POWER FOR ALL battery.

1. Charge the battery fully before first use. The charging time for a 4 Ah battery is approximately 125 minutes (100%).
2. Open the battery compartment cover, typically located on the top of the lawnmower.
3. Slide the charged battery pack into the compartment until it clicks into place.
4. Close the battery compartment cover securely.



Figure 2.2: Battery compartment with indicator. Ensure the battery is fully inserted.

POWER FOR  
**ALL**

**36V**



Figure 2.3: The Bosch 36V POWER FOR ALL battery system, highlighting compatibility.

### 3. OPERATING INSTRUCTIONS

---

#### 3.1 Starting and Stopping the Lawnmower

- To start: Press and hold the safety button, then pull the bail lever towards the handle. The motor will start.
- To stop: Release the bail lever. The motor will stop immediately.

#### 3.2 Adjusting Cutting Height

The EasyRotak 36-550 offers 5 height-of-cut settings, ranging from 25 mm to 70 mm. Adjust the cutting height using the lever located on the side of the lawnmower.

1. Ensure the lawnmower is switched off and the battery is removed before adjusting the height.
2. Pull the height adjustment lever outwards and move it to the desired position.
3. Release the lever, ensuring it locks firmly into one of the 5 settings.



Figure 3.1: Cutting height adjustment lever with 5 settings.

### 3.3 Mowing Techniques

- For best results, mow dry grass. Avoid cutting wet grass as it can clog the mower and lead to an uneven cut.
- Overlap each pass slightly to ensure complete coverage.
- The integrated **GrassCombs** allow for clean cutting along edges, driveways, fences, and walls, reducing the need for additional trimming.



*Figure 3.2: Lawnmower utilizing GrassCombs for edge cutting.*



*Figure 3.3: Proper mowing technique for an even lawn.*

### **3.4 Emptying the Grass Box**

Monitor the grass box fill level. When full, switch off the lawnmower, remove the battery, and detach the grass box. Empty the clippings into a suitable receptacle. Reattach the grass box securely before resuming operation.

## **4. MAINTENANCE**

---

Regular maintenance ensures the longevity and optimal performance of your Bosch EasyRotak 36-550.

### **4.1 Cleaning**

- After each use, disconnect the battery and clean the underside of the cutting deck to remove grass clippings and debris. Use a brush or a blunt scraper.
- Wipe down the exterior of the lawnmower with a damp cloth. Do not use high-pressure washers or immerse the unit in water.
- Ensure ventilation openings are clear of obstructions.

## **4.2 Blade Care**

A sharp blade is crucial for a clean cut and healthy lawn. Inspect the blade regularly for signs of wear, damage, or dullness. If necessary, have the blade sharpened or replaced by a qualified service technician. Always wear heavy-duty gloves when handling the blade.

## **4.3 Storage**

For compact storage, the handles can be collapsed, and the grass bag folded flat and placed on top of the mower. Store the lawnmower in a dry, frost-free environment, away from direct sunlight and out of reach of children.



*Figure 4.1: The Bosch EasyRotak 36-550, designed for easy storage.*

## **5. TROUBLESHOOTING**

---

Before attempting any troubleshooting, ensure the lawnmower is switched off and the battery is removed.

## Common Issues and Solutions

Problem	Possible Cause	Solution
Lawnmower does not start.	Battery not charged or not inserted correctly. Safety button/bail lever not engaged.	Charge battery fully. Ensure battery is clicked into place. Engage safety button then pull bail lever.
Uneven cutting.	Dull or damaged blade. Cutting height set too low for grass type.	Inspect and sharpen/replace blade. Adjust cutting height to a higher setting.
Excessive vibration.	Damaged or unbalanced blade. Debris caught in cutting deck.	Inspect blade for damage; replace if necessary. Clean cutting deck thoroughly.
Motor stops during operation.	Overload (e.g., cutting very thick/wet grass). Battery low.	Reduce load by raising cutting height or mowing smaller sections. Recharge battery.

If the problem persists after attempting these solutions, contact an authorized Bosch service center.

## 6. TECHNICAL SPECIFICATIONS

---

The following are the key technical specifications for the Bosch Cordless Lawnmower EasyRotak 36-550:

- **Model:** EasyRotak 36-550
- **Item Model Number:** 06008B9B01
- **Power Source:** Battery Powered
- **Battery Voltage:** 36V
- **Recommended Battery Capacity:** 4 Ah (Battery not included)
- **Battery Charging Time (100% for 4 Ah):** Approximately 125 minutes
- **Motor Type:** Brushless Motor
- **Cutting Width:** 37 cm
- **Height of Cut Settings:** 5 positions (25 mm - 70 mm)
- **Grass Box Capacity:** 40 liters
- **Recommended Lawn Area:** Up to 550 m<sup>2</sup>
- **Product Dimensions:** 71 x 42 x 38.5 cm
- **Item Weight:** 11.7 kg
- **Material:** Plastic, Metal



Figure 6.1: The 36V Long Life Brushless Motor provides superior performance.



*Figure 6.2: Brushless Motor technology for enhanced durability and efficiency.*

## 7. WARRANTY AND SUPPORT

---

Bosch products are manufactured to the highest quality standards. This product is covered by a manufacturer's warranty, details of which can be found in the separate warranty document included with your purchase or on the official Bosch website.

For technical assistance, spare parts, or to arrange a service, please contact your local authorized Bosch service center. When contacting support, please have your product model number (EasyRotak 36-550) and serial number (if applicable) ready.

You can find more information and register your product at [www.bosch-garden.com](http://www.bosch-garden.com).

