

[Manuals.plus](#) /

› [Seneca River Trading](#) /

› Instruction Manual: 4 Qt Black Round Stoneware

Seneca River Trading 129995-000-000

Instruction Manual: 4 Qt Black Round Stoneware

Brand: Seneca River Trading | Model: 129995-000-000

INTRODUCTION

This instruction manual provides essential information for the proper use and care of your new 4-quart black round stoneware insert. Designed specifically for compatible Crock-Pot slow cooker models, this stoneware is a replacement or spare part to ensure continued functionality of your appliance. Please read this manual thoroughly before first use.

PRODUCT OVERVIEW

The 4-quart black round stoneware is a durable ceramic insert designed to fit specific slow cooker models. Its non-porous surface is ideal for slow cooking, distributing heat evenly and retaining moisture for tender results. The stoneware features integrated handles for easy lifting and placement within the slow cooker base.



Image: Top view of the stoneware insert, highlighting its capacity and design.



Image: Bottom view of the stoneware insert, illustrating its stable base.

COMPATIBILITY

IMPORTANT: This 4-quart stoneware insert is specifically designed to fit ONLY Crock-Pot slow cooker models 3040-BC and SCV401-T. It will not fit other models or brands. Please verify your slow cooker model number before attempting to use this stoneware.

Using this stoneware with an incompatible slow cooker may result in improper fit, inefficient cooking, or damage to either the stoneware or the slow cooker unit. Returns for incompatibility due to incorrect model purchase may not be accepted.



Image: Stoneware with a measuring tape, demonstrating its 4-quart capacity and round shape for compatibility verification.

SETUP

1. **Unpack:** Carefully remove the stoneware from its packaging.
2. **Inspect:** Check the stoneware for any signs of damage, cracks, or chips. Do not use if damaged.
3. **Initial Cleaning:** Before first use, wash the stoneware thoroughly with warm, soapy water. Rinse completely and dry.
4. **Placement:** Ensure your slow cooker base is clean and dry. Carefully place the stoneware insert into the heating base of your compatible Crock-Pot slow cooker.

OPERATING INSTRUCTIONS

This stoneware insert functions as the cooking vessel within your compatible Crock-Pot slow cooker. It is not designed for direct stovetop, oven, or microwave use unless explicitly stated by the slow cooker manufacturer for the entire unit.

1. **Prepare Food:** Place your ingredients directly into the stoneware insert.
2. **Cover:** Place the lid (from your slow cooker) securely onto the stoneware.

3. **Cook:** Follow the operating instructions for your specific Crock-Pot slow cooker model to set the desired cooking time and temperature.
4. **Serve:** Once cooking is complete, carefully remove the lid. Use oven mitts or heat-resistant gloves when handling the hot stoneware.

Always refer to your Crock-Pot slow cooker's original instruction manual for detailed cooking guidelines and safety precautions.

MAINTENANCE AND CARE

- Cleaning:** After each use, allow the stoneware to cool completely before cleaning. Wash with warm, soapy water and a non-abrasive sponge or cloth. For stubborn food residue, soak the stoneware in warm, soapy water before cleaning.
- Dishwasher Safety:** **This stoneware is NOT dishwasher safe.** Hand washing is required to prevent damage and preserve the integrity of the material.
- Avoid Thermal Shock:** Do not expose the hot stoneware to cold water or cold surfaces immediately after cooking, as this can cause cracking. Allow it to cool gradually.
- Storage:** Store the stoneware in a dry place, ideally within its slow cooker base or in a cabinet where it is protected from impacts.

TROUBLESHOOTING

- Stoneware does not fit:** Double-check your slow cooker model number. This stoneware is only compatible with Crock-Pot models 3040-BC and SCV401-T. If your model is different, this stoneware will not fit.
- Food sticking:** Ensure you are using appropriate cooking sprays or oils as per your recipe. Overcooking can also lead to food sticking.
- Cracks or chips:** If the stoneware develops cracks or chips, discontinue use immediately. Damaged stoneware can pose a safety risk and affect cooking performance.

SPECIFICATIONS

Feature	Detail
Brand	Seneca River Trading
Model Number	129995-000-000
Color	Black
Material	Stoneware
Capacity	4 Quarts
Shape	Round
Item Weight	5.18 Pounds
Package Dimensions	12 x 12 x 8 inches
Dishwasher Safe	No (Hand wash only)

WARRANTY AND SUPPORT

This product is a replacement part. For specific warranty information, please refer to the original slow cooker appliance's warranty documentation. For product support or inquiries regarding this stoneware insert, please contact Seneca River Trading directly through their official channels or the retailer from whom the product was purchased. Always retain your proof of purchase for any warranty claims or support requests.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question