

[Manuals.plus](#) /

› [Baby Alive](#) /

› Baby Alive Baby Gotta Bounce Doll Instruction Manual

Baby Alive E9426

Baby Alive Baby Gotta Bounce Doll Instruction Manual

Model: E9426

INTRODUCTION

The Baby Alive Baby Gotta Bounce doll is an interactive toy designed to provide an engaging play experience. This doll features realistic actions such as jumping, laughing, drinking water, and wetting its diaper. This manual provides essential information for setup, operation, maintenance, and safety to ensure proper use and enjoyment of the doll.

SAFETY INFORMATION

- **Age Recommendation:** Suitable for children aged 3 years and older.
- **Small Parts Warning:** This product may contain small parts which could pose a choking hazard. Adult supervision is recommended.
- **Packaging Disposal:** An adult must remove and safely dispose of all packaging materials before giving the toy to a child.

PACKAGE CONTENTS

Please ensure all the following items are present in the package:

- 1 x Baby Alive Baby Gotta Bounce Doll
- 1 x Removable Outfit (bunny-decorated overalls)
- 1 x Feeding Bottle
- 1 x Diaper
- Instruction Manual (this document)

SETUP

1. Battery Installation

1. Locate the battery compartment on the doll's back or bottom.
2. Using a Phillips head screwdriver (not included), open the battery compartment cover.
3. Insert 3 x AA (1.5V) alkaline batteries, ensuring correct polarity (+/-). Demonstration batteries are included, but new batteries are recommended for optimal performance.
4. Replace the battery compartment cover and tighten the screw.

2. Initial Preparation

- Remove the doll and all accessories from the packaging.
- Ensure all plastic ties, bands, and other packing materials are removed and discarded by an adult.
- Dress the doll in its removable bunny-decorated outfit.

OPERATING INSTRUCTIONS

1. Activating Jumping and Laughing

The Baby Gotta Bounce doll is designed to react to interaction. To make the doll jump and laugh:

- Gently press the doll's wrist.
- Wave your hand in front of the doll.
- Move in front of the doll.

The doll features over 25 different laughs and adorable sound effects.

2. Interactive Jumping

Children can jump along with the doll. Hold the doll's hands and press her wrist to initiate synchronized jumping movements.

3. Feeding the Doll

The doll can drink water from its included bottle. Fill the bottle with clean tap water and place the nipple into the doll's mouth. Gently squeeze the bottle to feed the doll. The doll will then wet its diaper.



Image showing a child feeding the Baby Alive Baby Gotta Bounce doll with a bottle.

4. Diaper Changing

After feeding, the doll will wet its diaper. To change the diaper:

1. Remove the wet diaper from the doll.
2. Dispose of the wet diaper responsibly.
3. Place a new, dry diaper on the doll. Additional diapers are sold separately.



Image showing a child changing the diaper of the Baby Alive Baby Gotta Bounce doll.

MAINTENANCE

1. Cleaning the Doll

- Wipe the doll's surface with a damp cloth. Do not immerse the doll in water, as this may damage the electronic components.
- The doll's outfit can be removed and hand-washed with mild soap and water, then air-dried.
- The diaper material (soft wood pulp) is for single use and cannot be washed.

2. Storage

When not in use, store the doll in a clean, dry place away from direct sunlight and extreme temperatures. Remove batteries if the doll will not be used for an extended period to prevent leakage.

TROUBLESHOOTING

- **Doll is not jumping or making sounds:**
 - Ensure batteries are correctly installed with proper polarity.

- Replace old batteries with new AA alkaline batteries.
 - Check if the doll's power switch (if present) is in the "ON" position.
- **Doll is leaking water:**
 - Ensure the diaper is properly fitted and secured.
 - Use only clean tap water for feeding.

SPECIFICATIONS

Brand	Baby Alive
Model Name	BABY GOTTA BOUNCE BUNNY
Model Number	E9426 (5010993723065)
Material	Plastic, Vinyl
Color	Brown (referring to hair color)
Dimensions (L x W x H)	22.9 x 11.4 x 35.6 cm (9 x 4.5 x 14 inches)
Item Weight	1.74 Pounds (approx. 0.79 kg)
Batteries Required	3 x AA (1.5V) alkaline batteries (demonstration batteries included)
Special Features	Sound, Interactive Jumping, Drinking, Wetting
Educational Objective	Develop imagination, imitation, and responsibility

WARRANTY AND SUPPORT

Specific warranty information is not provided in this manual. For details regarding warranty coverage, product support, or to purchase replacement parts and accessories (such as additional diapers), please refer to the manufacturer's official website or contact their customer service department. Keep your proof of purchase for any warranty claims.

Manufacturer: Hasbro