

GAMI 1E57016

GAMI AMSTERDAM Industrial Style TV Stand User Manual

Model: 1E57016 | Brand: GAMI

INTRODUCTION

Thank you for choosing the GAMI AMSTERDAM Industrial Style TV Stand. This manual provides essential information for the safe and correct assembly, operation, and maintenance of your new furniture. Please read these instructions carefully before beginning assembly and retain them for future reference.

The AMSTERDAM TV Stand features a robust industrial design with a black oak decor finish. It is designed to accommodate various media devices and accessories, offering practical storage solutions with adjustable shelves and integrated cable management.



Figure 1: GAMI AMSTERDAM TV Stand in a living room environment.

SETUP AND ASSEMBLY

Assembly of the GAMI AMSTERDAM TV Stand is required. We recommend two people for assembly to ensure safety and ease of construction. Please ensure you have sufficient space and all components are present before starting.

Required Tools (Not Included):

- Phillips head screwdriver
- Hammer (for dowels)
- Measuring tape (optional)

Assembly Steps:

1. **Unpack Components:** Carefully unpack all parts and hardware. Lay them out on a clean, soft surface (e.g., a blanket or cardboard) to prevent scratches. Verify all parts are present against the included parts list.
2. **Assemble Side Panels:** Attach the side panels to the base and top panels using the provided dowels and cam locks. Ensure all connections are secure.

3. **Install Back Panel:** Slide or fasten the back panel into the designated grooves or attach it with small nails/screws. Ensure the cable management holes are correctly oriented.
4. **Insert Adjustable Shelves:** Place the shelf pins into the desired holes within the compartments. Carefully slide the adjustable shelves onto the pins. The stand features 3 adjustable shelves, allowing for 6 compartments in total.
5. **Attach Doors:** Mount the hinges to the doors and then attach the doors to the main frame. Adjust the hinges as necessary to ensure proper door alignment and smooth opening/closing.
6. **Attach Legs:** Securely fasten the four legs to the bottom of the TV stand using the provided screws.
7. **Final Check:** Once assembled, gently move the stand to its desired location. Ensure all screws and fasteners are tightened. Do not overtighten.



Figure 2: View of the TV stand with one door open, highlighting the adjustable shelf.



Figure 3: View of the TV stand with the other door open, showing the internal compartment and a cable management hole.

OPERATING INSTRUCTIONS

The GAMI AMSTERDAM TV Stand is designed for practical use and organization of your entertainment setup.

Adjustable Shelves:

The stand features three adjustable shelves within its six compartments. To adjust a shelf, carefully remove any items, lift the shelf, and reposition the shelf pins into the desired holes. Ensure the shelf is level and

securely seated on all four pins before placing items back.

Cable Management:

Utilize the two integrated cable management holes located on the back panel to route and organize your device cables. This helps to keep cables tidy and prevents tangling, contributing to a cleaner aesthetic.

Weight Capacity:

Ensure that the total weight placed on the TV stand, including the television and all media devices, does not exceed its maximum weight capacity. Distribute weight evenly across the top surface and shelves to maintain stability.



Figure 4: GAMI AMSTERDAM TV Stand with doors closed.

MAINTENANCE

Proper care will extend the life and appearance of your TV stand.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid using abrasive cleaners, harsh chemicals, or solvents, as these can damage the finish.
- **Dusting:** Regularly dust with a dry, soft cloth.
- **Fasteners:** Periodically check all screws and fasteners to ensure they remain tight. Retighten if necessary, but do not overtighten.
- **Avoid Moisture:** Protect the stand from excessive moisture and direct sunlight to prevent warping or fading.

TROUBLESHOOTING

If you encounter any issues with your TV stand, please refer to the following common solutions:

- **Stand is Wobbly:** Ensure the stand is on a level surface. Check all assembly screws and fasteners to confirm they are securely tightened.
- **Doors Not Aligning:** Adjust the hinges on the doors. Most furniture hinges allow for minor adjustments to align doors horizontally, vertically, and in depth. Refer to the hinge manufacturer's instructions if specific adjustments are needed.
- **Missing or Damaged Parts:** If you find any parts missing or damaged upon unpacking, do not

proceed with assembly. Contact GAMI customer support immediately for assistance.

SPECIFICATIONS

Model Number	1E57016
Brand	GAMI
Dimensions (L x D x H)	136 cm x 40 cm x 44 cm
Item Weight	28 Kilograms
Material	Wood composite with black oak decor, metal legs
Features	2 Cable Management Holes, 3 Adjustable Shelves, 6 Compartments
Assembly Required	Yes

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided at the point of purchase or contact GAMI customer service directly. Ensure you have your model number (1E57016) and proof of purchase available when contacting support.